



TYPE S BT532755 Solar Powered Wireless Backup Camera User Manual

[Home](#) » [TYPE S](#) » TYPE S BT532755 Solar Powered Wireless Backup Camera User Manual 

TOURING ITEMS
TYPE S®

WIRELESS BACKUP CAMERA
Solar Powered 1080P App View with Smart Button
WP ITM. BT532755
Care Use Instruction



Important, retain for future reference: Read carefully

Contents

- [1 INTRODUCTION](#)
- [2 PACKAGE CONTENTS](#)
- [3 PRODUCT SPECIFICATIONS](#)
- [4 PRODUCT OVERVIEW](#)
- [5 CAMERA STATUS & LED INDICATORS](#)
- [6 BEFORE YOU INSTALL](#)
- [7 APP INSTALLATION](#)
- [8 PAIRING THE CAMERA](#)
- [9 PAIRING THE SMART BUTTON](#)
- [10 INSTALLATION GUIDE](#)
- [11 MOUNTING THE SMART BUTTON](#)
- [12 SETTINGS AND OPERATION](#)
- [13 SAFETY INFORMATION](#)
- [14 MAINTENANCE & WARRANTY](#)
- [15 GENERAL INFORMATION](#)
- [16 Documents / Resources](#)
- [17 Related Posts](#)

INTRODUCTION

Please read all of the installation instructions carefully before installing the product. Improper installation will void the manufacturer's warranty. The installation instructions do not apply to all types of vehicles and are written as guidelines to assist in installing the system.

 
Consult an experienced technician if you are not comfortable installing the product. You can also contact TYPE S at 866.294.9244 to speak to one of our installation specialists if you have any specific questions regarding the Wireless Backup CaMera.

BEFORE using the Wireless Backup Camera – Solar Powered 1080P App View with Smart Button, please read the safety information provided in this user manual. ALWAYS use the product as outlined in this user manual.

Please make sure to read and understand all local laws and regulations regarding cameras and their use in a vehicle. Laws vary by state.

PACKAGE CONTENTS

 
1. 1 x Solar Wireless Backup Camere
2. 1 x Smart Button
3. 1 x 33"MicroUSB Charging Cable
4. 2 x License Plate Machine Screw (Optional)
5. 2 x License Plate Self-Tapping Screw (Optional)
6. 2 x Two Way Mounting Tab (Optional)
7. 2 x Mounting Screw & Nut (Optional)
8. 1 x Instruction Manual
9. 1 x Warranty Card

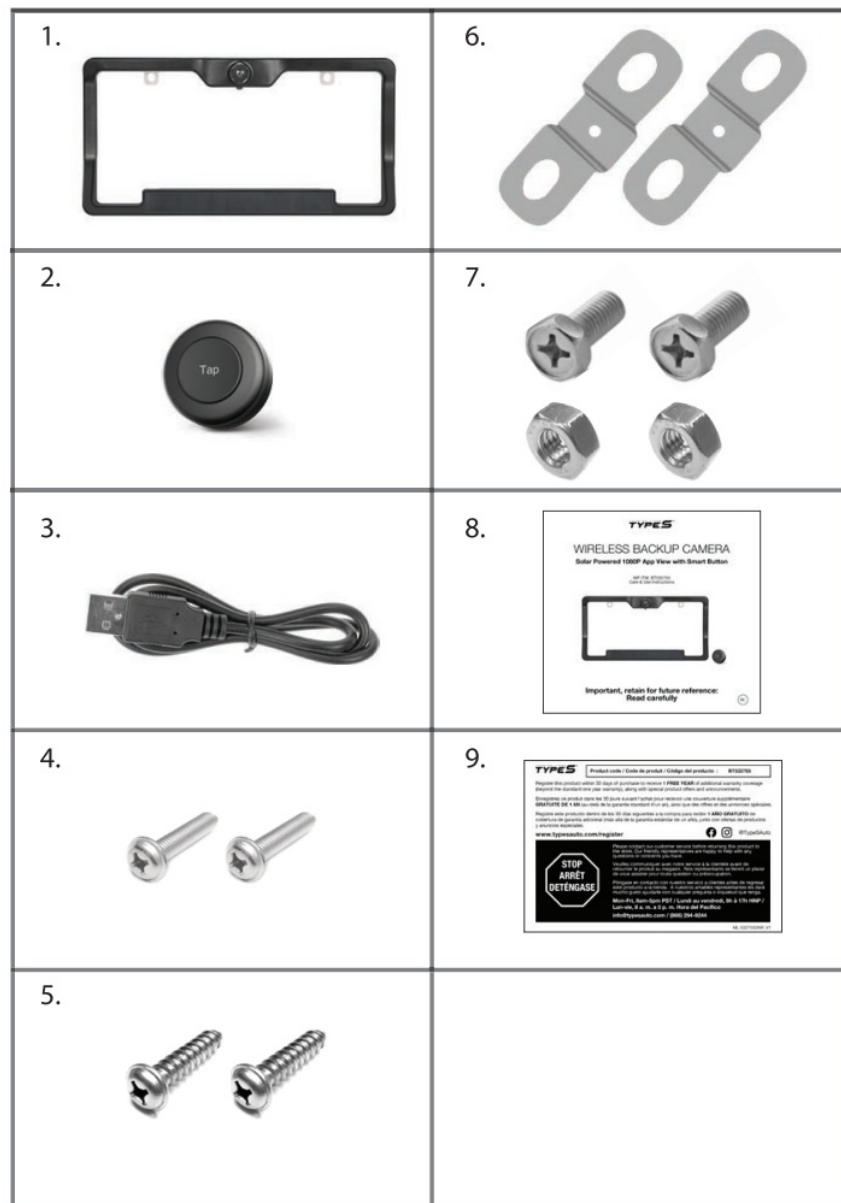

PRODUCT SPECIFICATIONS

Frequency:	2.4 GHz
Operating Voltage:	DC 5V
Operating Temperature:	149F ~122F (-10C-50C)
Water Resistance:	IP65 Rating (Camera Only)
Wireless Range (Camera):	33 Feet/ 10 Meters (without interference or obstruction)
Wireless Range (Button):	33 Feet/ 10 Meters (without interference or obstruction)
Battery Capacity (Camera):	33 Feet/ 10 Meters(Minimum Capacity 3200mAh)
Battery Capacity (Button):	Operates with 1 pc CR2032 coin cell

PRODUCT OVERVIEW

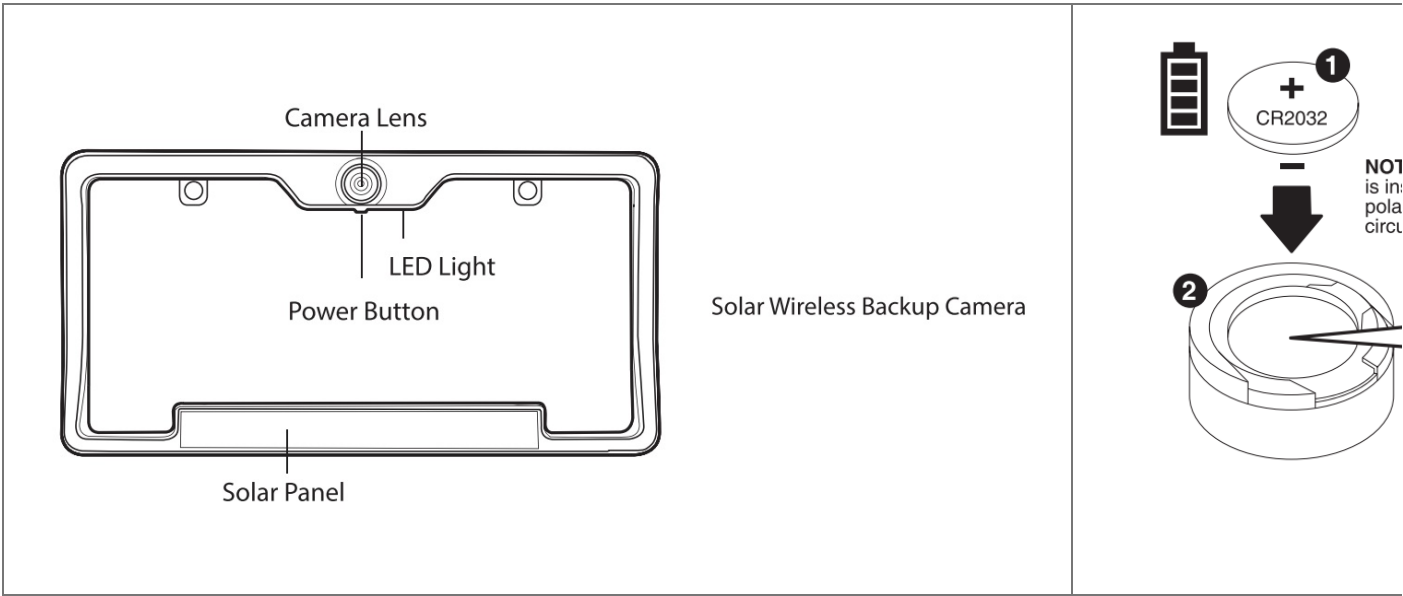

 
CAMERA STATUS & LED INDICATORS

Power/ Mode Status	LED Indicators
Power On Press and hold the power button until you see the blue LED light flashes and then release.	The Blue LED light flashes twice.
Power Off Press and hold the power button for more than 2 seconds and then release.	The Red LED light flashes once.
Reset password While the Backup Camera is on, press and hold the power button for more than 5 seconds and then release	Blue LED light flashes 5 times.
Low Voltage Protection	Red LED flashes continuously.

BEFORE YOU INSTALL

Please charge, pair, and test the Wireless Backup Camera with the TYPES Drive App before you install it on your vehicle.

NOTE: The camera should come with at least a 90% battery charge. We recommend charging for 5-6 hours prior to use to ensure maximum performance.

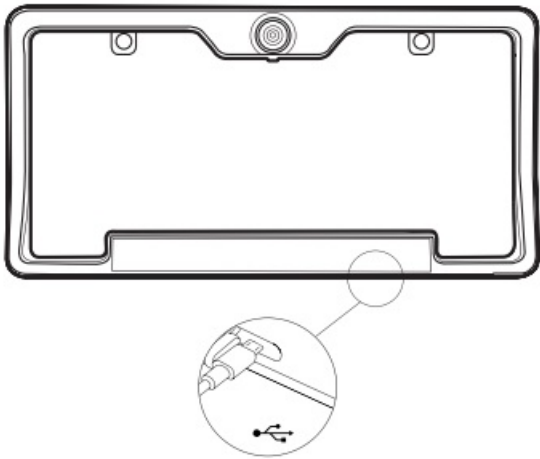



CHARGING THE WIRELESS BACKUP CAMERA

Open the camera power port plug cover and insert the charging cable. Most AC USB wall adapters will work with the USB charging cable.

APP INSTALLATION

Install the TYPES DRIVE APP on your smartphone. Scan the below QR code or search for the TYPES DRIVE APP in the Apple APP Store or the Google Play Store.

 


	
	
https://itunes.apple.com/hk/app/type-s-backup-camera/id1363886509?mt=8	h ic
Compatible with iPhone 4s & higher, iPad3, iPad Mini, iPad Air & higher, and iPod touch 5th Generation & higher . Requires iOS 9.0 or higher.	

Once installed, open the APP and begin enjoying your TYPES DRIVE APP

PAIRING THE CAMERA

1

 
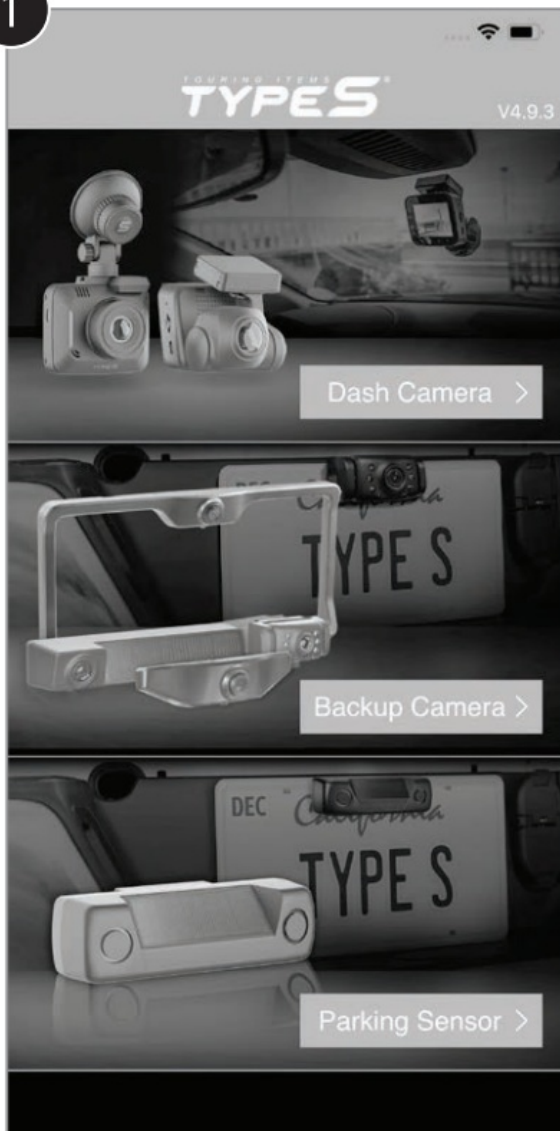 


2



 
 
1. Open the TYPE S DRIVE APP and select the Backup Camera category.
NOTE: Please turn on the Bluetooth of your smart device before pairing.

2. Select License Plate Backup Camera from the list of backup camera to the live view screen. An image from the camera will not be displayed until the pairing is complete (Step #8).

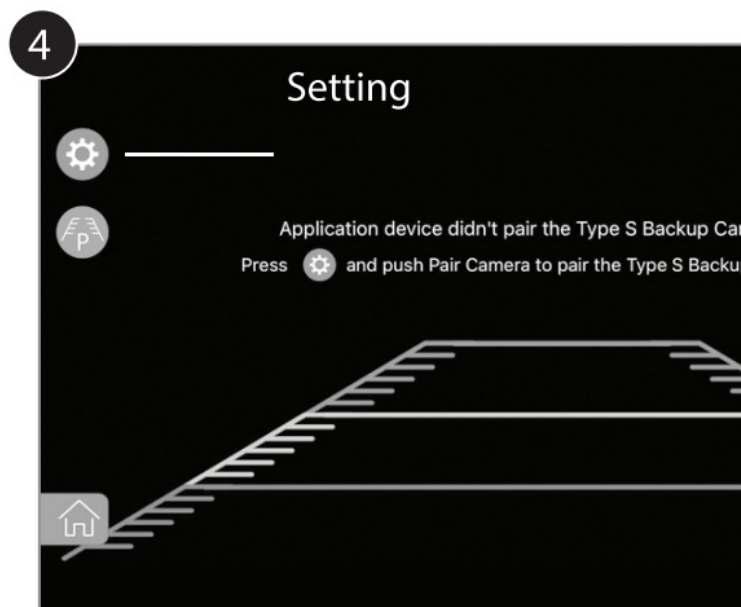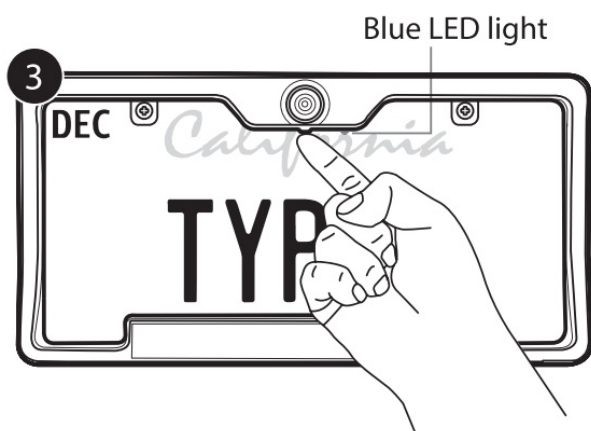

 
 

3. Press and hold the Power Button on the Wireless Backup Camera until the blue LED light flashes 2 times.

4. On the Wireless Backup Camera live view screen tap the S

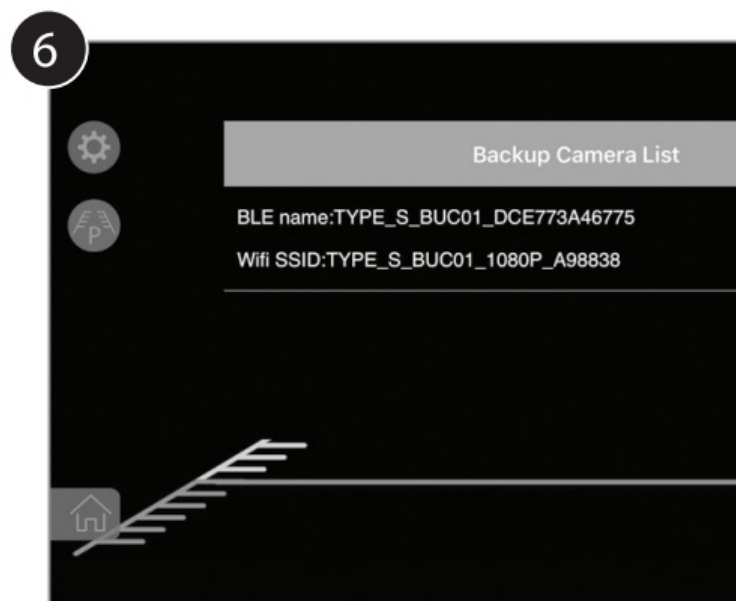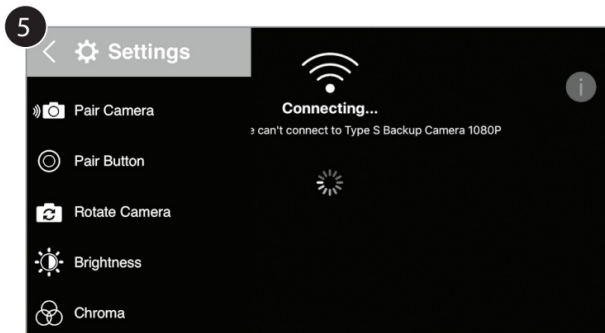

5. Tap Pair Camera.

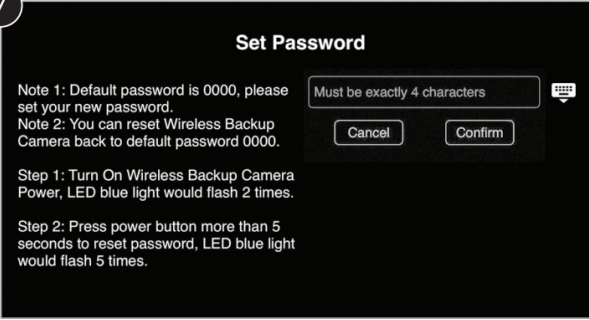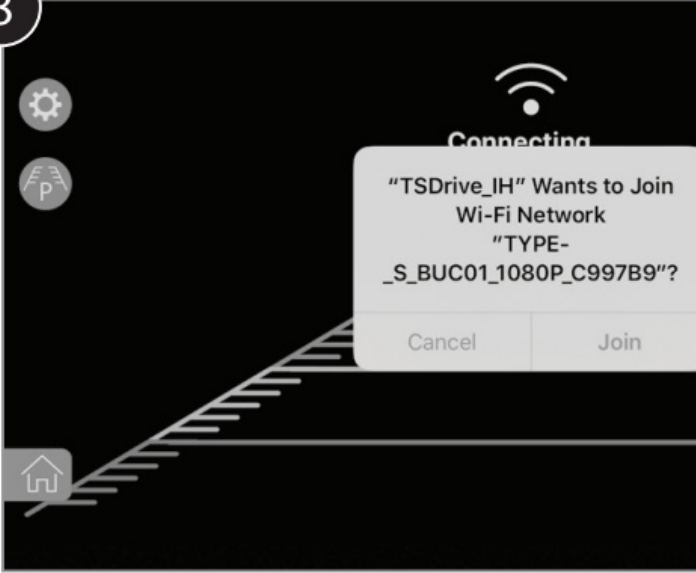

 
6. Tap the Connect icon to pair with the camera.

<p>7</p>  <p>Set Password</p> <p>Note 1: Default password is 0000, please set your new password.</p> <p>Note 2: You can reset Wireless Backup Camera back to default password 0000.</p> <p>Step 1: Turn On Wireless Backup Camera Power, LED blue light would flash 2 times.</p> <p>Step 2: Press power button more than 5 seconds to reset password, LED blue light would flash 5 times.</p> <p>Must be exactly 4 characters</p> <p>Cancel Confirm</p>	<p>8</p>  <p>Connecting</p> <p>"TSDrive_IH" Wants to Join Wi-Fi Network "TYPE-_S_BUC01_1080P_C997B9"?</p> <p>Cancel Join</p>
<p>7. Follow the on-screen instructions, by assigning a new password for the camera and selecting confirm .</p>	<p>8. Tap Join when the APP prompts you to join the Backup Car</p>
<p>9</p> 	<p>9. You should see the live view.</p> <p>NOTE: Regardless if you close or minimize the APP, the APP o live view once the APP is reopened.</p>

PAIRING THE SMART BUTTON

	
<p>1. Tap the Pair Button in the App Settings.</p>	<p>2. The App will open a new window Smart Button to pair.</p>
	
<p>3. Press and hold the Smart Button for more than 5 seconds in the pairing mode.</p>	<p>4. SelectTYPE_S_BTN01 XXXXXX</p>
	
<p>5. Push the Smart Button to wake up the TYPES DRIVE APP.</p> <ul style="list-style-type: none"> • A pop-up notification will appear for Android & iOS Phones • Press the Notification to open the TYPE S DRIVE APP and activate the License Plate Backup Camera Live View. 	

INSTALLATION GUIDE

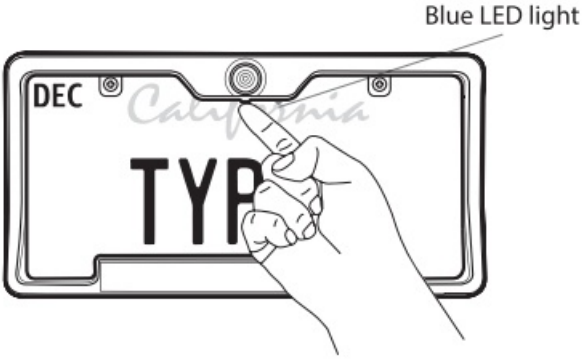 
	
<p>1. Unscrew your license plate.</p>	<p>2. Secure the Quick-Connect Wireless Backup Cam and license plate with screwdriver.</p>
	
<p>3. Push and hold the power button of the Quick-Connect Wireless Backup Cam for 1 second, the blue LED light will</p>	

*Please follow your local laws and regulations regarding constant monitoring while driving. It is recommended that you glance at the image only when in reverse, and use as an aid. Do not rely solely on the camera view to back up.

 
B) LOWERING INSTALLATION – FOR VEHICLES WITH TRUNK OR HATCH DOOR RELEASE

(This allows more clearance for fingertips to release the door latch)

 
1. Unscrew and remove your license plate.

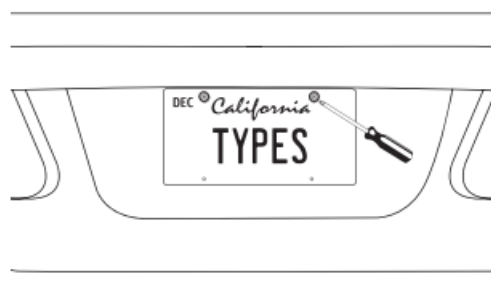

2. an Unscrew and detach the original installed Mounting Tabs from the back of the Quick-Connect Wireless Backup Cam.

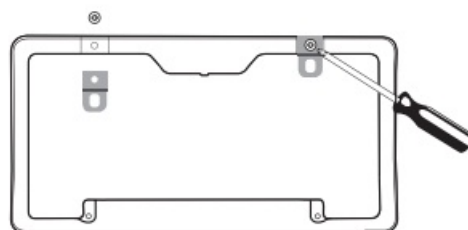

 
- 2b. Install the Two-Way Mounting Tabs onto the Quick-Connect Wireless Backup Cam.

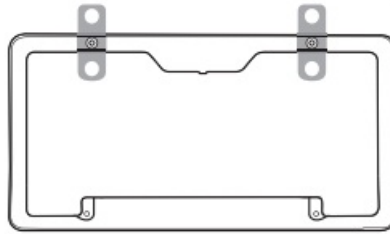


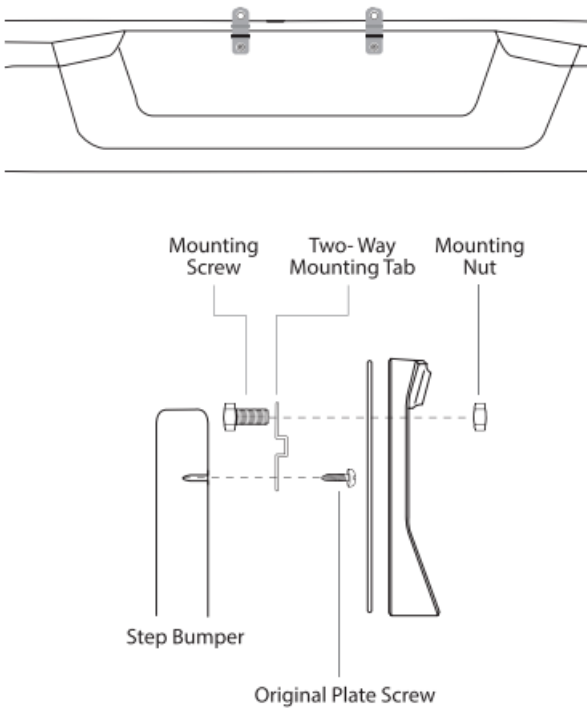 

3. Install the license plate onto the Quick-Connect Wireless Backup Cam with the Mounting Screws & Nuts.



4. Secure the Quick-Connect Wireless Backup Cam with the license plate back onto the rear of your vehicle.

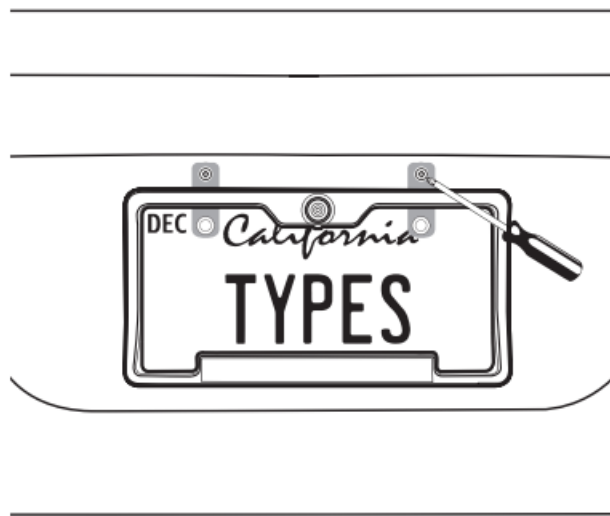 


C) RAISED INSTALLATION – FOR TRUCKS & SUVs WITH STEP BUMPERS (This will raise the camera frame out of the cavity of the step bumper)

 
	
<p>1. Unscrew and remove your license plate.</p>	<p>2. Install the Two-Way Mounting Tabs using original Plates Screw.</p>
 <p>3. Finally, install the Quick-Connect Wireless Backup Cam and license plate onto the rear of your vehicle and tighten Mounting Nuts with a wrench.</p>	

Warning: Slowly lower the tailgate on the pickup truck to check for a minimum of 1/4 inch clearance between the tailgate and the top of the camera frame. Some rear bumpers are installed higher than others which may result in the camera frame hitting the tailgate.

 
MOUNTING THE SMART BUTTON

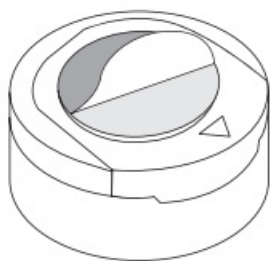

Peel off the backing of the tape from the Smart Button and adhere to any flat surface that is within easy reach.

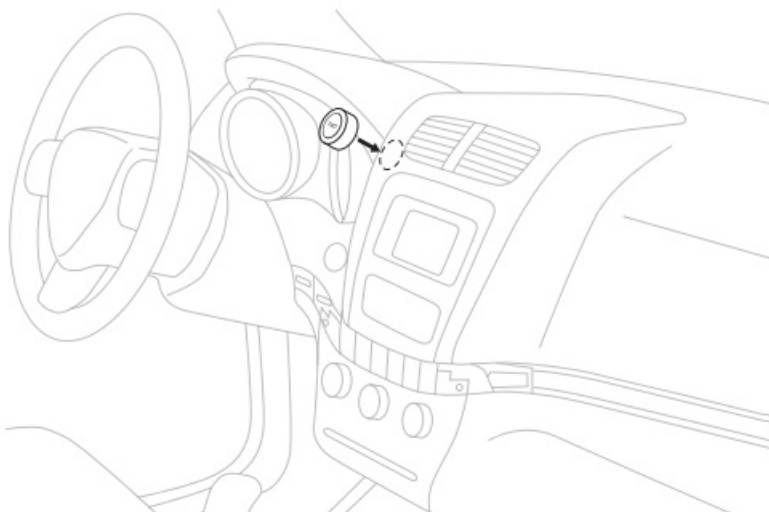
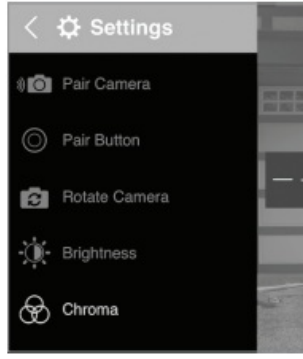 
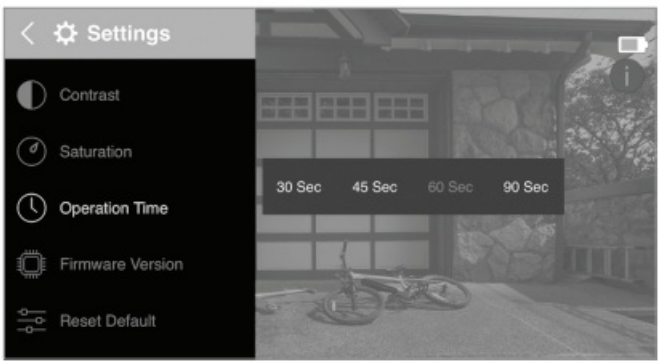 
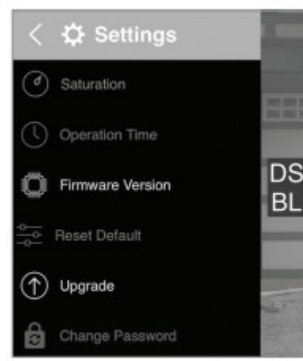 


 
 
 
 
CHARGING THE SOLAR-POWERED WIRELESS BACKUP CAMERA

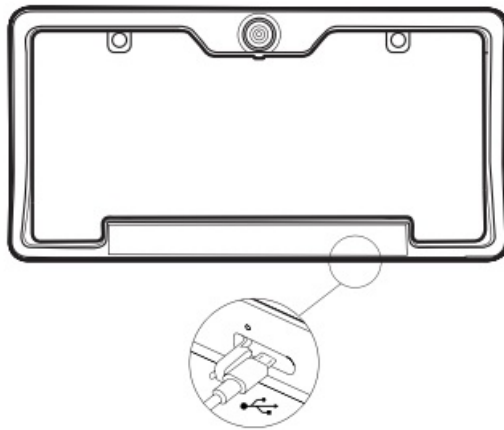

Open the camera power port plug cover and insert the charging cable. Most wall AC adapters will work with the USB charging cable .

SETTINGS AND OPERATION

	
<p>ROTATE CAMERA Tap on the setting to reverse the camera view.</p> <p>BRIGHTNESS Swipe to adjust screen brightness.</p> <p>CHROMA Swipe to adjust screen chroma.</p>	<p>CONTRAST Swipe to adjust screen contrast.</p> <p>SATURATION Swipe to adjust screen saturation.</p>
	
<p>OPERATION TIME Scroll down to choose a different operation time. The Wireless Backup Camera's parking view operation time will start to count down when you wake up the Wireless Backup Camera. When the timer runs out, the parking view will automatically switch to stand-by mode.</p>	<p>FIRMWARE VERSION Tap to view the camera's firmware version. Tap to update the camera's firmware to the latest version.</p> <p>NOTE: – Keep your smart device in order to download the firmware. The camera must be paired and connected to the smart device to upgrade.</p>

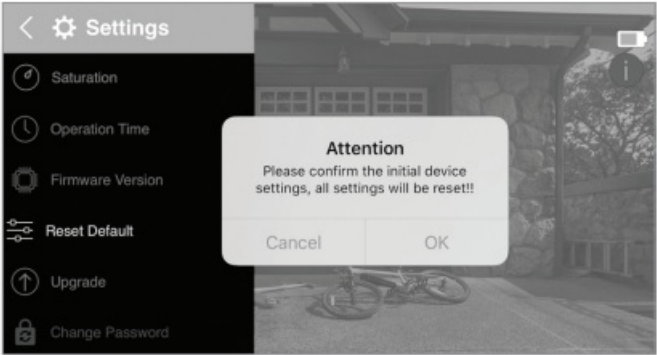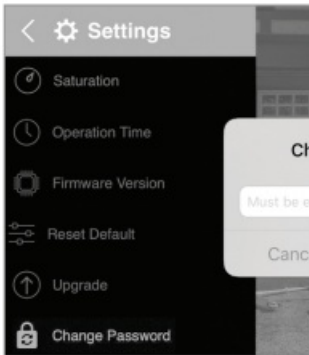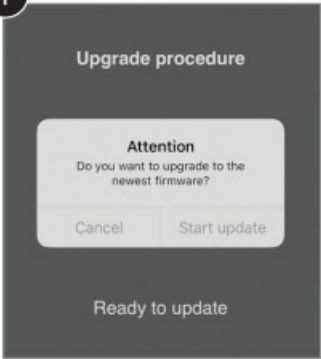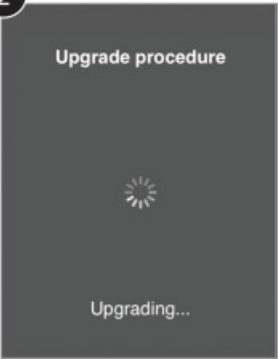	
<p>1. Tap Start update to begin. 2. After the upgrade is done, the APP will switch back to the live view.</p> <div style="display: flex; justify-content: space-around;"> <div data-bbox="323 566 663 952"> <p>1</p>  </div> <div data-bbox="663 566 962 952"> <p>2</p>  </div> </div>	<p>RESET DEFAULT Tap to CHANGE PASSWORD Tap to era's pairing password.</p>

SAFETY INFORMATION

IMPORTANT SAFETY INSTRUCTIONS

1. **SAVE THESE INSTRUCTIONS**- This manual contains important safety and operating instructions for Model BT532755.
2. Before using the product, read all instructions and cautionary markings.
3. Use of an attachment not recommended or sold by the product manufacturer may result in a risk of fire, electric shock, or injury to persons.
4. Do not disassemble the Wireless Backup Camera; take it to a qualified serviceperson when service or repair is required. Incorrect reassembly may result in a risk of electric shock or fire.

WARNING: A failure to read and follow these warnings and instructions may result in a serious accident, including damaged property or a serious injury, including loss of life.

- The Wireless Backup Camera is designed as an aid to the driver in detecting large stationary objects to help avoid damaging the vehicle. However, you, the driver, must use it safely and properly. Use of the Wireless Backup Camera is not a substitute for safe, proper and legal driving.
- Never back up while looking only at the screen. You should always check behind and around the vehicle when backing up just as you would if the vehicle did not have the Wireless Backup Camera. Always make sure your intended path is clear. If you back up while looking only at the APP screen, you may hit a vehicle, pedestrian, bicyclist, child, pet, or other object resulting in injury or death. Always back up slowly.
- Never depend on the Wireless Backup Camera entirely when backing up. The image on the screen is different from the actual conditions. Objects viewed in the APP screen differ from the actual distance because a wide-

angle lens is used. Objects in the APP screen will appear visually opposite to when viewed in the rearview and outside mirrors. Use the inside mirror or glance over your shoulder to properly judge distances to other objects.

- The area displayed by the Wireless Backup Camera is limited. The Wireless Backup Camera does not display objects that are close to or below the bumper, underneath the vehicle or objects out of the Camera's field of view. The area displayed on the screen may vary according to vehicle orientation or road conditions. Be sure to check the Camera's position and mounting angle before each use.
- Make sure the trunk, hatch, or backdoor is completely and securely closed when backing up.
- If the back of the vehicle is hit, the position and mounting angle of the Wireless Backup Camera may change.
- When washing the vehicle with high-pressure water, be sure not to spray it around the Wireless Backup Camera. Otherwise, water may enter the Camera unit causing water condensation on the lens, a malfunction, fire or an electric shock.
- Do not strike the Wireless Backup Camera. It is a precision instrument. Otherwise, it may malfunction or cause damage resulting in a fire or an electric shock.
- This product will only provide images of items that are within the field of view of the Wireless Backup Camera. Thus, it is imperative that the Wireless Backup Camera should be kept clean and unobstructed, and should be mounted so that its field of view includes the entire area behind your vehicle.
- Adhere to all applicable traffic laws and motor vehicle regulations applicable to the device.
- Consult local laws and regulations for any restrictions on installation or use.
- Never allow children to play with the device. Small parts may be a choking hazard.
- There is a plastic cover over the Wireless Backup Camera. Do not scratch the cover when cleaning dirt or snow from the cover.
- The Wireless Backup Camera has a water-resistant construction. Do not detach, disassemble or modify it. This may cause incorrect operation. The wireless Backup Camera is waterproof.
- Do not submerge the Wireless Backup Camera in water, which can cause internal damage to the Camera.
- If the temperature changes rapidly, such as when hot water is poured on the vehicle in cold weather, the system may not operate normally. The Digital Camera can withstand the effects of rain, snow, and inclement weather.
- When strong light directly enters a camera, objects may not be displayed clearly.
- The screen may flicker under fluorescent light.
- The colors of objects on the APP screen may differ somewhat from those of the actual object.
- If dirt, rain, or snow attaches to the Camera, the APP screen may not clearly display objects. If water droplets, snow or mud adhere to the Camera lens, rinse with water and wipe with a dry cloth.
- Do not use alcohol, benzene, or thinner to clean the Camera. This will cause discoloration. To clean the Camera, wipe with a clean cloth dampened with mild cleaner diluted with water and then wipe with a dry cloth.
- Will work up to 33 feet.
- ALWAYS engage the Parking/Emergency/Hand Brakes of the vehicle when testing the system.

SAFETY AROUND AND BEHIND OTHER VEHICLES

Using a Wireless Backup Camera is not enough to completely overcome a vehicle's blind spot. Many preventable injuries and deaths occur in driveways or parking lots when drivers do not see children, pets, or others near their vehicles. Here are a few safety tips that will help you to avoid a back-over accident:

- Walk completely around your vehicle before getting in. Check for kids, toys, and pets before entering the vehicle and starting the engine.

- Know where children are. Have children stand in a place where they are in full view.
- Be aware of young children. Young children are small and hard to see.
- Parents, caregivers and all adults need to be vigilant in supervising children, especially when children are in the yard, driveway or parking lot playing near parked cars.
- Roll down your window so you will be able to hear what is happening outside your vehicle.
- Owners of SUVs, trucks, and vans need to take extra care to avoid hitting or running over a child.
- Teach children to move away from a vehicle whenever it is started.

MAINTENANCE & WARRANTY

CLEANING

- If dirt, rain or snow attaches to the Camera, the APP screen may not clearly display objects. If water droplets, snow or mud adhere to the Camera lens, rinse with water and wipe with a dry cloth.
- Do not use alcohol, benzene or thinner to clean the Camera. This will cause discoloration. To clean the Camera, wipe with a clean cloth dampened with mild cleaner diluted with water and then wipe with a dry cloth.

WARRANTY

TYPES

LIMITED WARRANTY TYPES

warrants, to the original purchaser, that its products are free from defects in material and workmanship for 1 year from the date of original purchase. Where permitted by law, TYPE S liability shall be limited to that set forth in this limited express warranty. This limited express warranty shall be the exclusive remedy of the purchaser and TYPES makes no other warranty of any kind aside from the limited express warranty stated above.

NOTE: Warranty only applies for North American customers of purchases made in North America.

CONDITIONS OF WARRANTY

If during the 1 year warranty period your new product is found to be defective, TYPES will repair such defect, or replace the product, without charge for parts or labor subject to the following conditions:

1. All repairs must be performed by TYPES.
2. All warranty claims must be accompanied by a copy of the sales receipt or bill of sale.
3. The equipment must not have been altered or damaged through negligence, accident, improper operation, or failure to follow the product instructions for installation, use, or care.
4. The replacement of parts is excluded from the warranty when replacement is necessary due to normal wear and tear.
5. Repair or replacement parts supplied by TYPES under this warranty are protected only for the unexpired portion of the original warranty.
6. This is a "repair or replace" warranty only, and does not cover the costs incurred for the installation, removal or reinstallation of the product, or damage to any mobile phone device or vehicle.

OWNER'S RESPONSIBILITIES:

TYPES will make every effort to provide warranty service within a reasonable period of time.

SHOULD YOU HAVE ANY QUESTIONS ABOUT THE SERVICE RECEIVED OR IF YOU WOULD LIKE ASSISTANCE IN OBTAINING SERVICE, PLEASE CALL TOLL-FREE AT 1.866.294.9244 DURING REGULAR BUSINESS HOURS MONDAY THROUGH FRIDAY 8:00 AM TO 5:00 PM.

NOTE: Toll-Free # is for North America Customers ONLY. See the Customer service section for customer contact numbers for other regions/offices.

For customer service and technical support, please call us at 1.866.294.9244. If at that time it is determined that a replacement unit is needed, the support representative will issue a Return Authorization and instructions on how to get a new unit. TYPES makes no other warranty of any kind aside from the limited express warranty stated herein

DISCLAIMER OF WARRANTIES, INCLUDING WARRANTY OF MERCHANTABILITY AND WARRANTY OF FITNESS FOR PARTICULAR PURPOSE: EXCEPT AS SPECIFICALLY SET FORTH HEREIN, NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, IS MADE AS TO THE WIRELESS BACKUP CAMERA. EXCEPT AS EXPRESSLY SET FORTH HEREIN, TYPES AND/OR ITS AFFILIATES EXPRESSLY DISCLAIM, WITHOUT LIMITATION, ANY STATUTORY WARRANTIES AND ALL IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

TYPES and/or its affiliates do not guarantee or promise that the user of the Wireless Backup Camera will not be in an accident or otherwise not collide with an object and/or person. Our Wireless Backup Camera is not intended in any way to be a substitute for careful and cautious driving or for the consistent adherence to all applicable traffic laws and motor vehicle safety regulations.

The Wireless Backup Camera is not intended to be a substitute for rearview mirrors or for any other motor vehicle equipment mandated by law. Even when properly installed, our Wireless Backup Camera has a limited field of vision and does not provide a comprehensive view of the rear area of the vehicle. You should always look around outside your vehicle and use your mirrors to confirm rearward clearance and that your vehicle can back up safely. TYPES and/or its affiliates are not responsible for a user's intended or actual use of the Wireless Backup Camera. In no event shall TYPES and/or its affiliates have any liability for any losses (whether direct or indirect, in contract, tort, or otherwise) incurred in connection with the Wireless Backup Camera, including but not limited to damaged property, personal injury and/or loss of life. Neither shall TYPE S and/or its affiliates have any liability for any decision, action or inaction taken by any person in reliance on the Wireless Backup Camera, or for any delays, inaccuracies, and /or errors in connection with the Wireless Backup Camera and its functioning.

TYPE S and/or its affiliates shall have no responsibility or liability for damage and/or injury resulting from accidents occurring with vehicles having the installed, and TYPES and/or its affiliates, the manufacturer, distributor, and seller shall not be liable for any injury, loss or damage, incidental or consequential, arising out of the use or intended use of the product.⁴

GENERAL INFORMATION

CUSTOMER SERVICE/CONTACT

IF YOU ARE EXPERIENCING ANY ISSUES WITH THE PRODUCT DURING OPERATION, DO NOT RETURN THE PRODUCT TO THE STORE. CONTACT TYPE S DIRECTLY FOR INSTRUCTIONS ON HOW TO RETURN/ EXCHANGE THE PRODUCT.

FCC Compliance Statement:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for Class B digital devices, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: – Reorient or relocate the receiving antenna. – Increase the separation between the equipment and the receiver.

– Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

– Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.

Wireless Backup Camera

Solar Powered 1080P App View with Smart Button

BT532755

Responsible Party:

TYPES
2975 Red Hill Ave., Ste. 100,
Costa Mesa, CA 92626
Tel: 866-294-9244



A Horizon Brands Company
2975 Red Hill Ave., Ste. 100, Costa Mesa, CA 92626, U.S.A.
1.866.294.9244]
info@typesauto.com
02021 TYPE S. All rights reserved.
www.typesauto.com

Documents / Resources

The thumbnail shows the front cover of the user manual. It features the TYPES logo at the top, followed by the product name "WIRELESS BACKUP CAMERA" and "Solar Powered 1080P App View with Smart Button". Below this is a small image of the camera unit. At the bottom, there is a note: "Important, refer to the future reference: Please carefully".	<p>TYPE S BT532755 Solar Powered Wireless Backup Camera [pdf] User Manual BT532755, Solar Powered Wireless Backup Camera, Wireless Backup Camera, Backup Camera, BT532755, Camera</p>
--	---