




typecase S7 Plus 2020 Keyboard Case Galaxy User Manual

[Home](#) » [typecase](#) » typecase S7 Plus 2020 Keyboard Case Galaxy User Manual 

Contents

- 1 typecase S7 Plus 2020 Keyboard Case Galaxy
- 2 OVERVIEW
- 3 CONNECT TO YOUR DEVICE
- 4 FUNCTION KEYS
 - 4.1 Shortcut Keys
- 5 TOUCHPAD FUNCTION
- 6 CHARGING
- 7 TROUBLESHOOTING
- 8 TECHNICAL SPECS
- 9 COMPLIANCE
- 10 CONTACT US
- 11 Documents / Resources
 - 11.1 References
- 12 Related Posts



typecase S7 Plus 2020 Keyboard Case Galaxy




OVERVIEW

The keyboard is set in Android mode as default.



Type-C charging cable

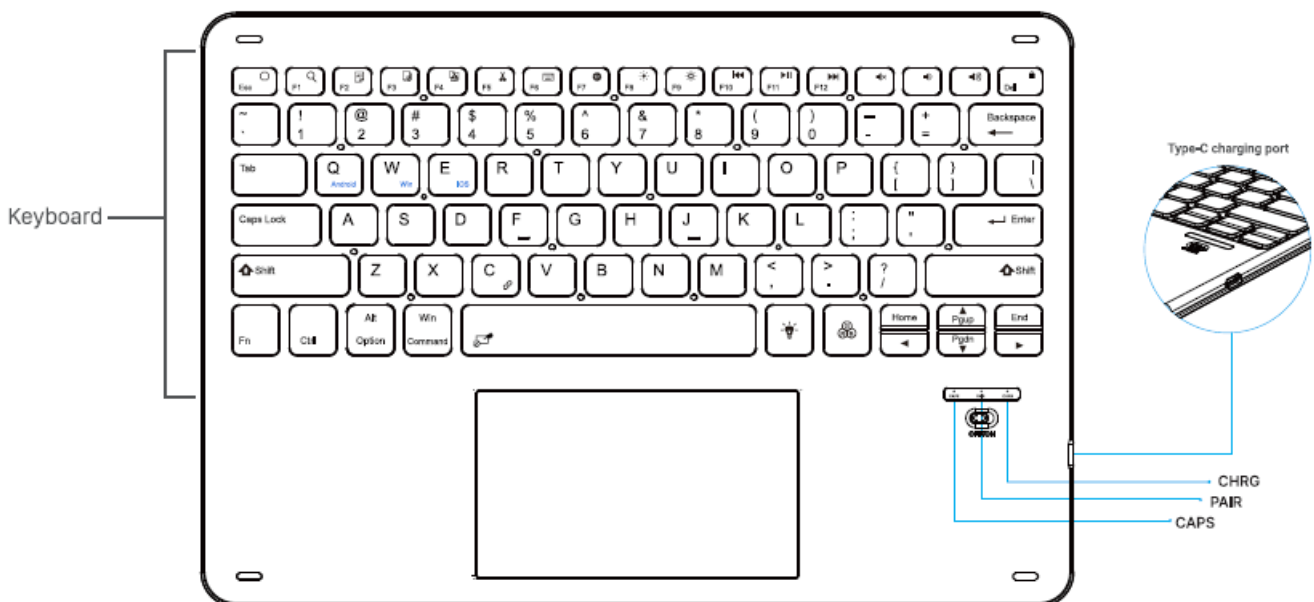


(Package contents: Keyboard case, Type-C charging cable, user manual)

CONNECT TO YOUR DEVICE

First-time pairing:

1. Turn on the keyboard's Bluetooth.

1. Press the  +  keys to turn on the Bluetooth.

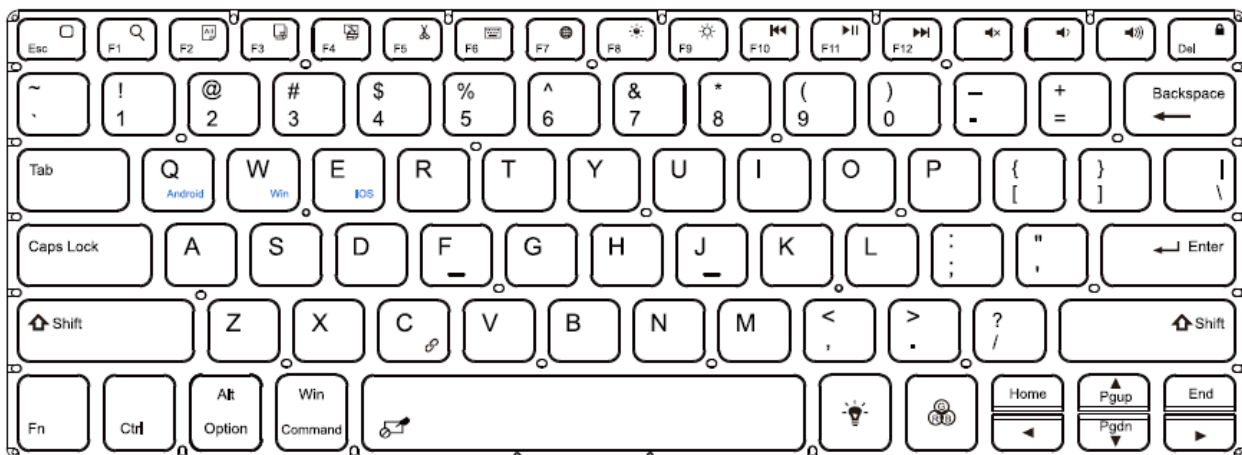


2. The keyboard will identify the Bluetooth signal automatically for your 1st device.

3. For your 2nd device, press the  +  button to turn the keyboard's Bluetooth on (the Bluetooth light will blink blue)


CONNECT TO ANDROID DEVICE

2. Turn On the Tablet's Bluetooth and connect.


1. On Tablet, go to Setting;  >  Connections

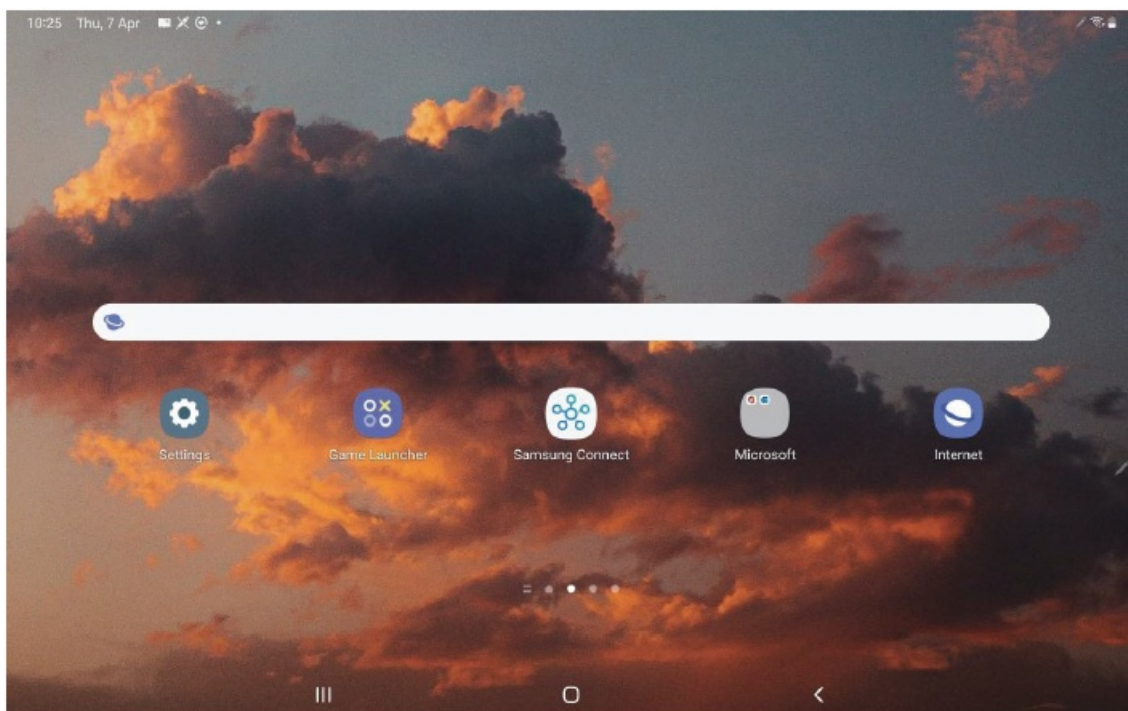

2. Turn on Bluetooth and search for "Keyboard 5.0" in Available devices;

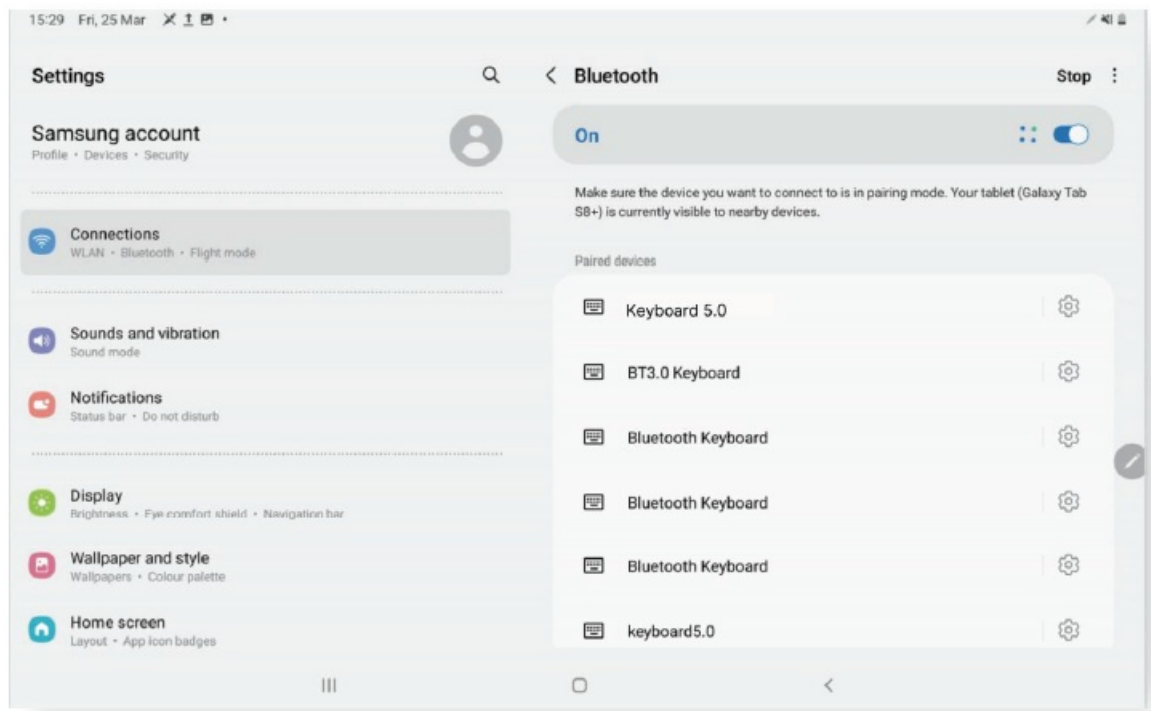


3. Tap “Keyboard s.o” on your device, then tap “Pair” – the pairing process is considered complete after the “Connected” indicator appears (see picture below).

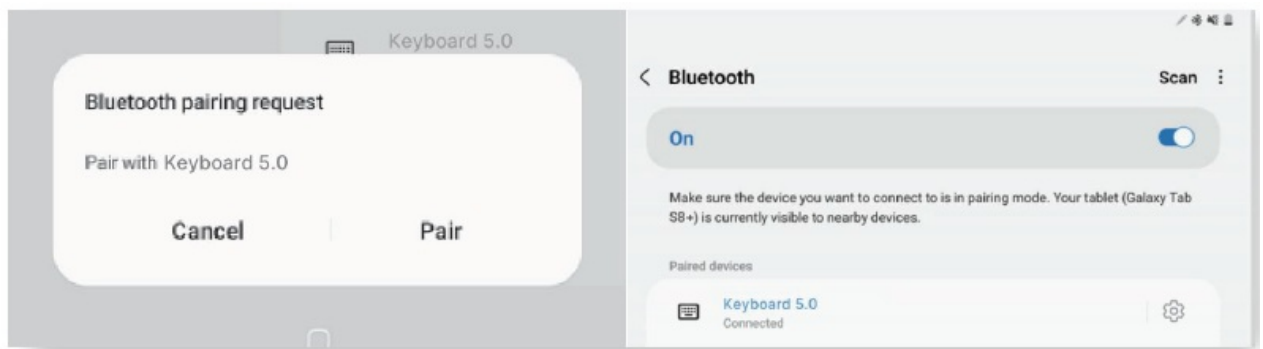


Future pairings:

After a successful first-time pairing, your tablet will automatically remember the keyboard. To connect again, please turn on Bluetooth on both the tablet and keyboard. The device should automatically connect. If it does not, please tap it in the Available Devices list to establish a connection.

FUNCTION KEYS

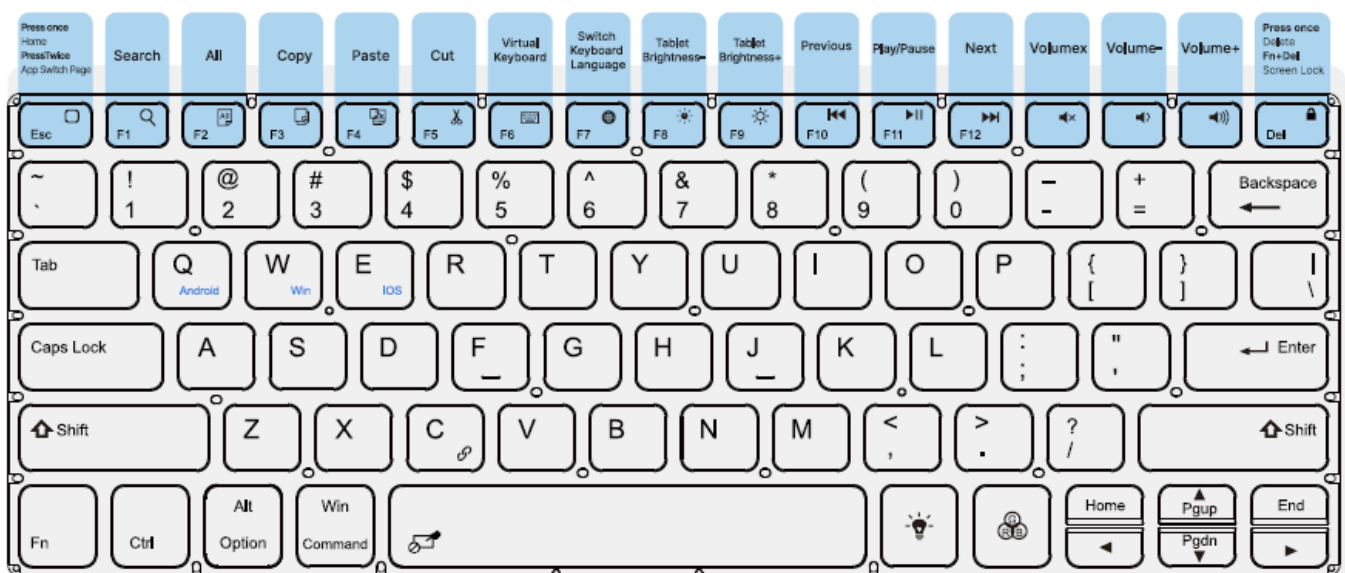

Shortcut Keys

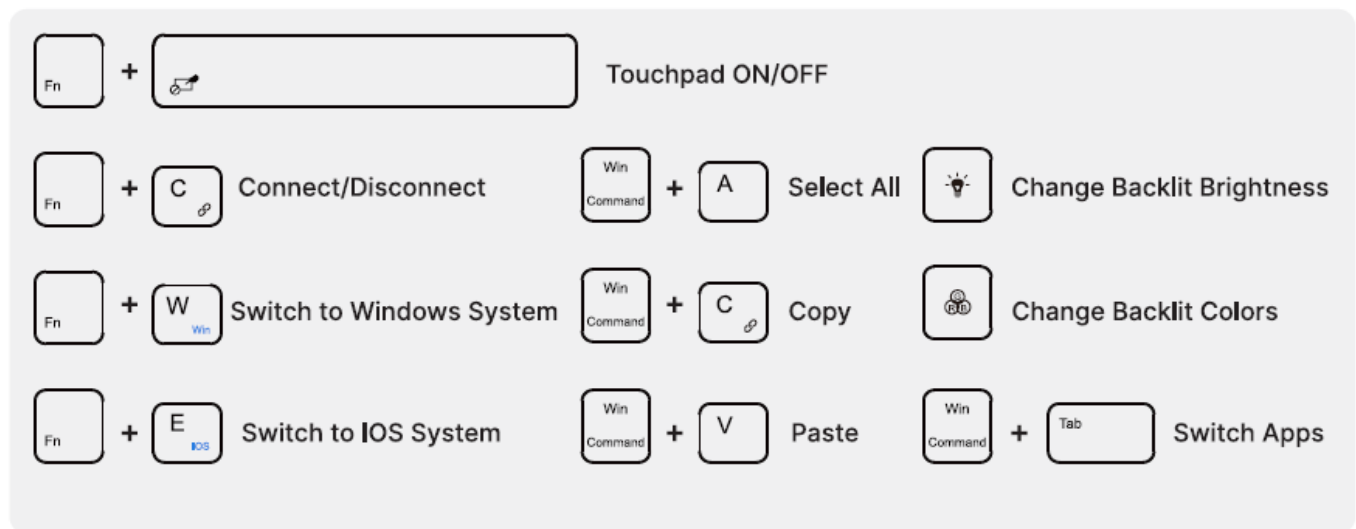

TOUCHPAD FUNCTION

Notice:

Make sure Bluetooth is connected and the touchpad function is turned on!

One-Finger Tap Mode

1. **Action 1:** Tap one time while on the main interface;

Function: Mouse cursor manipulation.

2. **Action 2:** Action 2: Hold and slide;

Function: Move the Icon.



Two Fingers Tap Mode

3. **Action 3:** Tap the pad one time; Function: Show the context menu




Two Fingers Scroll

4. **Action 4:** Slide fingers up or down;

Function: Scroll web page or file up/down or write in writing mode

5. **Action 5:** Slide fingers left or right


Function: Turn the page to the left or right

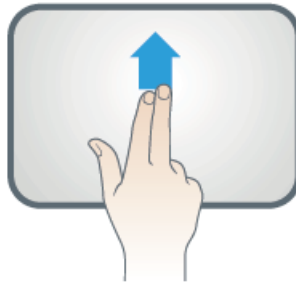

Two Fingers Zoom

6. **Action 6:** Two fingers slide for zooming in or out.

Function: Can only be used on websites or spreadsheets.

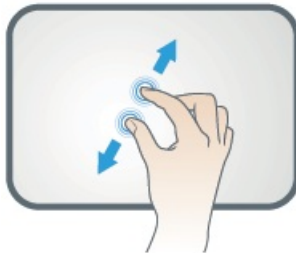

Three Fingers Tap Mode

7. **Action 7:** Tap the pad one time:


Function: Back



Three Fingers Swipe UP

8. **Action 8: Swipe Up**


Function: Switch to the previous program or page.

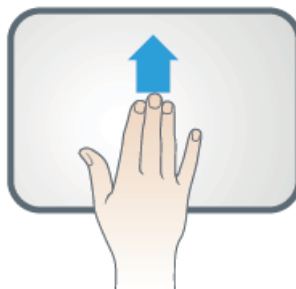

Three Fingers Swipe Down

9. **Action 9:** Swipe Down


Function: Switch to the Main interface

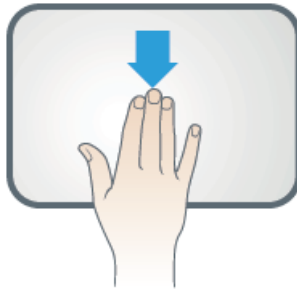

Three Fingers Swipe Down

10. **Action 10:** Three fingers slide left or right


Function: Select and switch to the program or page.

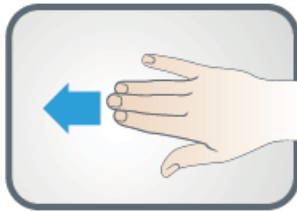

Four Fingers Tap Mode


11. **Action 11:** Tap the pad one time:

Function: Screenshot

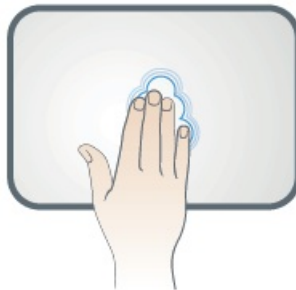

CHARGING

1. Move the switch to the “ON” position (see a diagram above for the ON/OFF switch location). If the charging indicator is flashing red, please charge the keyboard.
2. Plug the charging cable (included) into the keyboard and power adapter (not included, tablet or phone power adapter recommended);
 - The battery indicator turns red when the keyboard is charging;
 - The battery indicator turns blue when charging is complete.

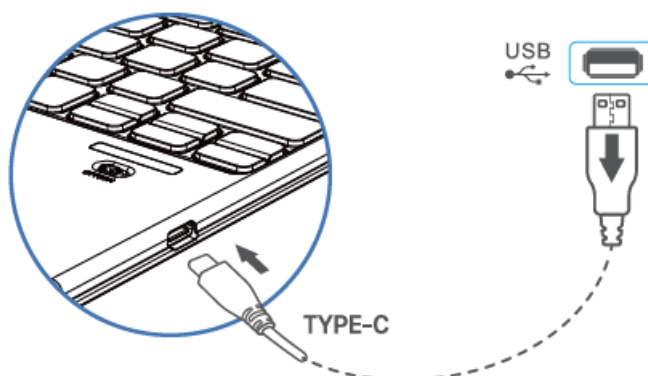


TROUBLESHOOTING

If the keyboard is not working correctly, please check the following:

1. The Bluetooth function on the tablet (or other Bluetooth devices) is enabled;
2. The Bluetooth keyboard is within 33 feet;
3. The Bluetooth keyboard is charged.

If you want to set the keyboard shortcuts, please try to change the Wireless keyboard's settings on your tablet:

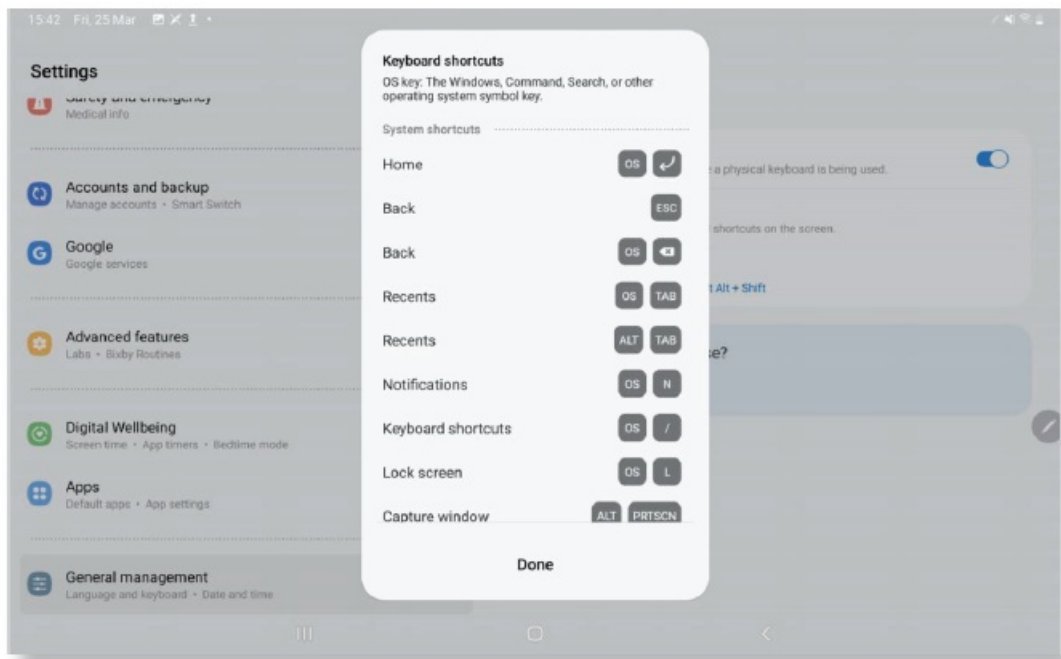

4. Connect your tablet to a Bluetooth Keyboard;
5. Go to tablet Settings app > General management> Physical keyboard > Keyboard shortcuts Set the shortcuts as you want, please refer to the picture below.



1. Make sure the keyboard is turned on (the battery indicator is illuminated);
2. Ensure the keyboard is fully charged;
3. Make sure the Bluetooth in your device (eg tablet, iPad, tablet PC) is turned on;
4. Press the key"FN"+"C" and check the Bluetooth status;
5. Make sure a keyboard has already been paired via Bluetooth.

If you fail to connect with Bluetooth, please try the following steps:

- Delete the Bluetooth device on your tablet;
- Switch off the Bluetooth function on your tablet;
- Reboot the tablet;
- Turn on the Bluetooth on your tablet;
- Switch the keyboard off and on;
- Repeat the steps described on pages 2 and 3 to pair the keyboard;

6. Press  : or  button to recall the backlight function.

TECHNICAL SPECS

- **Transmit Range:** up to 1 Om
- **Battery Life:** 100++ working hours

- **Standby mode:** up to 300 days
- **Operating Voltage:** 3.7V DC
- **Operation current:** < 5mA
- **Standby current:** 1.0mA
- **Sleep current:** < 0.1 mA

COMPLIANCE

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, according to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used per the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna;
- Increase the separation between the equipment and receiver;
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected;
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

CONTACT US

If you have any issues or questions, let us know ASAP! We would love to get you taken care of and happy right away! All units come with a full 12-month warranty, so you can relax and take comfort in your purchase. For the fastest & friendliest support, contact us (not Amazon) via one of the contact methods below. Our email support is open 24/7 /365.

1. **Email:** support@typecase.co.
2. **Phone:** 832-303-5080
3. **Chat:** <http://typecase.co/support>.

Documents / Resources

 The image shows the cover of a 'typecase FOLIO User Manual'. It features a black tablet with a keyboard attached, displaying a colorful abstract image. The text 'typecase FOLIO User Manual' is at the top, and 'Compatible with Galaxy® 12.4" Tablet' is below it. At the bottom, there are three icons: a person, a speech bubble, and a document, with the text 'For easy-to-use registration and product support' above them.	<p>typecase S7 Plus 2020 Keyboard Case Galaxy [pdf] User Manual</p> <p>S7 Plus 2020 Keyboard Case Galaxy, S7 Plus 2020, Keyboard Case Galaxy, Case Galaxy, Galaxy</p>
--	---

References

- [User Manual](#)