



TYREDOG TD-2700F Programming Sensors Instruction Manual

[Home](#) » [TYREDOG](#) » TYREDOG TD-2700F Programming Sensors Instruction Manual 

Contents

- [1 TYREDOG TD-2700F Programming Sensors](#)
- [2 Change monitor to Receive from Sensor](#)
- [3 Programming Sensors into Monitor](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)

TYREDOG


TYREDOG TD-2700F Programming Sensors




Before you start. Make sure the batteries are out of the sensors and the monitor has power. To program sensors directly to your Monitor (bypass relay), you'll need to program and set up the monitor to receive from Sensor instead of receive from Relay.

Change monitor to Receive from Sensor


- Press and hold the Mute (Left) button down for a few seconds until the Unit settings menu appears.

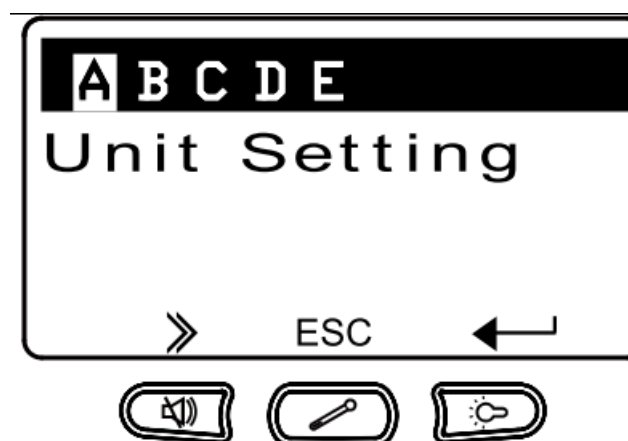


- Press the Mute (Left) button a couple of times to scroll across to menu C (Type of vehicle) then Press the Backlight (Right) button to enter this menu.

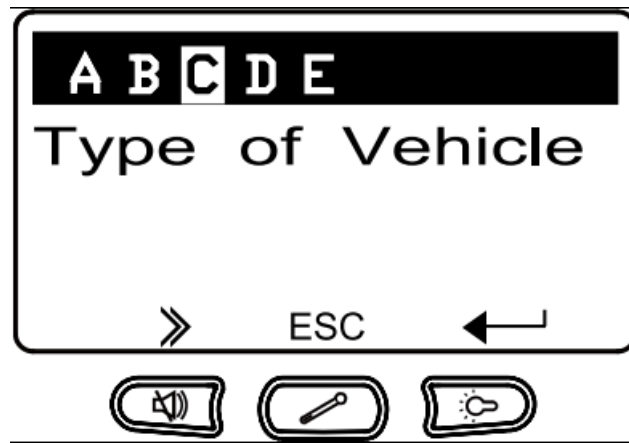


- TYPE of TRUCK HEAD and your current Layout No. will be displayed. Use the Mute (Left) or Temperature (Middle) button to scroll through the vehicle layouts to change if required and/or then press the Backlight (Right Button).

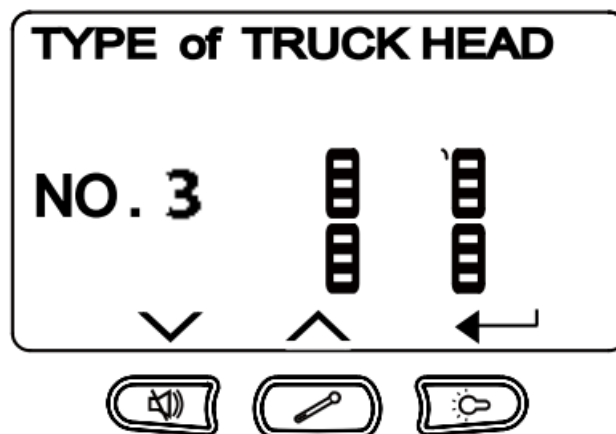

- Make sure the TYPE of TRAILER is set to NO.1 NONE by using the Mute (Left) or Temperature (Middle) button to scroll through the vehicle layouts then press the Backlight (Right Button).

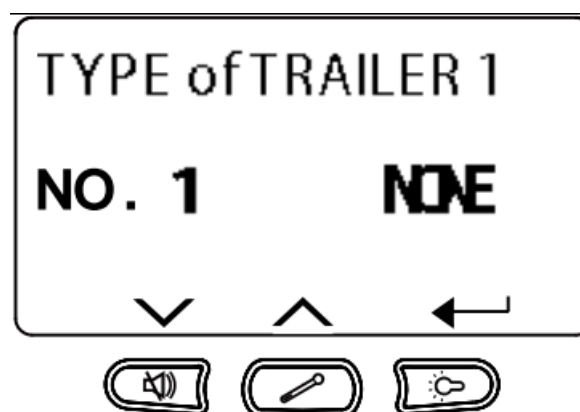


- Press the Mute (Left) button to highlight black Receive from Sensor then press the Backlight (Right Button) and this will take you back to the settings menu. **Note: When you need to change it back to Receive from relay, simply repeat steps above and make sure Receive from Relay is highlighted black.**

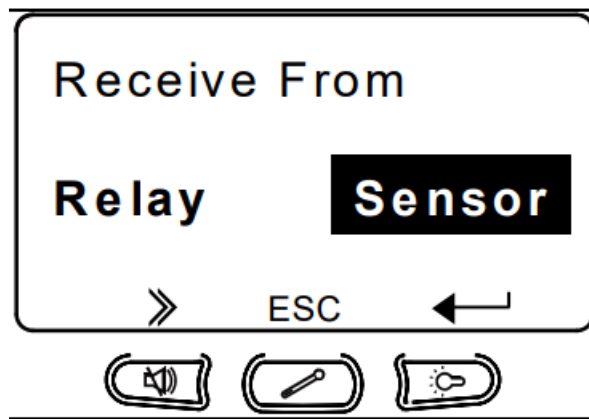


Now it's been configured to receive directly from the sensors you will now need to program the sensors into the monitor. Refer to next page. Before doing this, switch the monitor off and on using the switch on the right hand side of the monitor.

Programming Sensors into Monitor


- Press and hold the Mute (Left) button down for a few seconds until the Unit settings menu appears.

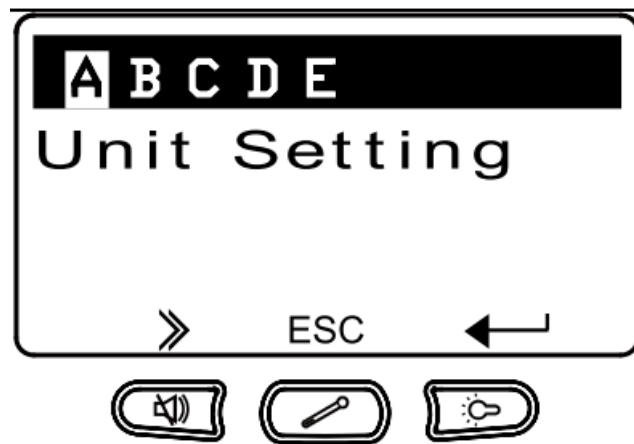


- Press the Mute (Left) button to scroll across to menu E (Add new Sensor)

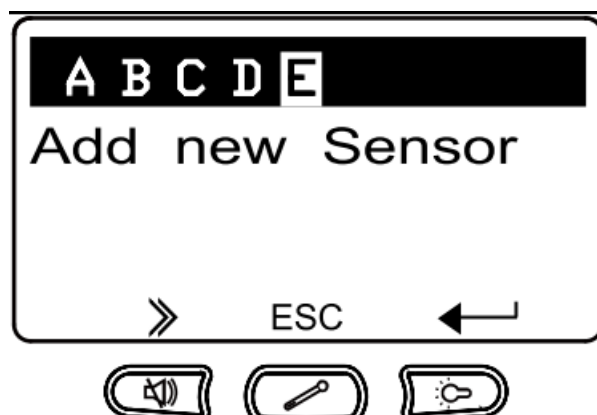


- Then it will display SET TIRE ID TRUCK HEAD and your selected Layout will be shown.

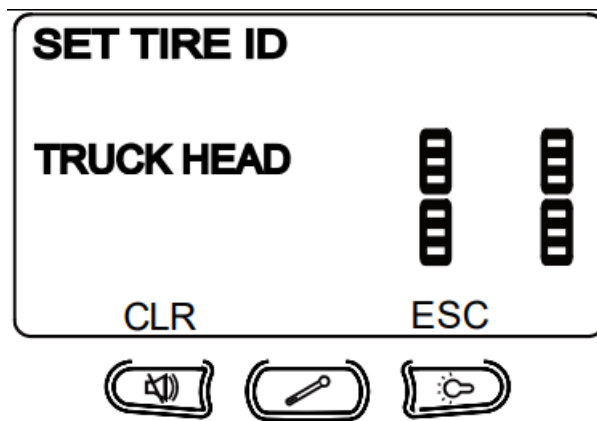

- Now insert a battery into all sensors.

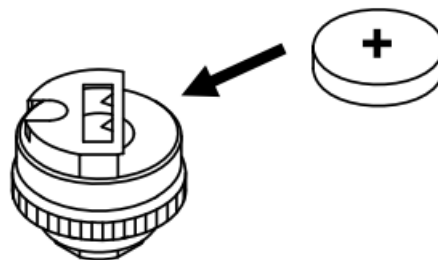

The Monitor will beep once the battery is inserted and the wheel location on the monitor will go solid black. Repeat this step for the rest of the new sensors until they are all programmed in and all-wheel icons are black. If the sensors do not program in keep removing and inserting the batteries until they do.

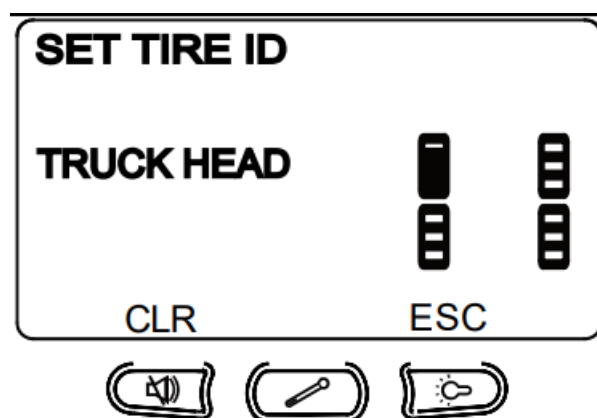

Now either switch the monitor OFF and ON using the switch on the side of the monitor. Or Press the Backlight (Right) button then the Temperature (Middle) button to exit the menu on the monitor. Test all sensors are working and programmed and set the Alarm Warning Thresholds if required.

Documents / Resources

	<p>TYREDOG TD-2700F Programming Sensors [pdf] Instruction Manual TD-2700F, Programming Sensors, TD-2700F Programming Sensors</p>
--	---