



tzumi 9520 WiFi Enabled Portable Screen Mirroring Projector User Guide

[Home](#) » [Tzumi](#) » tzumi 9520 WiFi Enabled Portable Screen Mirroring Projector User Guide 

life just got better.
tzumi®



Contents

- 1 9520 WiFi Enabled Portable Screen Mirroring Projector
- 2 INTRODUCTION
- 3 FEATURES
- 4 WHAT'S IN THE BOX?
- 5 SPECIFICATIONS
- 6 LET'S GET STARTED
- 7 GOTheater HOME SCREEN
- 8 USING HDM DEVICES
- 9 USING A PC (VGA) CONNECTION
- 10 USING AN AV/RCA CONNECTION
- 11 USING A USB/MICROSD CARD TO PLAY MEDIA
- 12 HOW TO CONNECT THE GOTHEATER TO WIFI
- 13 SETTING UP AN IOS/MAC SCREEN MIRROR
- 14 SETTING UP AN ANDROID SCREEN MIRROR
- 15 USING THE GOTHEATER BLUETOOTH FUNCTION
- 16 SETTINGS
- 17 HOW TO SET UP THE PROJECTION SCREEN
- 18 PROJECTION DISTANCE & SIZE
- 19 IMPORTANT SAFEGUARDS
- 20 CUSTOMER SUPPORT
- 21 FCC STATEMENT:
- 22 Documents / Resources
 - 22.1 References

9520 WiFi Enabled Portable Screen Mirroring Projector



INTRODUCTION

Enjoy your favorite media with clear visuals and portable convenience, whether it's video games, movies, or sports. The GOTheater is a compact, screen mirroring enabled LED projector that wirelessly connects to your mobile devices (smartphones, laptops, tablets, etc.) via WiFi, so you can enjoy a distinctive home theater experience wherever you want. Set the perfect scene in motion with the GOTheater!

PLEASE READ THIS USER GUIDE CAREFULLY BEFORE USING OR SETTING UP THE GOTHEATER, AND KEEP IT HANDY FOR FUTURE REFERENCE.

FEATURES

- Projection size up to 180".
- Mirrors your iPhone/Android smartphone screen via WiFi.
- Includes 120" screen for fun movie nights.
- Bluetooth compatibility & multiple input ports
- Built-in 3W speaker.

WHAT'S IN THE BOX?

- GOMeater LED Cinema Projector
- 120" Projection Screen
- Wireless Remote
- AC Cable
- RCA Cable
- User Guide

SPECIFICATIONS

- Display Native Resolution: 1280 x 720p
- Max Supported Resolution: 1920 x 1080p
- Input: AC 90-260V
- Projection Size: 24-180"
- Input Ports: HDMI/VGA/USB/MicroSD/AV

IMPORTANT NOTE: THE GOMeater's MIRRORING FUNCTION WILL NOT WORK WITH DRM-ENABLED PROGRAMS SUCH AS NETFLIX, AMAZON PRIME VIDEO, AND OTHER SECURED VIDEO CONTENT DISTRIBUTORS, SOME OF THE SETTINGS AND VISUALS ON THE PROJECTOR AND PHONES MAY LOOK DIFFERENT THAN ON THIS GUIDE DUE TO SYSTEM CHANGES AND UPDATES. THE GOMeater PROJECTOR IS DESIGNED FOR MULTIMEDIA AND ENTERTAINMENT PURPOSES, AND MAY NOT WORK WELL WITH TEXT FILES,

LET'S GET STARTED

- Place the GOMeater projector on a flat, stable surface, making sure there is at least 6 in. of free space on each side for ventilation purposes.
- Plug one end of the AC power cable into the side of the GOMeater, and the other end into an AC wall outlet. Once the projector is plugged in, its LED indicator light will glow red.
- Press the POWER Button on either the GOMeater or the remote to turn the projector on. The projector's LED indicator light will glow green. A loading image will display on the screen while the GOMeater warms up. It won't respond to any commands while it is warming up.
- To adjust the image/focus, turn the knob just above the lens while observing the on-screen pixels near the center of the screen. Optimal focus occurs when the on-screen pixels are clearly visible. Depending on how large your (projected) screen is, the focus near the edges of the screen may be less sharp than at the center of the screen.
- Projecting the GOMeater's beam at an angle can result in a distorted, trapezoidal image. Turn the Keystone

adjustment knob located behind the Focus knob to adjust the angle of the projection and restore the distorted screen to a rectangular or square shape.



1. 3,5mm Line-Out Port
2. AV/RCA Port
3. MicroSD Card Slot
4. HDMI Port
5. USB Port
6. VGA Port

 


1. Up/Last
2. Down/Next
3. Left/Rewind
4. Right/Fast Forward
5. OK
6. Power
7. Back
8. Source AV, HDMI, VGA, Media, Bluetooth)
9. Settings
10. Focus Knob

11. Keystone Knob


LET’S TAKE A LOOK AT THE REMOTE

*NOTE: Insert two AAA batteries into the battery compartment on the back of the remote before using.

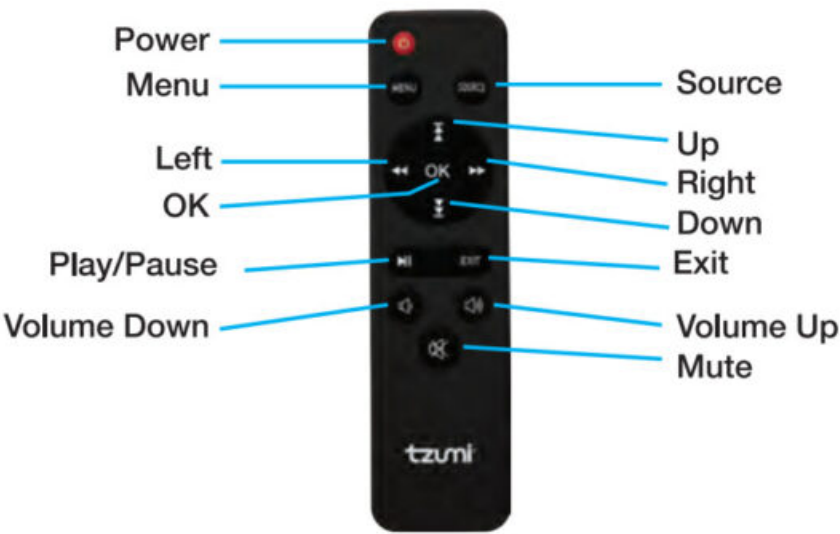

GOTheater HOME SCREEN

 When the GOTheater powers on, the main screen will display as shown below. You can use the arrow buttons on either the remote or the GOTheater itself to make the appropriate selection:

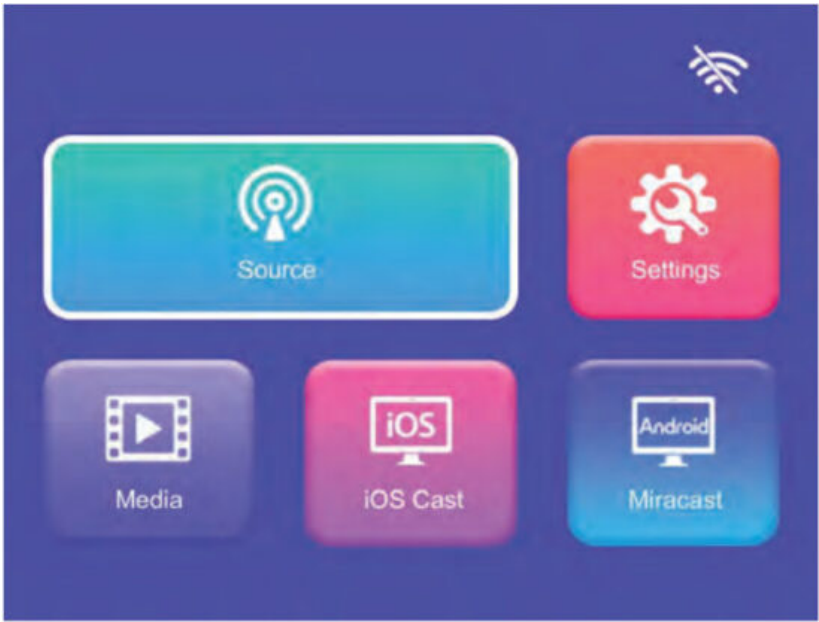

FUNCTION	DESCRIPTION
Media	Pictures, Videos, Music
Miracast	Screen Mirroring for Android
IOS Cast	Screen Mirroring for iPhones
Source	Home, HDMI, AV, PC
Settings	Projector Settings

 
USING HDM DEVICES

Use an HDMI cable to connect any compatible HDMI device to the projector.




USING A PC (VGA) CONNECTION

Plug one end of a VGA cable into a laptop or desktop PC, and the other end into the VGA port on the projector.

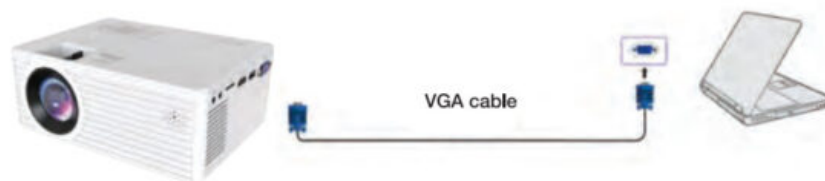


USING AN AV/RCA CONNECTION

 Follow the diagram below to connect the GOMeater to a device that has RCA (yellow/red/white) inputs. You should use the included AV/RCA cable when connecting the GOMeater to compatible AV devices.

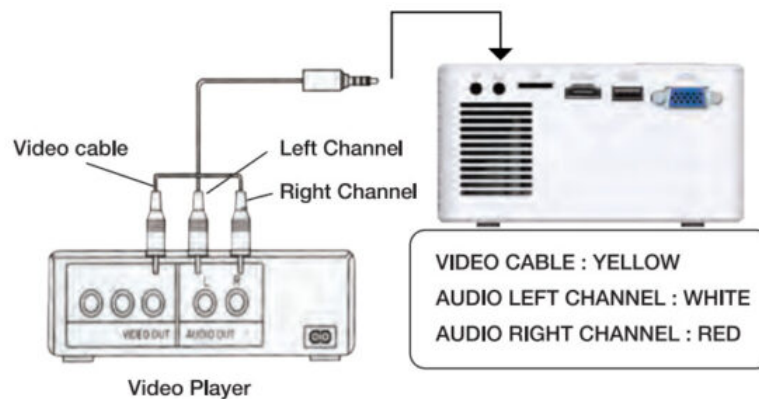

USING A USB/MICROSD CARD TO PLAY MEDIA

 
Insert a USB or MicroSD card with media into the USB socket or TF card slot located on the side of the GOMeater. When you select the Media icon, you'll see the GOMeater's screen as shown below. Choose the type of media you want to play.

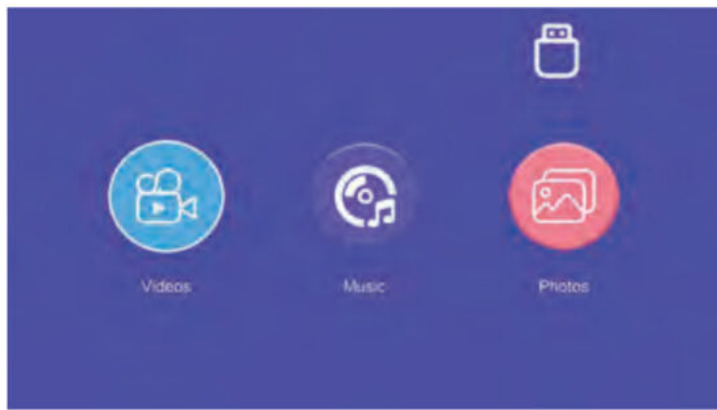


The USB media port supports the following formats:

TYPES	FORMATS
Videos	MPEG-2, MPEG-4, Div3/4/5/6, H. RM.RMVB, Sorenson Spark, FLV, MOV, MKV, MPG, WMV, AVI
Music	MP1, MP2, MP3, WMA, M4A, AAC, WAV
Photos	JPEG, BMP, PNG, JPE, TIF, GIF

HOW TO CONNECT THE GOTHEATER TO WIFI

 On the projector's main menu, click Settings, or press the MENU button on the remote. Click →  -> Network Information -> Scan. Choose the home network and Wi-Fi name you wish to connect to, then input the network's password from the on-screen/soft keyboard. Hit "Enter" on the keyboard to save the password. The GOTheater should then connect to the Wi-Fi network. Once connected, the name of the Wi-Fi network will be displayed on the top-right corner of the screen.

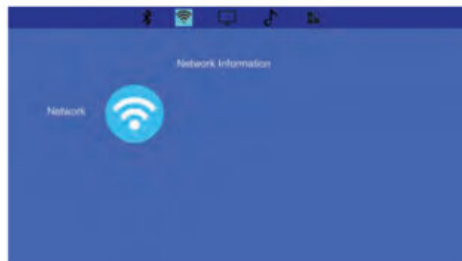

SETTING UP AN IOS/MAC SCREEN MIRROR

NOTE: Make sure the projector and your device are both connected to the same network. Click on the iOS Cast icon on the GOTheater's home page:

- Follow the instructions in the image below to mirror your iOS device's screen.



SETTING UP AN ANDROID SCREEN MIRROR

NOTE: Make sure the projector and your device are both connected to the same network. Click on the Android Miracast icon on the GOTheater's screen:



- Follow the instructions in the image to mirror your Android device's screen.
- **PLEASE NOTE:** Different brands of Android phones have different names for Miracast. These include Smart View, Multi-screen, etc. You can also download the app "Miracast Shortcut" from the Google Play Store, which is a quick launcher for the Miracast functionality.

USING THE GOTHEATER BLUETOOTH FUNCTION

- Go to the Settings page and Select Bluetooth.

Transmit Mode

Transmit mode allows you to use an external speaker to play the projector's audio.

- Make sure your speaker is Bluetooth compatible, and that its Bluetooth function is on and ready to pair.
- Click on Transmit Mode and turn Bluetooth ON, Click "Search" and select your device from the list.

The projector will pair to your device and will be ready to use.

Receive Mode

Receive Mode allows you use the projector as a Bluetooth speaker for any compatible device.

- Turn your Bluetooth speaker ON and ensure it is in Pairing Mode.
- Click on Receive Mode on the projector, Search and select “Tzumi Theatre” in your Bluetooth settings. Your Bluetooth speaker’s name will appear on the screen and will be ready to use.

 
CONNECT TO AN EXTERNAL SPEAKER

- To connect the projector to an external speaker via the Line-Out port, plug one end of a 3.5mm AUX cable into the Line-Out port on the projector, and the other end into your speaker.

SETTINGS

- Press the Menu button on the remote, or click on the Settings icon on the GOTheater’s Home page to bring up the Settings menu.
- The Settings menu will let you change your Wi-Fi, Bluetooth, Picture, Sound, and Projection options.


You can also adjust the aspect ratio and OSD language, check for a software upgrade, perform a factory reset, and more.

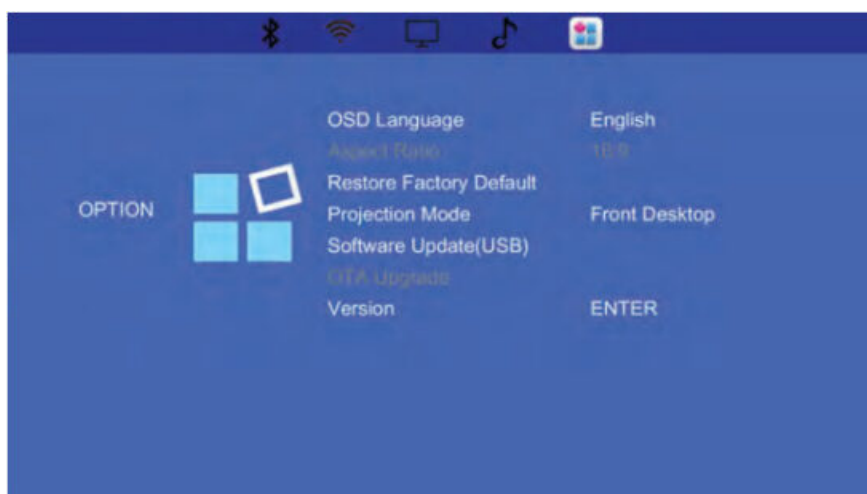

HOW TO SET UP THE PROJECTION SCREEN

- Make sure the wall is clean and free of dirt, dust, or other debris.
- Remove the projection screen from the plastic bag, and lay it flat up against your wall of choice. Mark the position of each grommet on the wall.
- Stick each of the included hooks onto a piece of adhesive tape.
- Stick the pieces of adhesive tape with the hooks onto the positions marked with grommets on the wall.
- Place the projection screen flat on the wall, and hang the grommets on the hooks.
- Use the included rope to hang the projection screen from a space with no walls.

 PROJECTION DISTANCE & SIZE

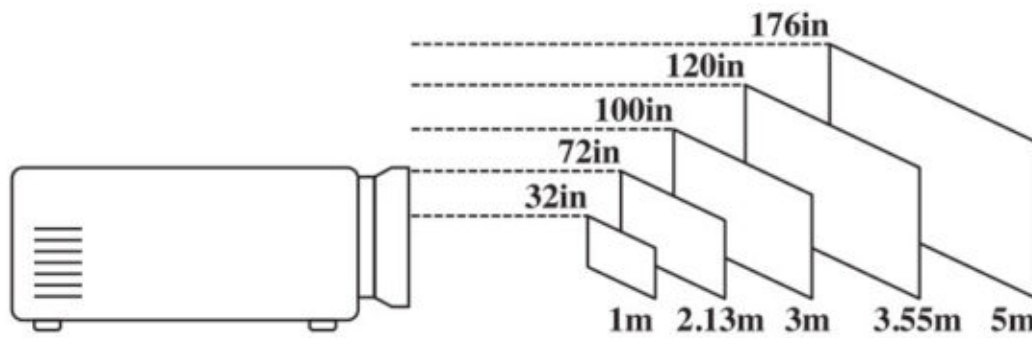

IMPORTANT SAFEGUARDS

1. Only use the projector for its intended use.
2. Do not look directly into the lens while the projector is on.
3. Do not cover the projector's ventilation holes.
4. This projector is not waterproof. Do not use or place it near water.
5. The projector should only be used and stored in a dry, clean place.
6. Unplug the projector from the outlet when it is not in use.
7. If the projector is malfunctioning or acting abnormally in any way, do not attempt to repair it yourself. Contact tzumi Technical Support for assistance.
8. Do not disassemble or modify the projector in any way to avoid the risk of electric shock.

CUSTOMER SUPPORT

If you have any questions about using your GOMeater, we are here to help.

Call or email us, and an experienced customer support representative will be happy to assist you: 1-855-GO-TZUMI or support@tzumi.com.

FCC STATEMENT:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
 - (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.


- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body. This transmitter must not be coocated or operating in conjunction with any other antenna or transmitter. GOfheater LED Home Cinema Projector. Distributed by tzumi Inc. NY, NY 10016. Copyright 2024 tzumi Inc. All Rights Reserved. Made in China. All other trademarks and trade names are the property of their respective owners. All pictures shown are for illustration purposes only. Actual product may vary due to product enhancement. Subject to change without prior notice.



Documents / Resources

	tzumi 9520 WiFi Enabled Portable Screen Mirroring Projector [pdf] User Guide 9520, 9520 WiFi Enabled Portable Screen Mirroring Projector, WiFi Enabled Portable Screen Mirroring Projector, Portable Screen Mirroring Projector, Screen Mirroring Projector, Mirroring Projector, Projector
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.