


UBeesize LH181 Reusable Air Filter Instruction Manual

[Home](#) » [UBeesize](#) » UBeesize LH181 Reusable Air Filter Instruction Manual 

UBeesize LH181 Reusable Air Filter

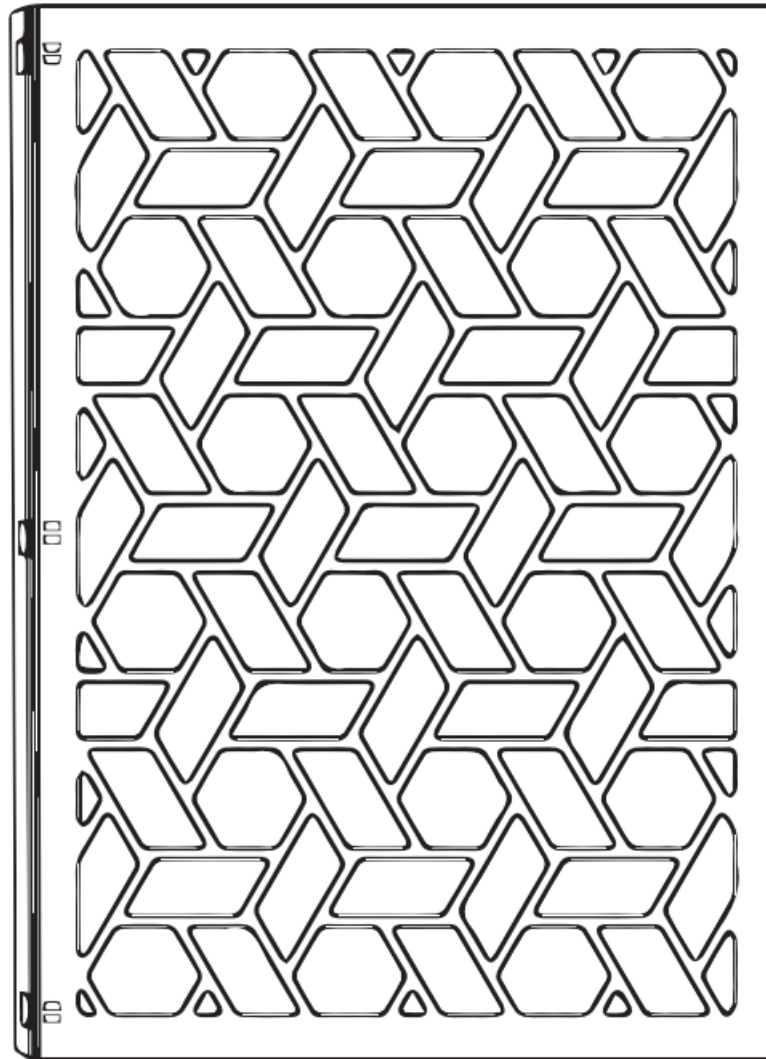

Contents

[1 USE INSTRUCTIONS](#)

[2 Documents /
Resources](#)


[2.1 References](#)

[3 Related Posts](#)

USE INSTRUCTIONS


1. **Step 1** : Tear along the dotted line

1

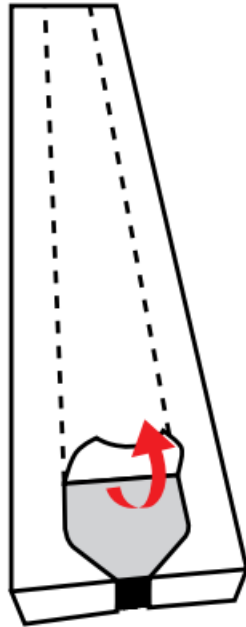



2. **Step 2:** Open furnace filter paper

2

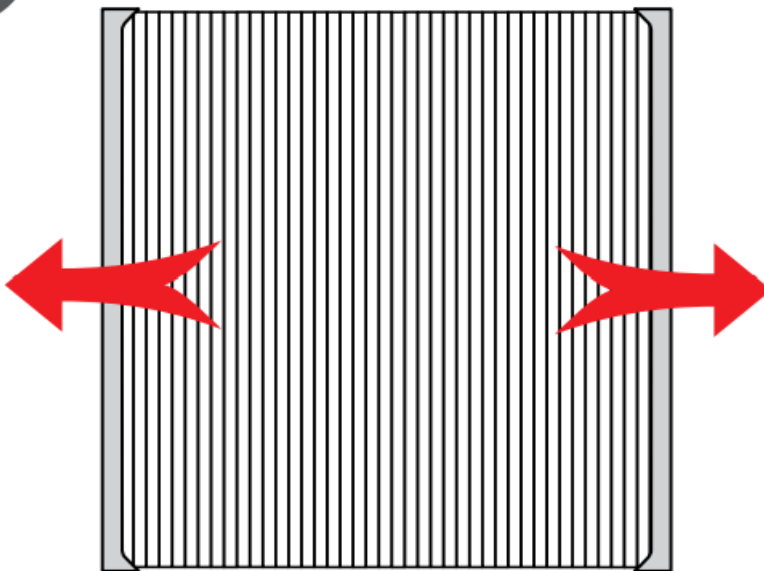


3. **Step 3:** Open furnace filter grid

3

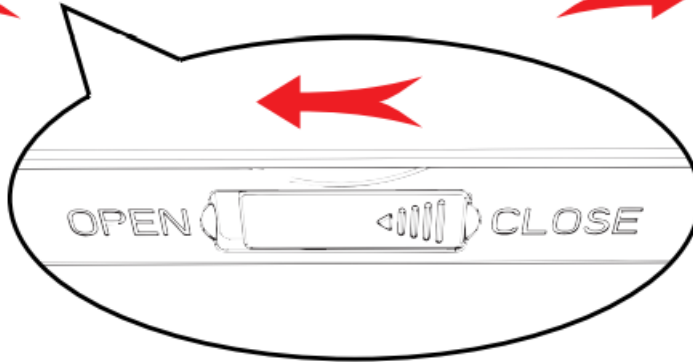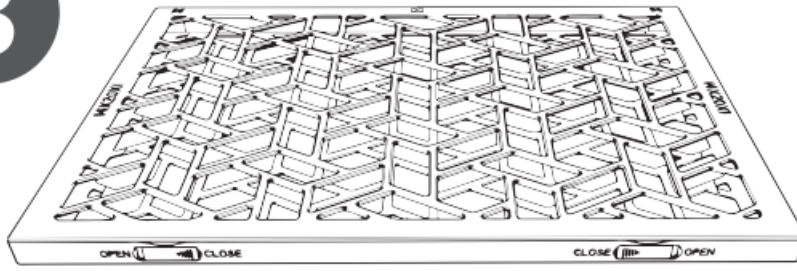


4. **Step 4:** Expand the furnace filter grid


4

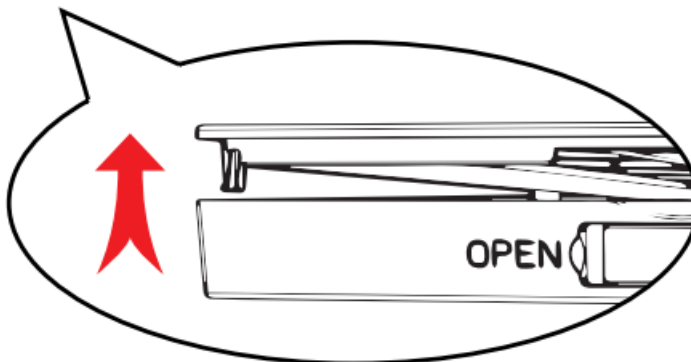


5. **Step 5:** Stuck filter paper

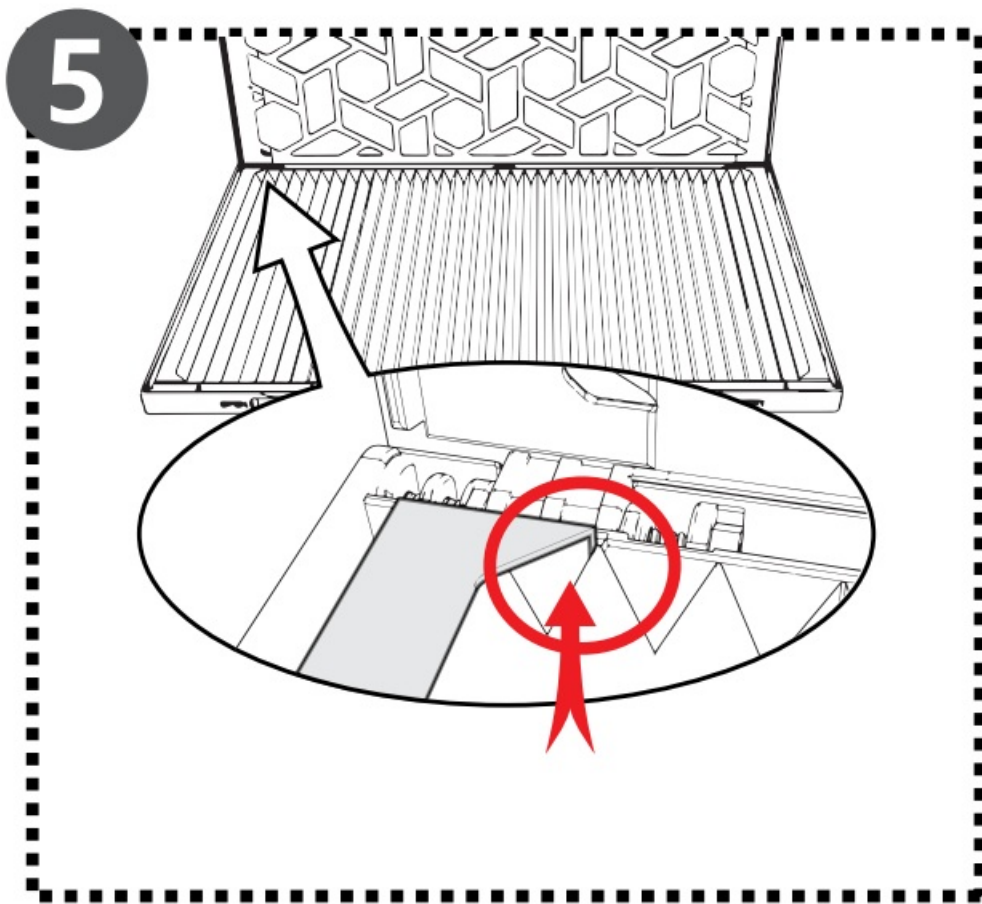

6. **Step 6:** Install furnace filter paper

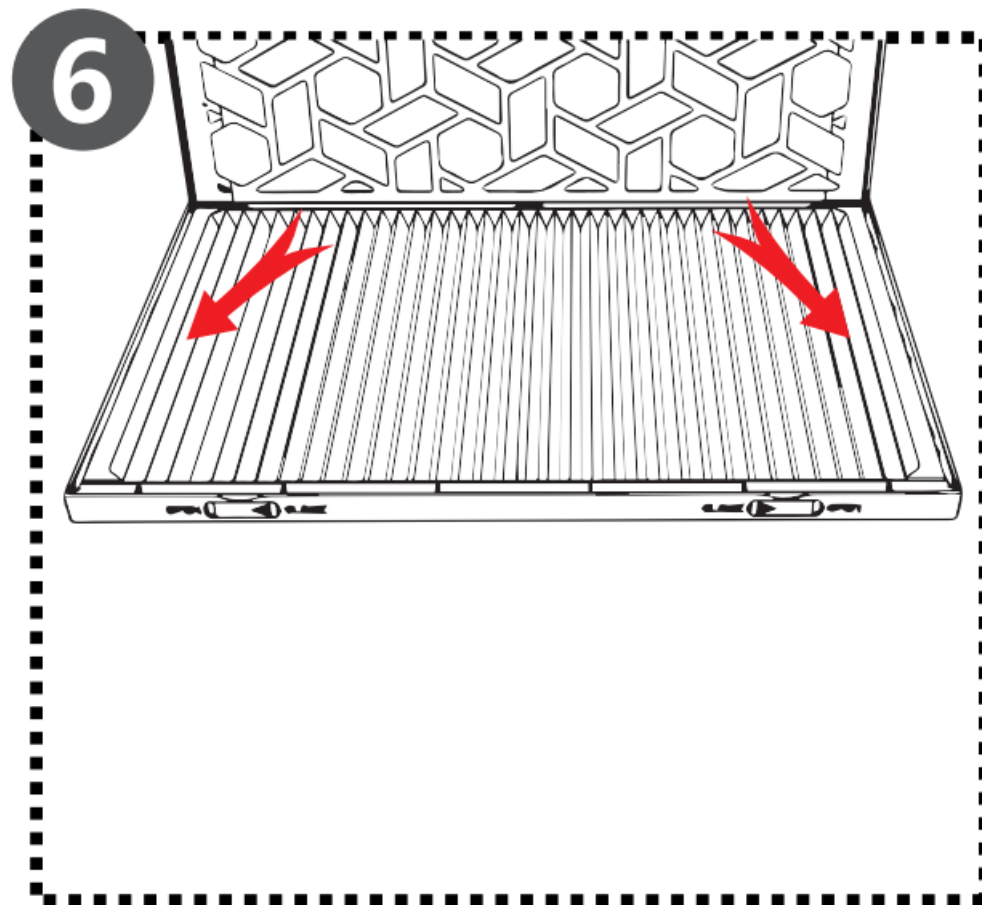


7. **Step 7:** Install furnace filter grid

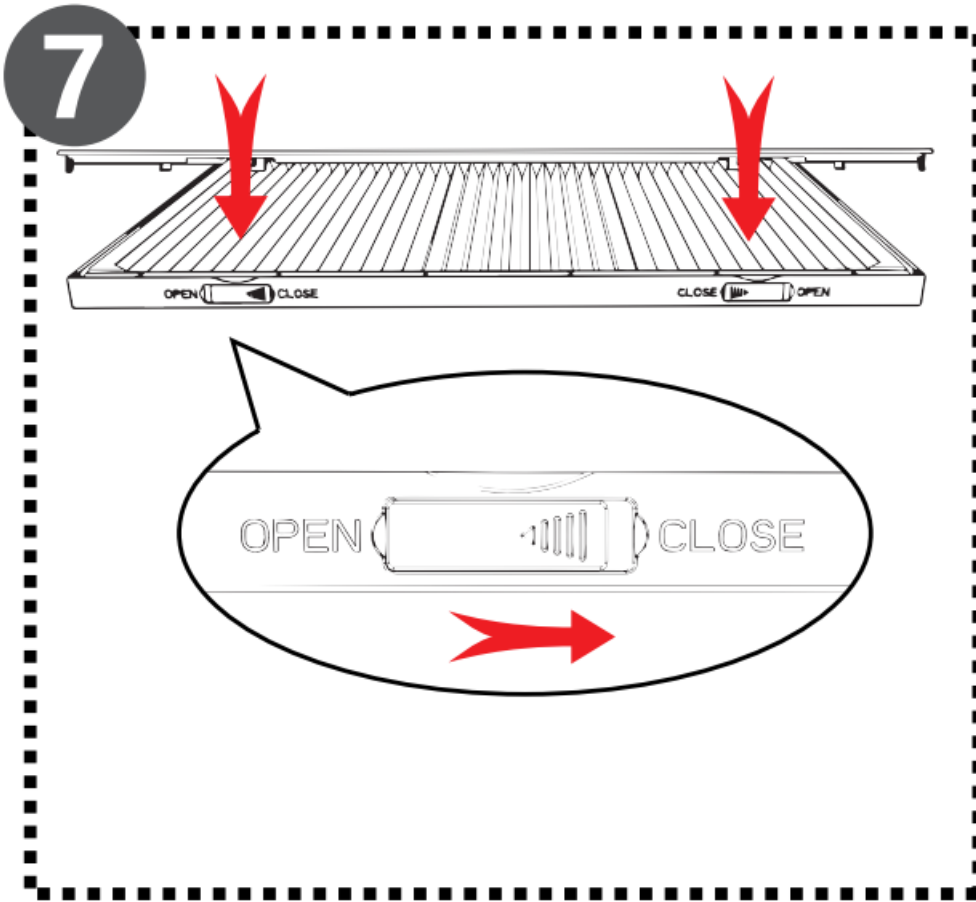

service@ubeesize.com

UBeesize®

Documents / Resources

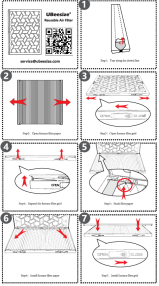	UBeesize LH181 Reusable Air Filter [pdf] Instruction Manual LH181 Reusable Air Filter, LH181, Reusable Air Filter, Air Filter, Filter
---	--

References

- [User Manual](#)