



UBIQUITI UISP Wave LR Long Range Device Installation Guide

[Home](#) » [UBIQUITI](#) » UBIQUITI UISP Wave LR Long Range Device Installation Guide 



UISP Wave LR Long Range Device Installation Guide


Contents

- [1 UISP Wave LR Long Range Device](#)
- [2 Documents / Resources](#)
- [3 Related Posts](#)

UISP Wave LR Long Range Device



a

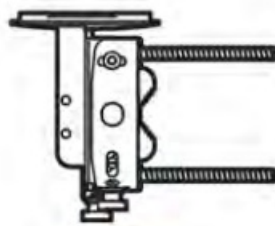

b



c



d



e

M8



f

M4



g



h



i



j



k





l



13mm





1



35mm<Ø<60mm

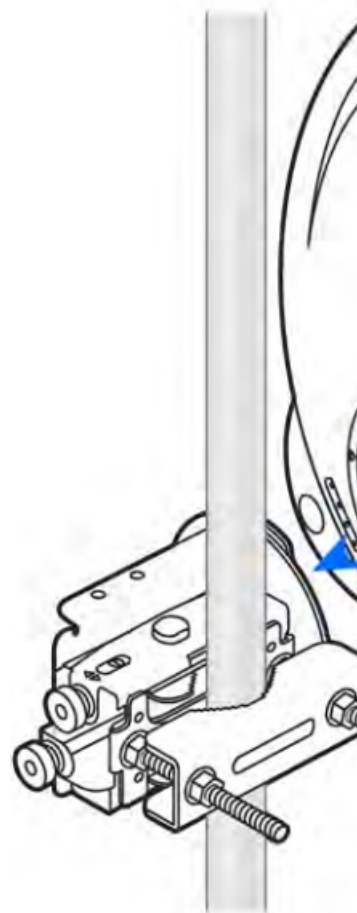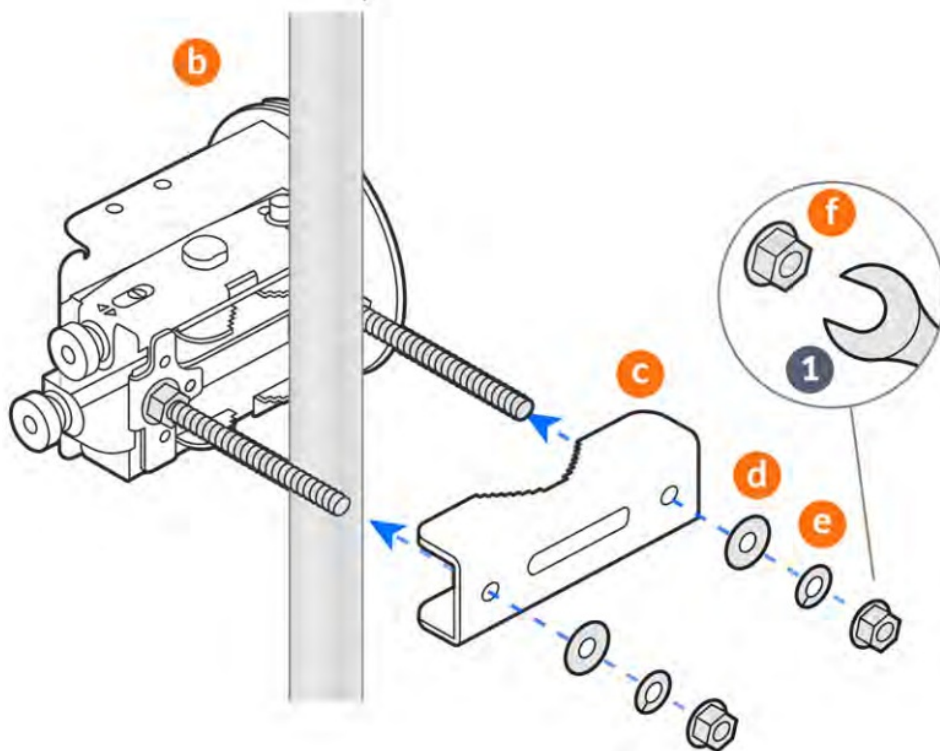


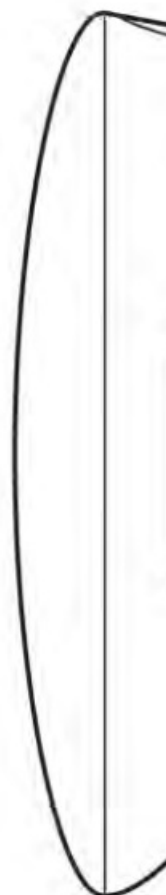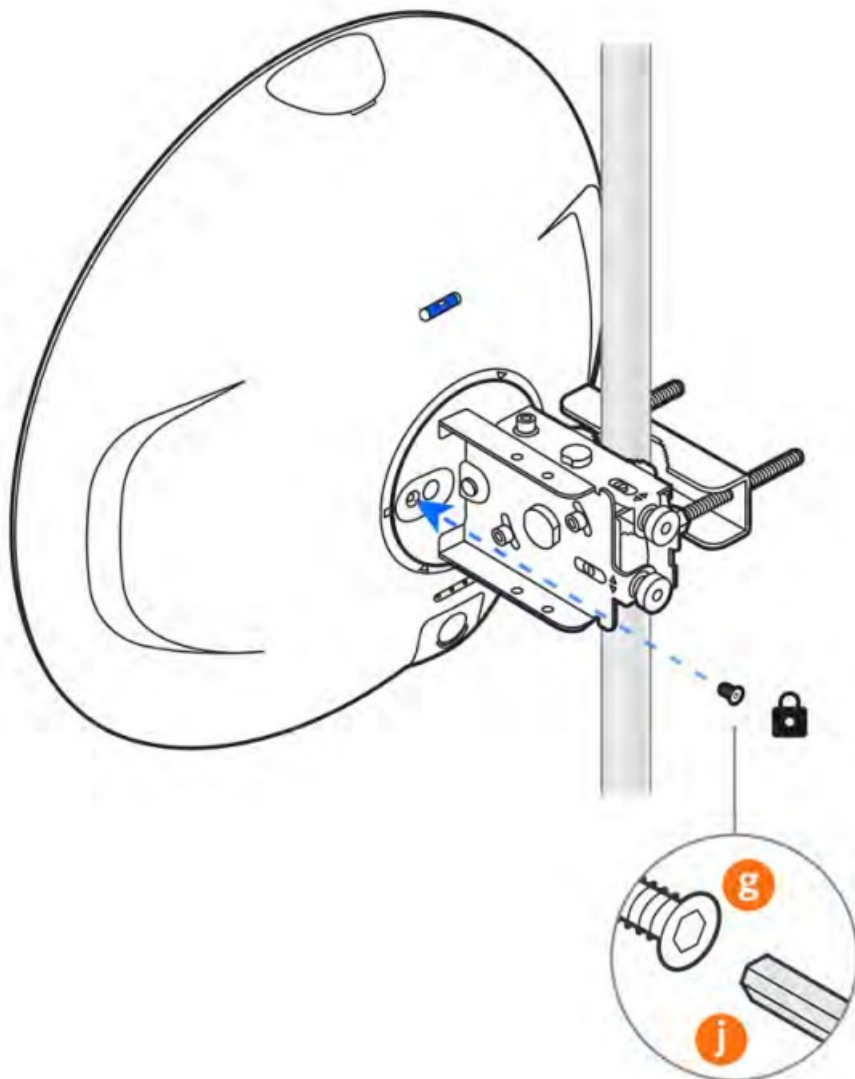

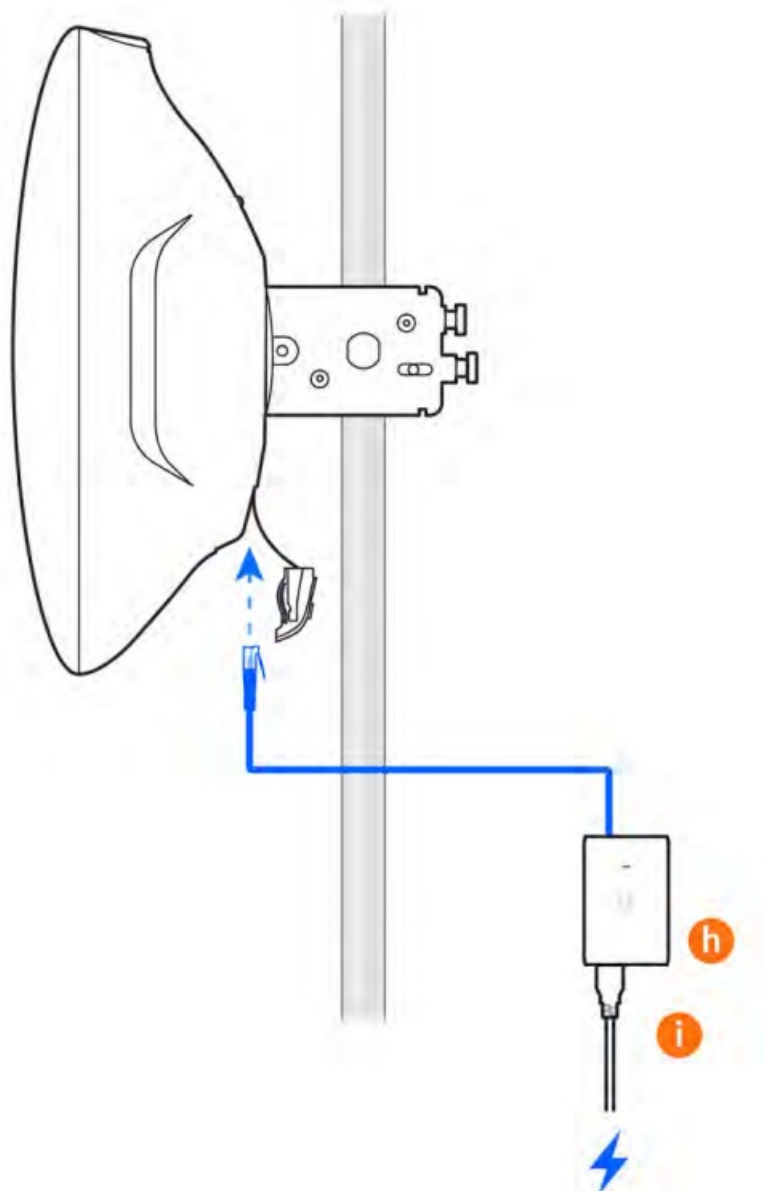

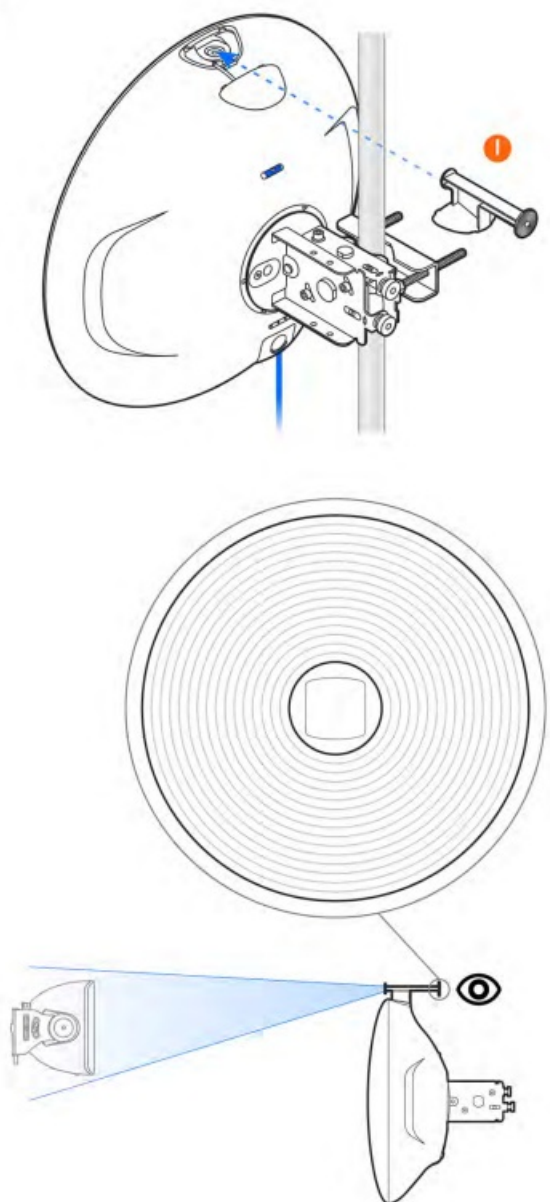

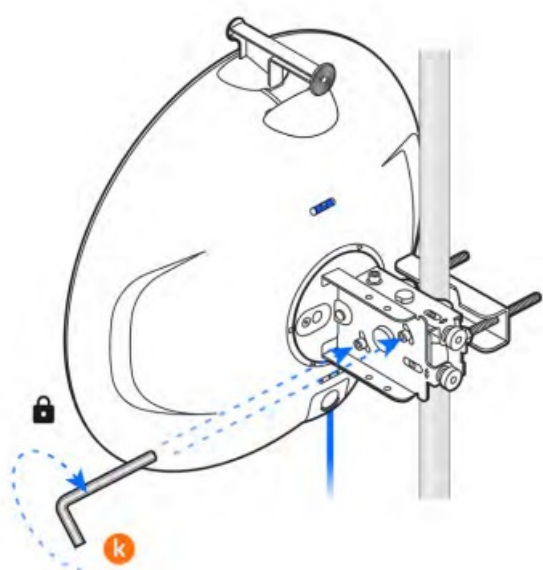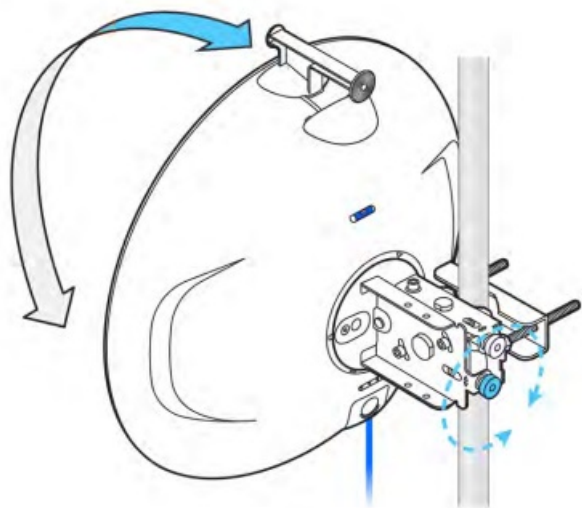


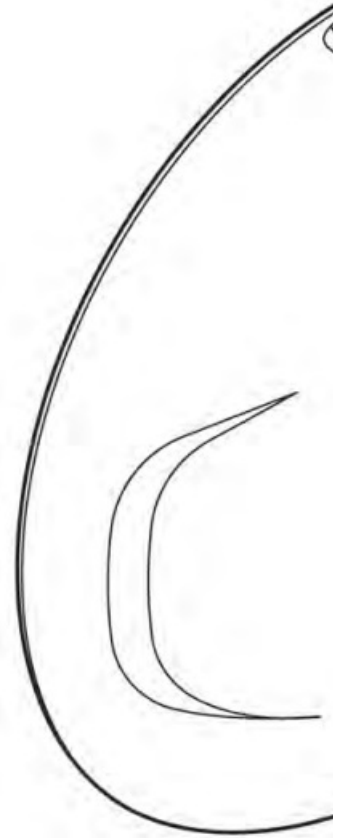





help.ui.com

Documents / Resources


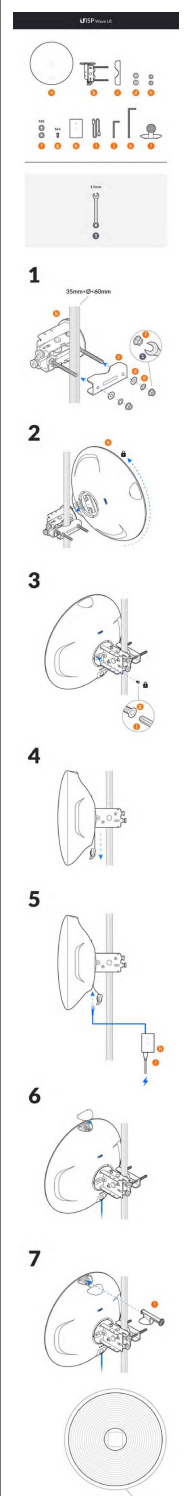
 The image shows the first page of a PDF installation guide for the Ubiquiti UISP Wave LR Long Range Device. It features a vertical sidebar on the left with seven numbered steps (1-7) corresponding to the main content area. Step 1 shows the device being mounted to a wall. Step 2 shows the device being connected to a power source. Step 3 shows the device being connected to a network. Step 4 shows the device being connected to a power source. Step 5 shows the device being connected to a network. Step 6 shows the device being connected to a power source. Step 7 shows the device being connected to a network. The main content area is currently blank.	UBIQUITI UISP Wave LR Long Range Device [pdf] Installation Guide
---	---



 
8

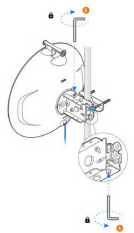


9

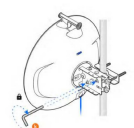 

10

 

11

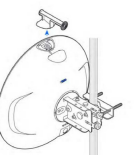

WAVELR, SWX-WAVELR, SWXWAVELR, UISP Wave LR Long Range Device, UISP Wave LR, Long Range Device