

UCP Flash Utility SOP Installation Guide

[Home](#) » [UCP](#) » UCP Flash Utility SOP Installation Guide 

Contents

 
1 UCP Flash Utility SOP

2 Documents / Resources


3 Related Posts

UCP


UCP Flash Utility SOP

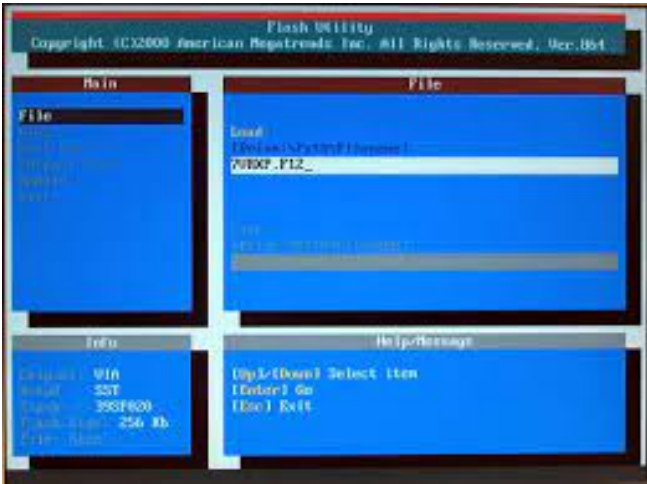

 1. UCP Flash Utility SOP-FEATURE

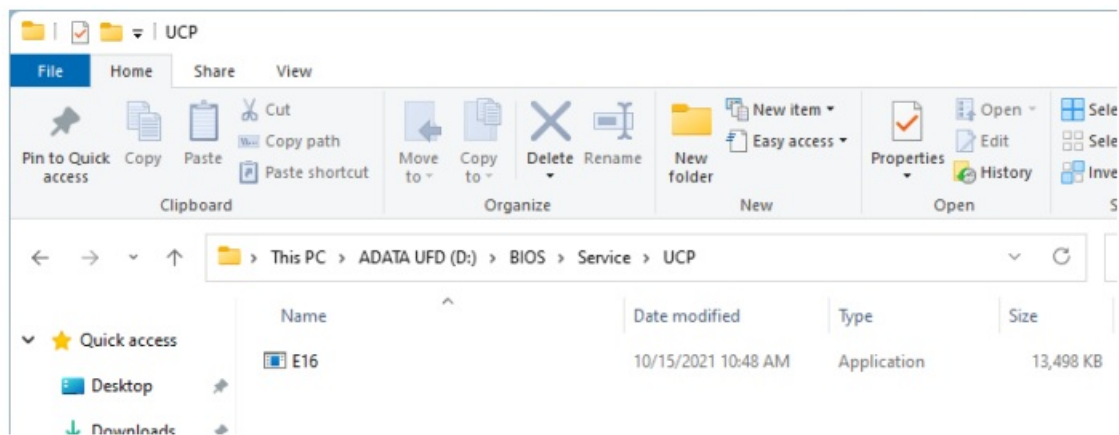

 2. Execute the *.exe file
3. If you see the UAC prompt message, press Yes

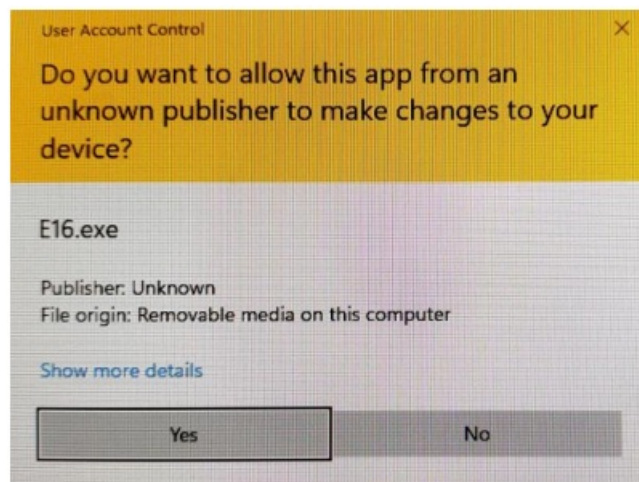




4. Wait for completion and press "Y" to restart the system

```

+-----+
|               AMI Firmware Update Utility v5.11.00.1727               |
|      Copyright (C)2018 American Megatrends Inc. All Rights Reserved.      |
+-----+
Reading flash ..... done
- FFS checksums ..... ok
- Check RomLayout ..... Ok.
Loading capsule to secure memory buffer ... done
Input the ME Local data into the BIOS ..... done
System is going to shut down, are you ready? (Y/N)...


```

   5. System will auto power on into BIOS and flash.
6. Start flash update automatically and wait it completed.

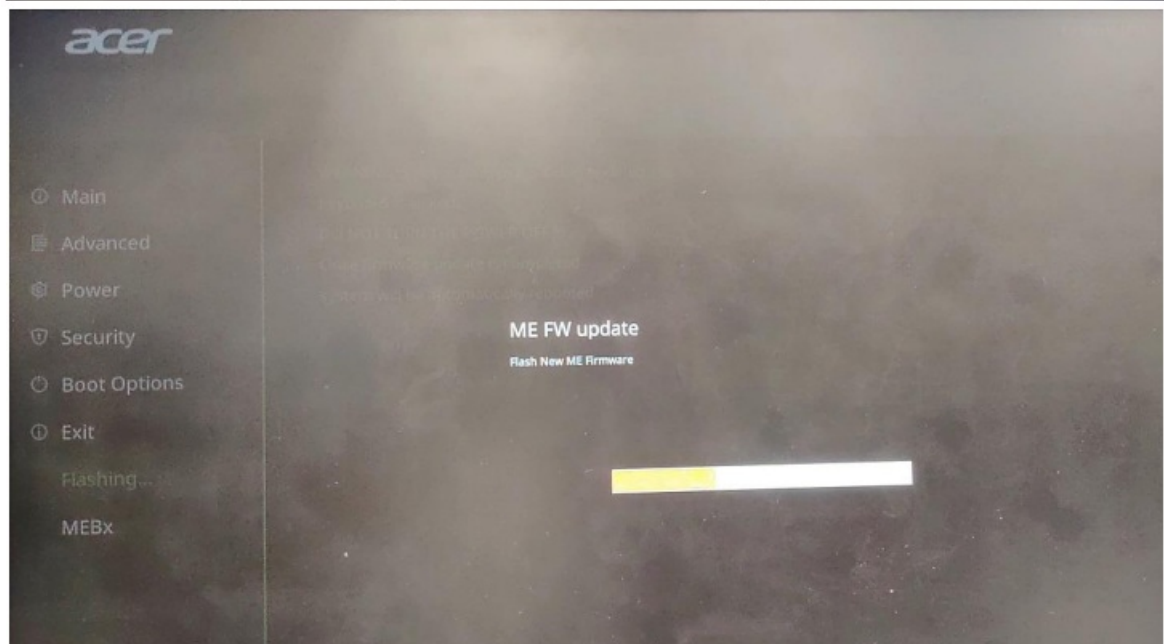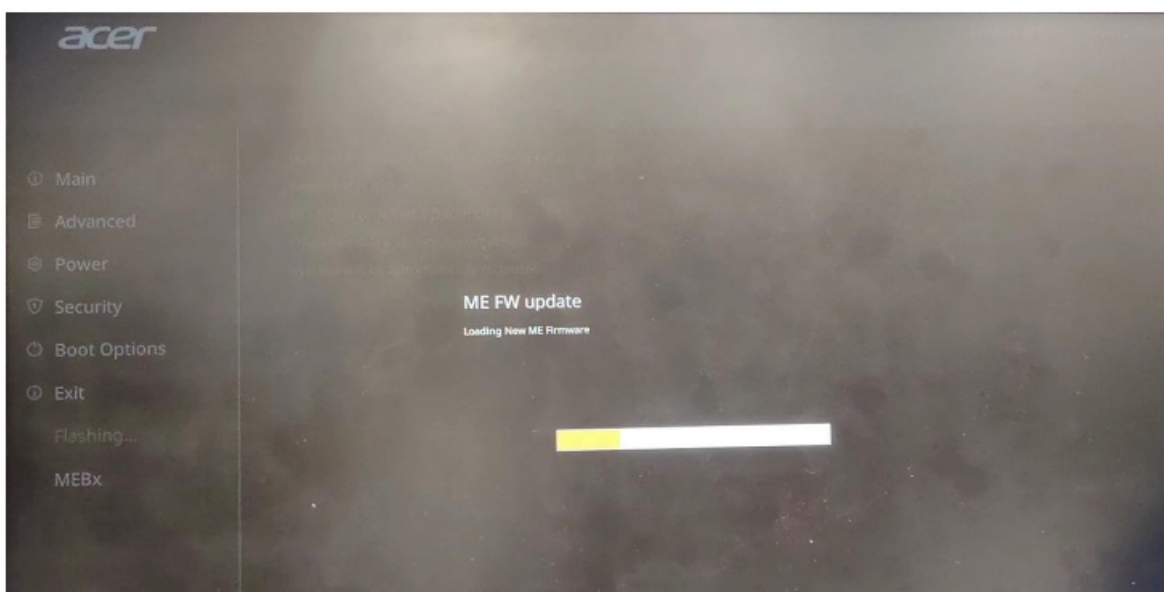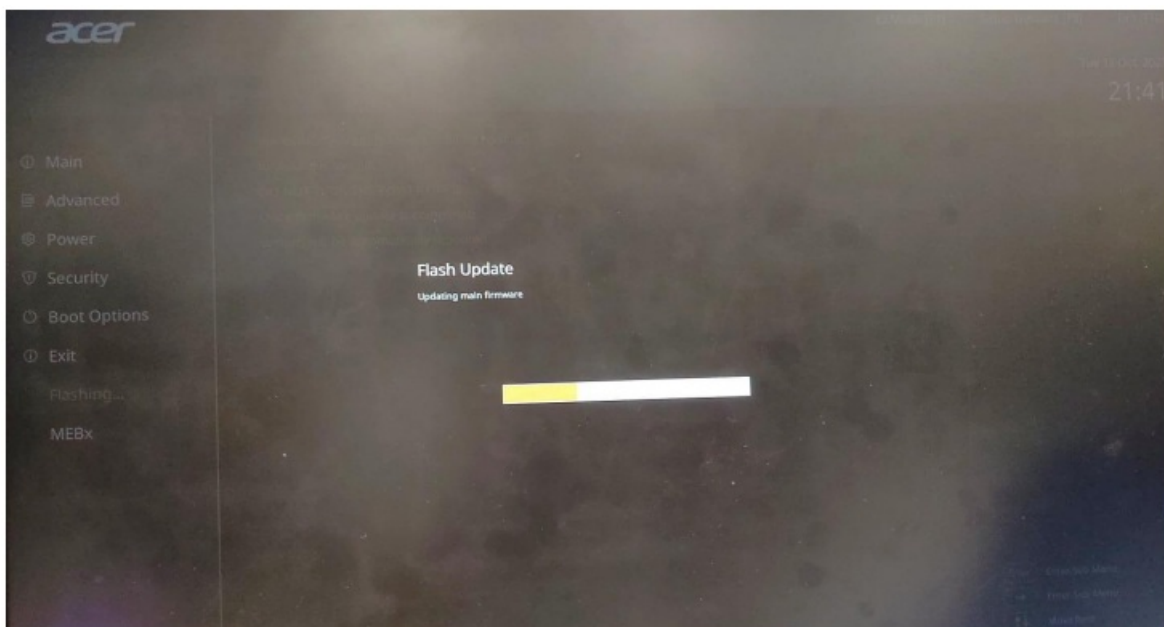


7. After flash finish, system will reboot automatically.
8. Boot system. Please press "Delete" key to enter BIOS Setup Menu.
9. Press F1 key to switch Advanced Settings

 
10. Choose Exit " page and select "Load Default Setting" and press "Enter" key
11. Select " OK " to load default settings

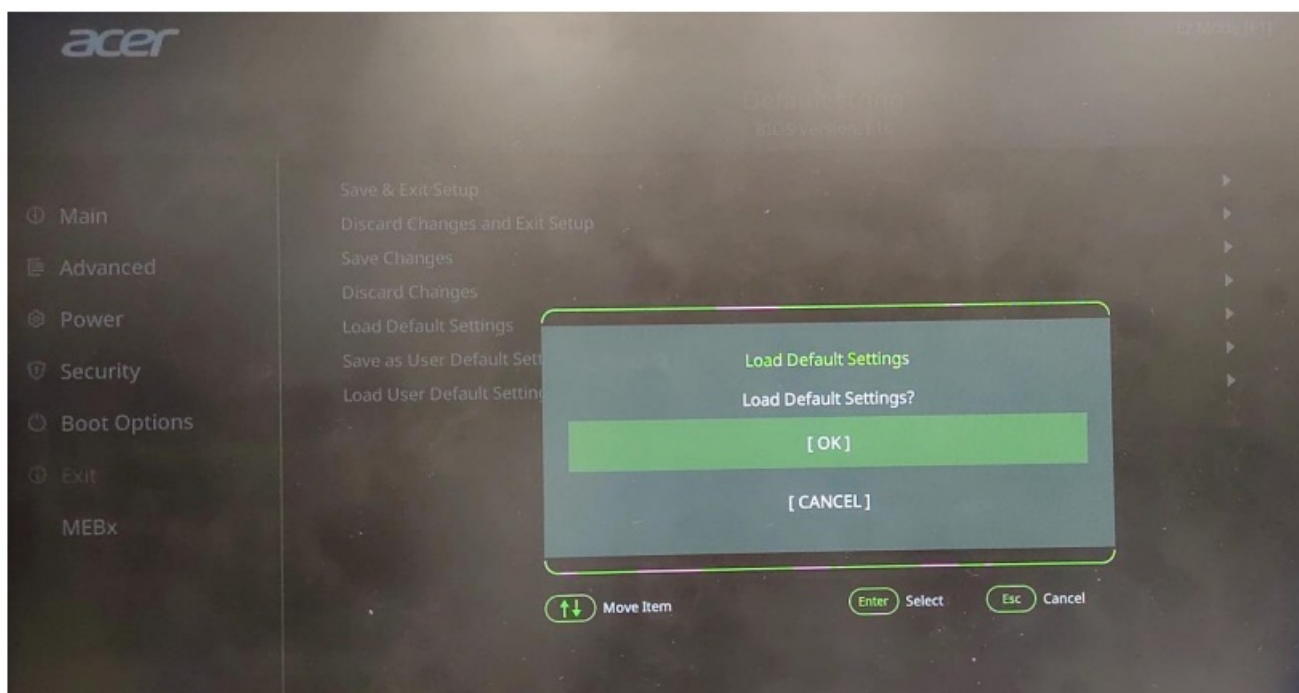

 12. Choose Exit " page and select "Save & Exit Setup" and press "Enter" key
13. Select " OK " to restart

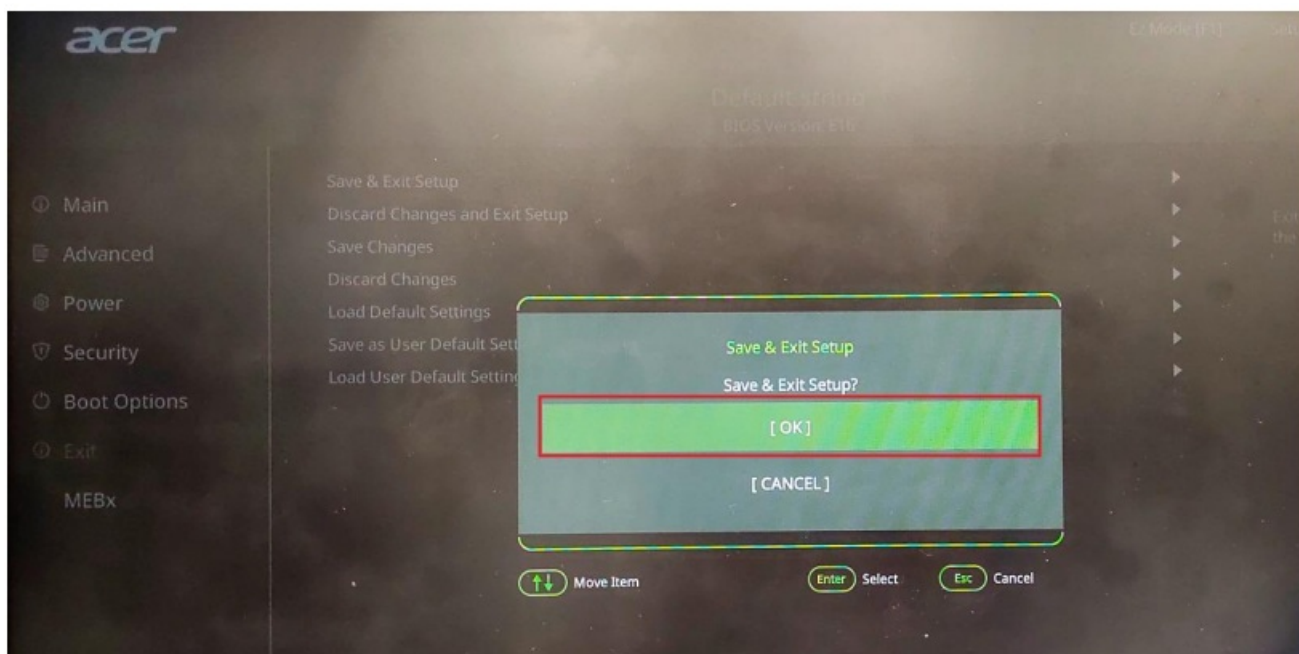

Documents / Resources

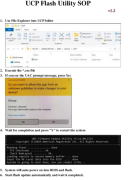 	UCP Flash Utility SOP [pdf] Installation Guide Flash Utility SOP, Flash Utility, SOP Software, Software
---	--

