


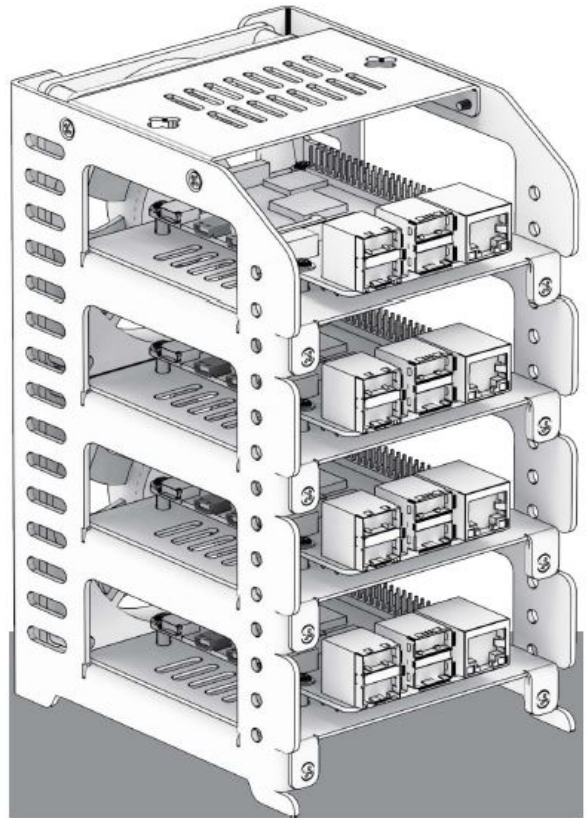

UCTRONICS U6169 Raspberry Pi Cluster User Guide


[Home](#) » [UCTRONICS](#) » UCTRONICS U6169 Raspberry Pi Cluster User Guide 

UCTRONICS

Contents

- [1 UCTRONICS U6169 Raspberry Pi Cluster User Guide](#)
- [2 Documents / Resources](#)
- [3 Related Posts](#)

UCTRONICS U6169 Raspberry Pi Cluster User Guide

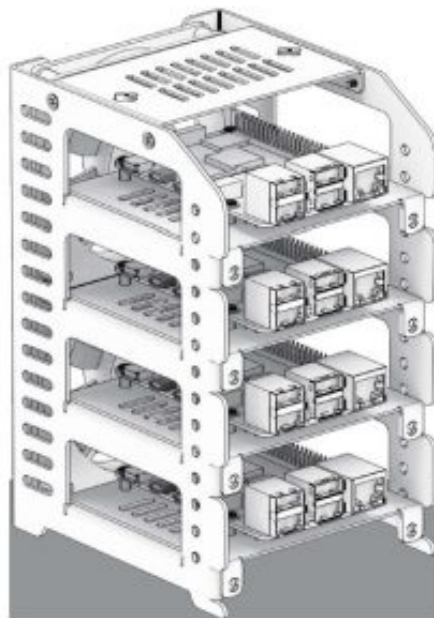


Package Contents


UCTRONICS




Cooling fan x2

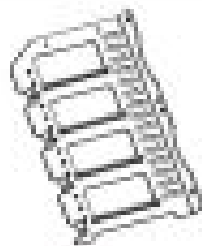


Side panel x2

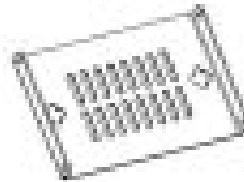

Top panel x1

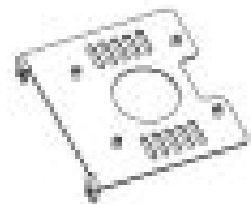

Raspberry Pi baseplate x1

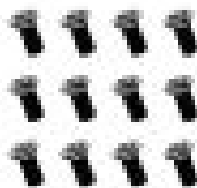

Counter-sunk screws for top panel
or 2xPI baseplates (M2.5x6) x12




Fan screws x8




Round head screws for
PI boards (M2.5x4) x16



Screwdriver x1

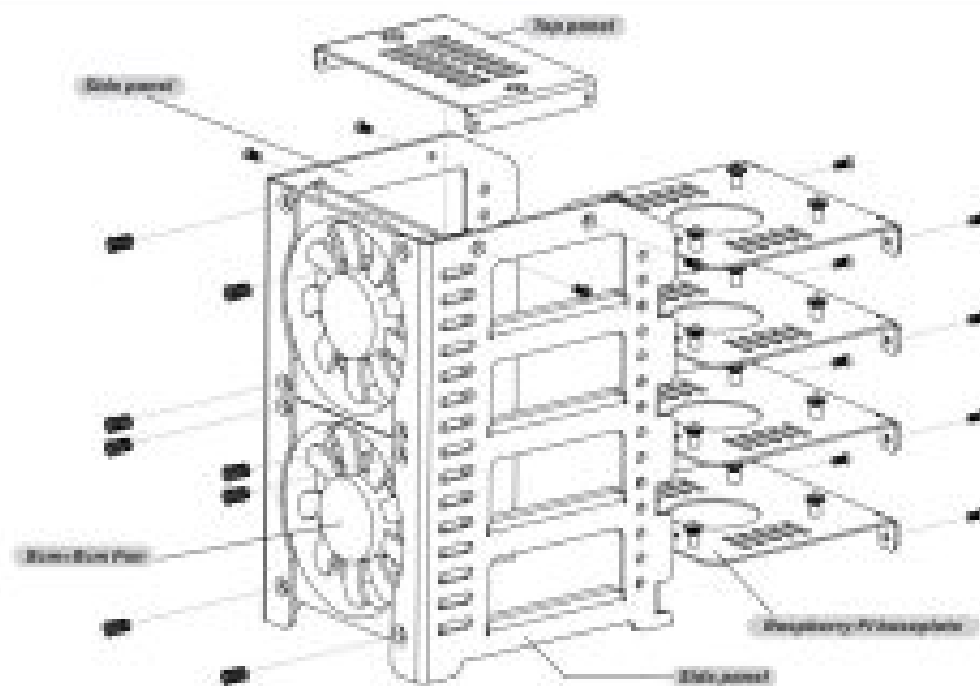


Assembly Steps

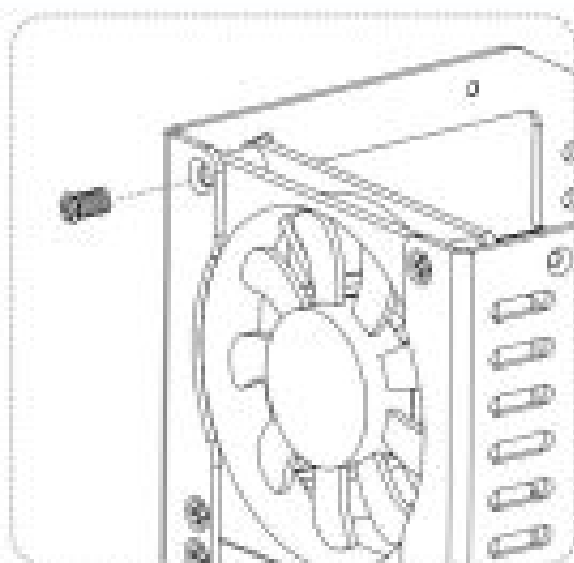


1. Align the mounting holes of the fan with those on the two side panels, and fix with fan screws;



2. Align the mounting holes of the top panel with those on the two side panels, and fix with countersunk screws;

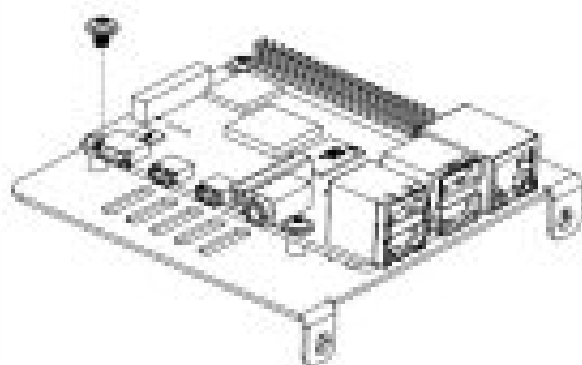


3. Mount the RPi board on the baseplate, align the mounting holes and fix with round head screws.

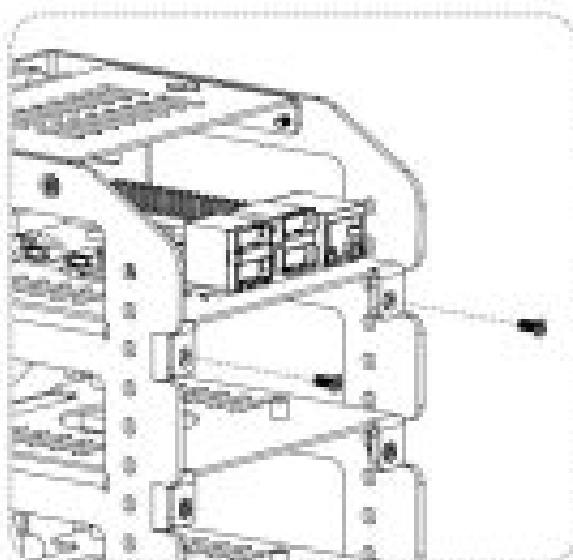

4. Put the baseplate with RPi board on the support plate of the side panels, fix with the countersunk screws.

Wiring

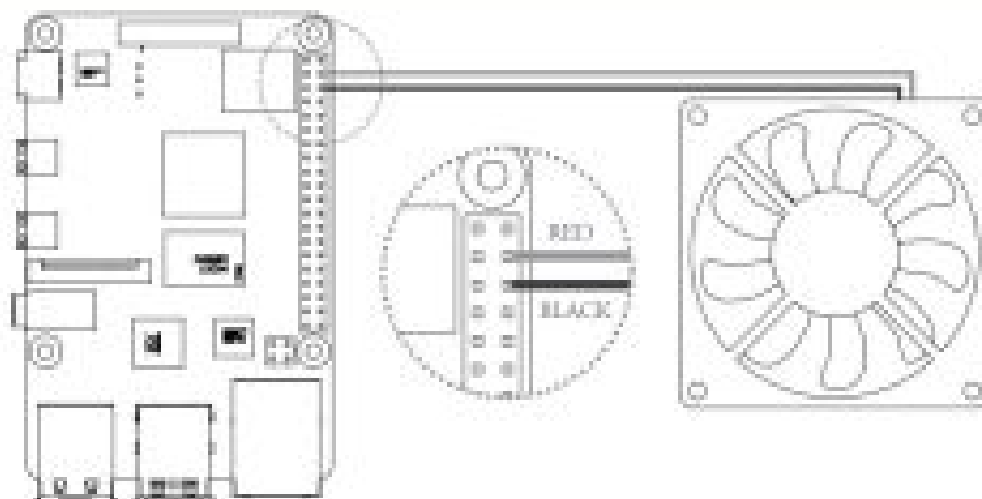

Fan SPEC	
Operating Voltage	DC 5V
Operating Current	0.3A
Power Consumption	1.5W
Speed	2875±5%RPM
Size	80*80*15mm
Weight	44.2g

Read More About This Manual & Download PDF:

Documents / Resources

	UCTRONICS U6169 Raspberry Pi Cluster [pdf] User Guide U6169, Raspberry Pi Cluster
---	--