


UDIAG®
CR200 Code
Reader



UDIAG CR200 Code Reader User Manual

[Home](#) » [udiag](#) » UDIAG CR200 Code Reader User Manual 

Contents

- [1 UDIAG CR200 Code Reader](#)
- [2 Diagnostic Operation](#)
- [3 Before Start Diagnosis, Please Make Sure](#)
- [4 Powering Up the Scanner](#)
- [5 Warranty and Service](#)
- [6 FAQ](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)




UDIAG CR200 Code Reader



Diagnostic Operation

This section illustrates the external features, ports, and connectors of the code reader.

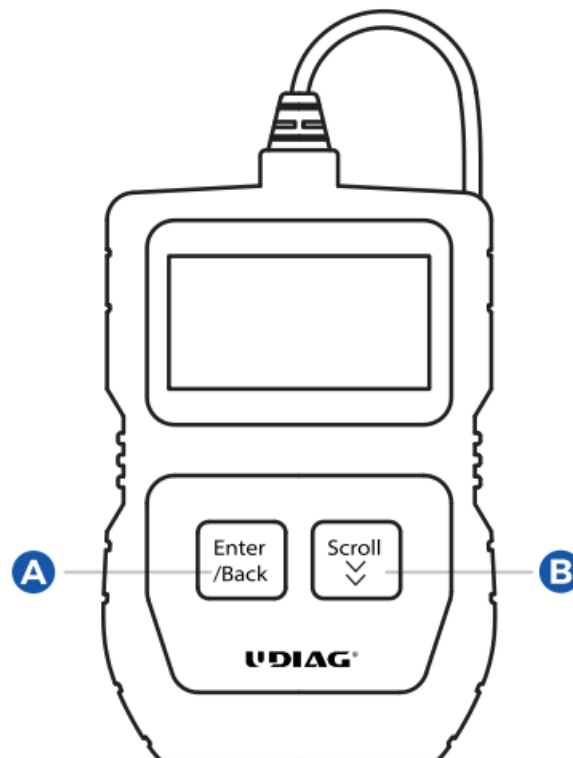

- **A. Enter/Back Key:** Return to the previous interface or exit. Confirm the current operation.
- **B. Scroll Key:** To select an option or scroll through a screen of data or text

Before Start Diagnosis, Please Make Sure




1. The ignition switch is turned to ON position.
2. Engine is off.
3. 10 to 14 volt vehicle power.

Don't connect or disconnect the equipment while the ignition is on or the engine is running.



Powering Up the Scanner

Please follow below steps to turn on the scanner:

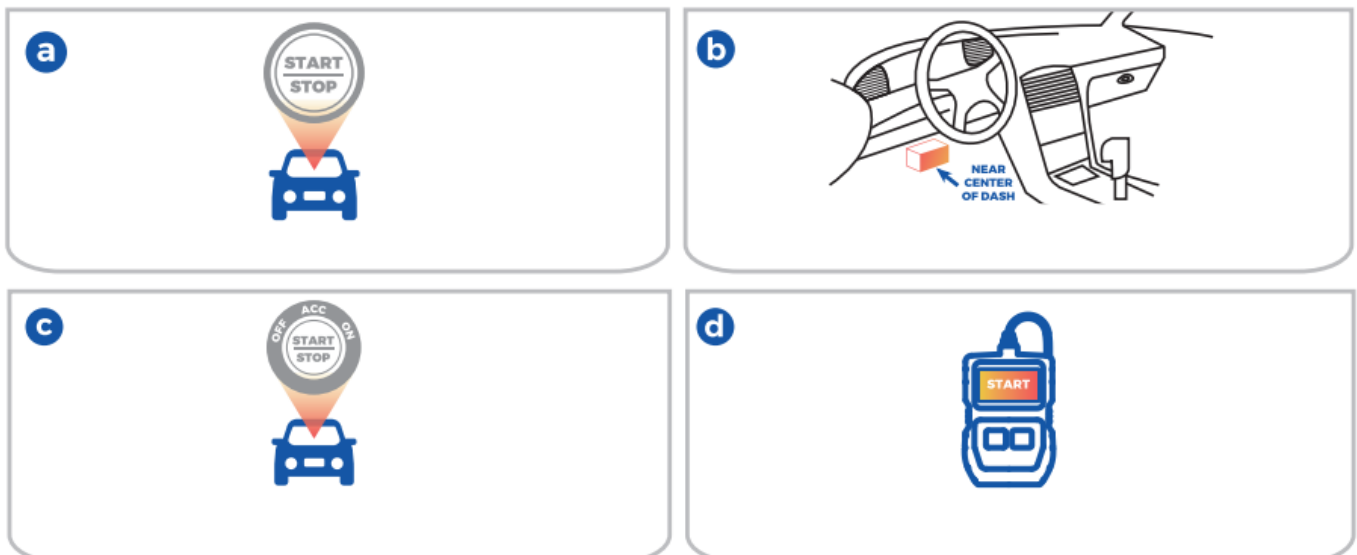

1. Connect the scanner to the vehicle's OBDII port.
2. Turn the ignition switch to the ON position.
3. The scanner will power up automatically.
4. Follow the on-screen instructions to proceed with diagnostics.

Warranty and Service

Limited One Year Warranty

The warranty is 1 year for hardware, which does not cover damage caused by human factors, accidents, misuse of the product. Under the warranty, customers can ask for replacement due to non-human damage.

Service and Support

For any service or support issues, please contact us via email or leave messages on our website.

- **Website:** www.udiaitech.com
- **Email:** support@udiaitech.com
- **Phone:** +86 755 2906 6687
- **Address:** 3rd Floor, Building B2, Fuxinlin Industrial Park, Gaoye Rd., Bao'an District, Shenzhen, China

FAQ

Q: What does the warranty cover?

A: The warranty covers hardware issues for 1 year, excluding damage caused by human factors, accidents, or misuse of the product.

Q: Can I connect or disconnect the scanner while the engine is running?

A: No, do not connect or disconnect the equipment while the ignition is on or the engine is running.

Q: What should I do if the scanner does not turn on?

A: Ensure that the vehicle's ignition switch is in the ON position and the vehicle power is between 10 to 14 volts. Check the connection to the OBDII port.

Q: How do I power up the scanner?

A: Connect the scanner to the vehicle's OBDII port and turn the ignition switch to the ON position. The scanner will power up automatically.

Q: How can I contact support?

A: You can contact support via email at support@udiaitech.com or by phone at +86 755 2906 6687. You can also visit our website at www.udiaitech.com.

Documents / Resources



[UDIAG CR200 Code Reader](#) [pdf] User Manual
CR200, CR200 Code Reader, Code Reader, Reader

References

- [User Manual](#)

Manuals+. [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.