



Udreamer UD001 Turntable System Instruction Manual

[Home](#) » [Udreamer](#) » Udreamer UD001 Turntable System Instruction Manual 

Udreamer

UD001
TURNTABLE SYSTEM
OPERATING INSTRUCTIONS



Please Read This User Manual before Use

Made In China

 
Udreamerservice01@outlook.com

Contents

- 1 WARNING
- 2 IMPORTANT SAFETY INSTRUCTIONS
- 3 General instruction
- 4 What is Included in the Package
- 5 Safety Instruction
- 6 Ureamer WARRANTY
- 7 Product Structure and Component
- 8 CONNECTION
- 9 How to Use Aux Input:
- 10 Turntable Specification
- 11 Documents / Resources
- 12 Related Posts

WARNING

TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT USE THIS PLUG WITH AN EXTENSION CORD. RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD. DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

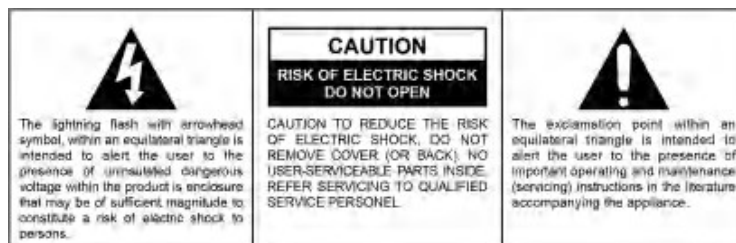

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for the replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the

product. When a cart is used, use caution when moving, the car apparatus combination to avoid injury from tip-



 
over.

13. Unplug this apparatus during lightning storms or when unused for long periods of 4fir time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. This appliance shall not be exposed to dripping or splashing water and no object filled with liquids such as vases shall be placed on the apparatus.
16. Do not overload the wall outlet. Use only power source as indicated.
17. Use replacement parts as specified by the manufacturer.
18. Upon completion of any service or repairs to this product, ask the service technician to perform safety checks.
19. Power Sources – This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instruction.
20. Object and Liquid Entry – Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spil liquid of any kind on the product.
21. Damage Requiring Service – Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a) When the power-supply cord or plug is damaged,
 - b) If liquid has been spilled, or objects have fallen into the product,
 - c) If the product has been exposed to rain or water,
 - d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - e) If the product has been dropped or damaged in any way, and
 - f) When the product exhibits a distinct change in performance – this indicates a need for service.
22. the Main plug is used as a disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely. the mains plug should be disconnected from the mains socket outlet completely.
23. Excessive sound pressure from earphones and headphones can cause hearing loss.
24. Minimum distances of 10 cm around the apparatus for sufficient ventilation.
25. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers. tablecloths, curtains. etc.
26. No naked flame sources, such as lighted candles, should be placed on the apparatus. 27. The use of apparatus in moderate climates.

Thanks for Purchasing Udreamer UD001 Record Player Highlight Features

■ 1.8elt-driven System

- 2. Built-in 2*3W Speakers
 - 3. Bluetooth Input: Freely listen to phone music via Bluetooth (Note: This record player only support Bluetooth input, does not support Bluetooth output)
 - 4. USB Input: You can transfer music from another device via USB and play it on the turntable
 - 5. RCA Line-out: Allows convenient connection of external speaker (Note: for active speaker, pls connect a turntable with the active speaker directly via RCA line out; for passive speaker, pls connect a turntable with amplifier first via RCA, then connect the amplifier with passive speaker)
 - 6. Aux Input: Connect devices with AUX output like iPad via AUX input jack at the back of record player to play music on the turntable
 - 7. Support 3 Speeds: 33, 45 RPM; 78 RPM; Play 3 Sizes of Records: 7", 10", 12"
 - 8. Headphone Jack; 45 Adaptor; Tornado Arm Lifter; Removable Dust Cover; SV 1.5A Power Adapter
- (1) Bluetooth Mode: The Indicator Light: Blue
 (2) LP Mode: The Indicator Light: Green

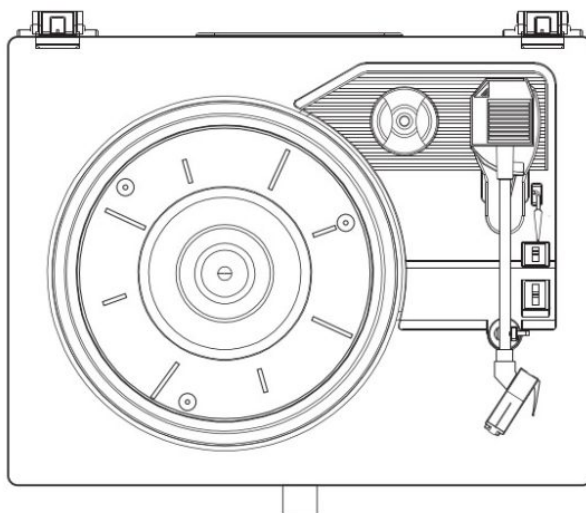

General instruction

Please Read the User Manual Carefully Before Using This Product. Keep the User Manual for Future Reference

What is Included in the Package

After you open the package, please check the Items below carefully before using them.

- 1. Turntable*1 pcs
- 2. User Manual pcs
- 3. DC Adapter 100-240V, 5V, 1.5A • 1 pcs

Safety Instruction

Products have been well-tested and adjusted. We conduct strict quality examinations before these products are allowed to leave the factory. Please check and follow the manual instructions carefully. Any neglect, misuse, abuse, accident, failures caused by software problems, modification without Udreamer Authorization, power surges, and any loss or damage arising out of circumstances beyond Udreamer's control, we will not be responsible for the result.

Udreamer			
Warranty Card			
Model Number		Date of Purchase	
Customer		Dealer	
Name		Name and Address	
Address			
QA PASSED			

Udreamer WARRANTY

1. Warranty Terms

Within 1 month from the date of purchase, any problems caused by product's performances under normal operation, without overhaul, can be replaced for a new turntable. Within a half of year from the date of purchase, any problems caused by product's performances under normal operation, without overhaul, can be accepted by maintenance service. Within 3 years from the date of purchase, any problems caused by the product's performance can be accepted by a fee-based maintenance service

2. This Warranty Card Automatically Expires under the Following Circums Tances. But Customer Can Still Enjoy Fee-Based Maintenance Services.

- No" Udreamer "trademarks disqualified products
- Disassembling, replacing the failure product without authorization.
- The product with series number missing or altered.
- The fault or damage caused by man-made or abnormal operations. (subject to the environmental with too wet or too dry, unstable voltage or current, zero ground voltage is too larger, etc.)
- For all damages from outside force including liquid .crack, improper plugging, insect pests, etc.
- Natural consumption. (the nature consumption of shell, patch components, wear and aging).
- Damage caused by force majeure (e.g. fire, flood .earthquake and other disasters).
- The fault caused by software operation outside the scope of Udreamer permission
- The failure product NOT belonging to Dreamer

 
3. Maintenance Service Notices

The user must send the product for repairing or maintenance. Before sending it, please contact the post-sales department of Udreamer to ascertain the cause of the fault and fill up the maintenance application form. The original or a copy of purchase voucher (invoice) is needed when consumer sends the product to Udreamer. The service of 'warranty' or 'maintenance' is applicable to electrical components only (hardware board), It does not include the shell, manual, packing or other accessories.


- Particularly Declaration Udreamer shall NOT be responsible for any mechanical failure or a result of direct and indirect losses caused by software problems. The native consumer is protected by the consumer protection laws of his local country, if a consumer buys a product in a foreign country, the consumer must follow the foreign country's consumer protection law.

nterpretation of this warranty card owned by Udreamer


Product Structure and Component

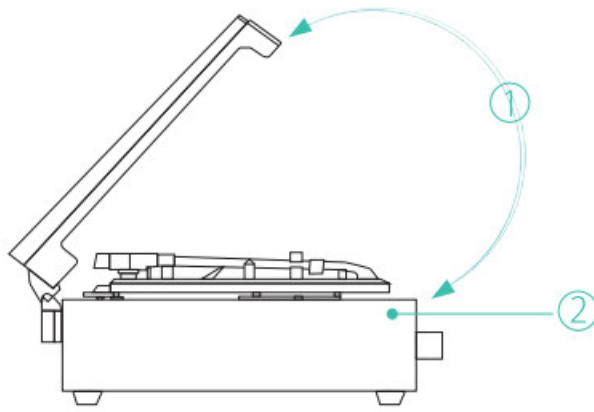

 
1. Dust Cover
2. Turntable

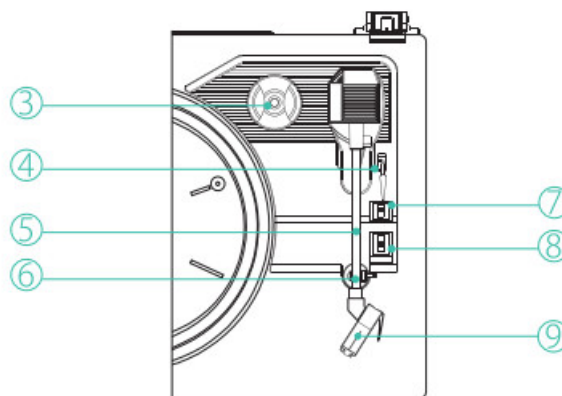

 3. 45 RPM Adaptor
4. Tone Arm Raise Lever
5. Tone Arm
6. Tone Arm Clip
7. Auto Stop Switch
8. LP Speed Switch
9. STAR

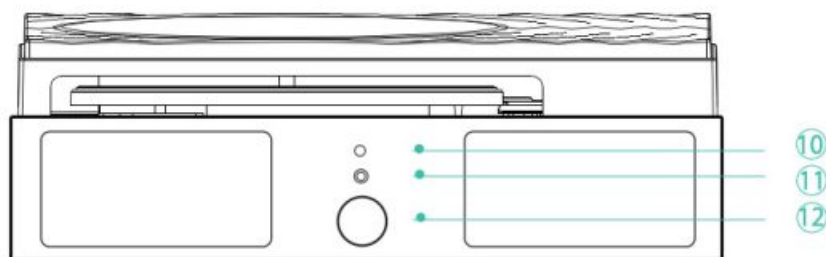

 
10. Light Indicator
11. Headphone jack
12. power Button And Volume Control
 - knaleart To loin On/Off
 - RotateR/L To Turn Up/Down The Volume

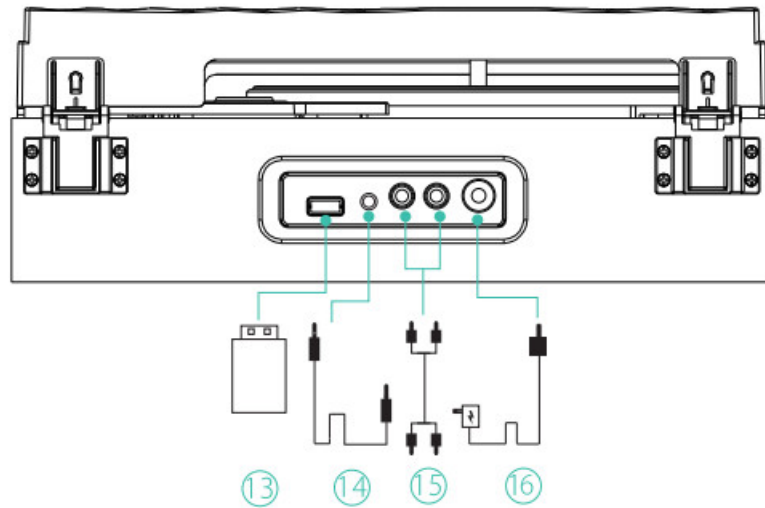

- 13. USB Input Socket
- 14. Aux Input Jack
- 15. RCA Output Jack
- 16. Power Adaptor jack

CONNECTION

 1. Connect the power adaptor to power adaptor jack.
2. Rotating the power knob (12) clockwise to turn on the unit, the power indicator will light on.

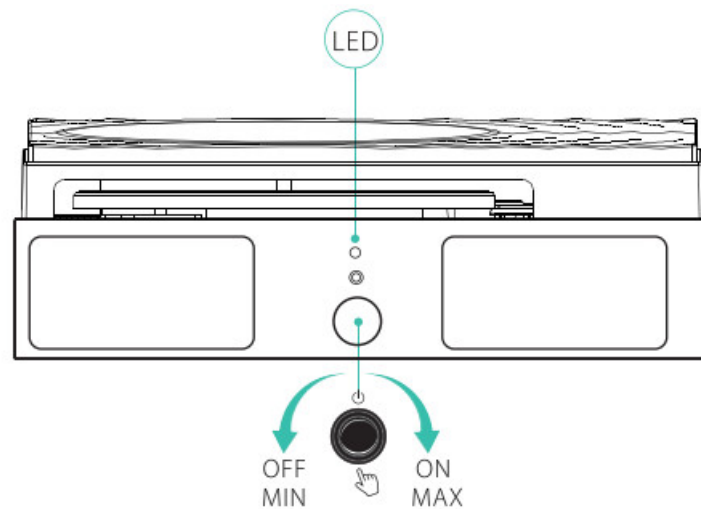

How to Play Bluetooth:

1. When turn on the record player, it will show a flashing blue light, which means the turntable is searching and waiting to connect to Bluetooth
2. Switch the Bluetooth function of your Bluetooth output device on (such as a mobile phone) and select the Bluetooth equipment code "UD001" to connect
3. When the Bluetooth device has connected successfully, the blue light will no longer flash but be static
4. Start playback of the music on your Bluetooth device and enjoy the music through the speakers of this turntable

Notes:

1. When playing vinyl record you cannot use the Bluetooth function, you need to stop playing a vinyl record and put the arm down, when the indicator shows blue light flashing, you can connect with your phone or other Bluetooth devices
2. If you want to connect the unit to another Bluetooth-enabled device after you've already successfully paired, turn off the Bluetooth on the device that was previously paired with the unit. The light will be flashing blue again, repeat step 1-4 above.
3. This record player only supports Bluetooth input, not support Bluetooth output. If you want to connect an external speaker, please connect it via RCA jack.

How to Play LP: LP Vinyl Record Play Mode

 
NOTED:

– Remove the stylus protector.

1. Place the record on the turntable, use the 45 rpm adaptor if required.
2. Set the speed selector to the correct position, depending on the record to be played.
3. Push the lift lever up to raise the tonearm from the armrest, and then slowly move it to the record side. The turntable will start to rotate. (Turn off the automatic stop switch, the turntable will keep on rotating.)
4. Put down the lift lever to drop the tonearm and touch the record gently. Record player playing starts now.
5. Push the lift lever upward to raise the tonearm from the armrest, the turntable will still be rotating but the record player playing will stop. To continue the playing, the lift lever needs to be put down.
6. Adjust the volume to the desired level.
7. At the end of a record, push the lift lever upward to raise the tonearm and move it to the armrest, and then put down the lift lever
8. Turn off the turntable or stop manually (Lift the tonearm from the record and return it to the arm rest).

How to Use Auto Stop Switch?

1. When you choose "turn on" the AUTO STOP switch, the turntable will stop spinning automatically
2. When you choose "turn off" the AUTO STOP switch, the turntable will keep spinning
3. If your vinyl has a few songs, we advise you to turn on it, after the music finishing, it will stop spinning
4. If your vinyl has many songs, we advise you to turn off it, it may stop playback in the middle if you turn on it
5. .Note: Sometimes, when your record has been scratched or damaged, it may still keep spinning or repeat skipping even if you turn on the AUTO STOP switch, in this case, we advise you to change the vinyl or position the tone arm to its original place to stop it .

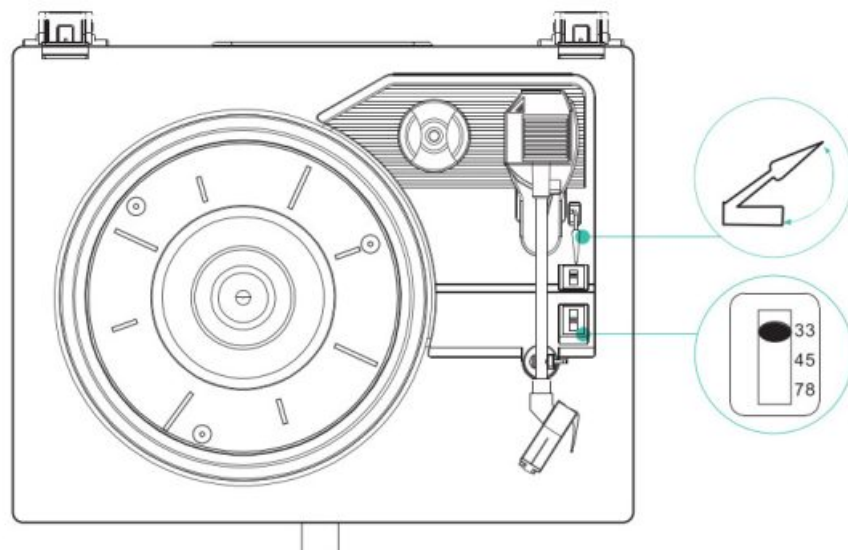

How to Use Aux Input:

Audio JACK/ Aux-In play mode: Put the tonearm back to the armrest, then connect the external audio device (such as CD player) through the AUX IN jack (13) on the back panel. Audio signals from the external audio device can be played through the system. The player will switch into Aux In play mode automatically once insert the audio cable into the Aux In jack (13).

How to Connect External Speaker RCA output jack is at the back of the turntable

1. For Active Speaker: Connect the RCA audio cable to the RCA Output Jack at the back of the turntable, then plug the other end into your active speaker, the sound will be transferred from the turntable to your external active speaker
2. For Passive Speaker: Connect the RCA audio cable to the RCA Output Jack at the back of the turntable, then plug the other end into an amplifier, next, connect the amplifier with your passive speaker, the sound will finally be transferred from turntable to your passive speaker

Warning

Do not manually lower the tonearm onto the LP disk, to avoid LP disk and stylus(9) damage!

Turndtable Specification

Item	Specification
Item model	UDOO1
Drive System	Belt Drive
Rated voltage(adaptor)	100-240v
Speed	33 1/3RPM,45 RPM and 78 RPM
Bluetooth Input	Yes
USB Input	Yes
Bluetooth Output	No
Bluetooth version	V4.2
Bluetooth effective range	≤10m
Frequency response range	120Hz-16kHz
Built-in Speaker Output Power	3Wx 2
Built-in Speaker Impedance	40
Operating temperature range	-10°C —+40`C
Adaptor	DC5V 1.5A
Turntable Size	12.8*9.8*4.7*(32.5*25.12cm)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the

following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the users authority to operate the equipment

Documents / Resources

	Udreamer UD001 Turntable System [pdf] Instruction Manual UD001, 2AZJY-UD001, 2AZJYUD001, UD001 Turntable System, UD001, Turntable System
--	---