



Udreamer UD002 Wireless Record Player Turntable Instruction Manual

[Home](#) » [Udreamer](#) » Udreamer UD002 Wireless Record Player Turntable Instruction Manual 

 
Udreamer UD002 Wireless Record Player Turntable Instruction Manual




Contents

- [1 Product Structure and Component](#)
- [2 Connection](#)
- [3 How to Play Bluetooth](#)
- [4 How to Play Vinyl Record](#)
- [5 Tonearm Ring Adjustment](#)
- [6 Turntable Specification](#)
- [7 U dreamer](#)
- [8 IMPORTANT SAFETY INSTRUCTIONS](#)
- [9 Highlight Features](#)
- [10 What are Included in the Package](#)
- [11 Udreamer WARRANTY](#)
- [12 Documents / Resources](#)
- [13 Related Posts](#)

Product Structure and Component

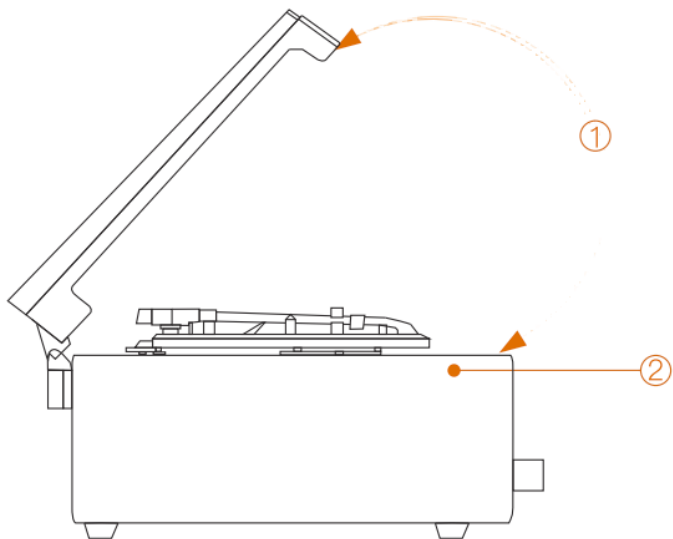


 1. Dust Cover
2. Turntable
3. 45 RPM Adaptor
4. Tone Arm Raise Lever
5. Tonearm Ring
6. Tone Arm
7. Tone Arm Clip
8. Auto Stop Switch
9. LP Speed Switch
10. Stylus

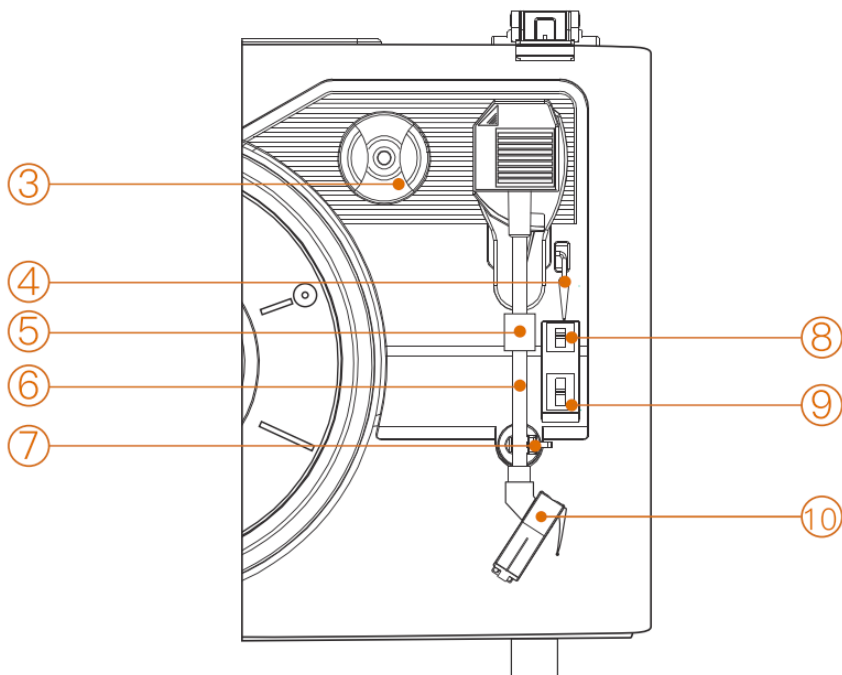

11. Light Indicator
12. Headphone Jack
13. Power Button And Volume Control
 - Rotate R/L To Turn On/Off

 
- Rotate R/L To Turn Up/Down The Volume

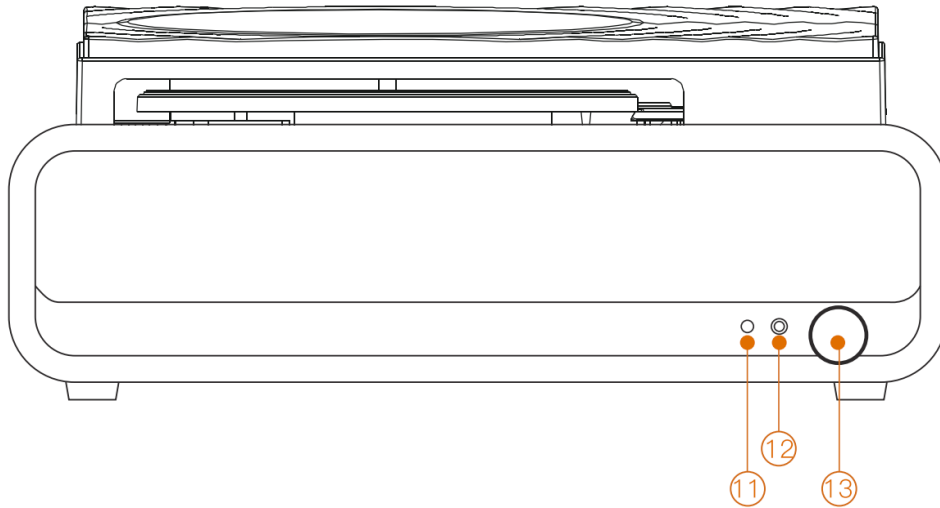

14. USB Input Jack


15. Aux Input Jack 16 RCA Output Jack

 16. Power Adaptor Jack

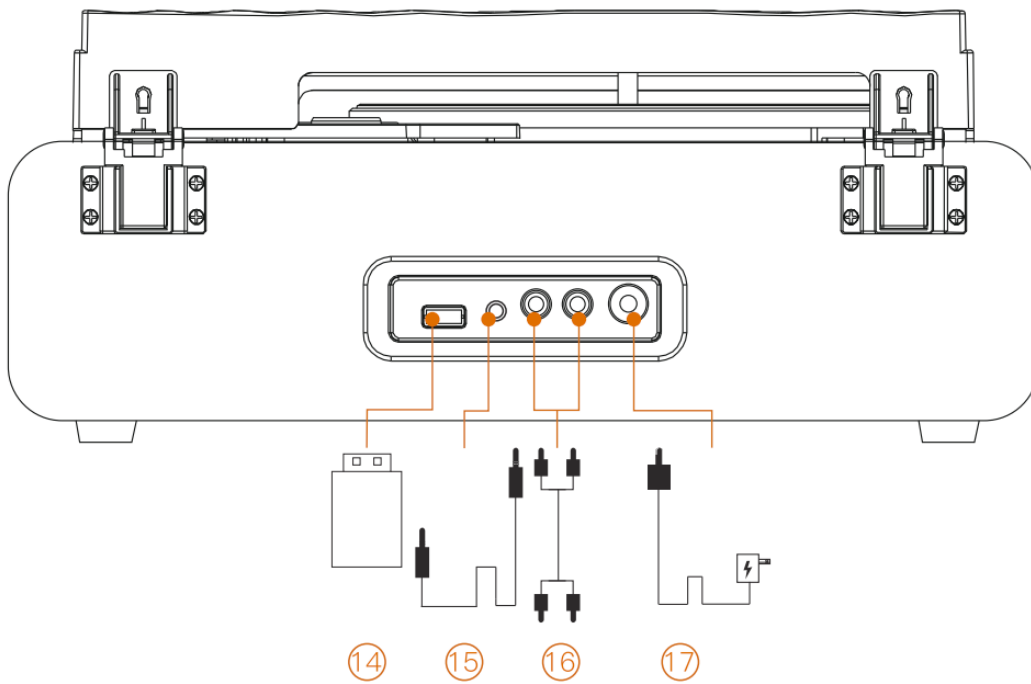

Connection

 1. Connect power adaptor to power adaptor jack.
2. Rotating the power knob (12) clockwise to turn on the unit, the power indicator will light on.

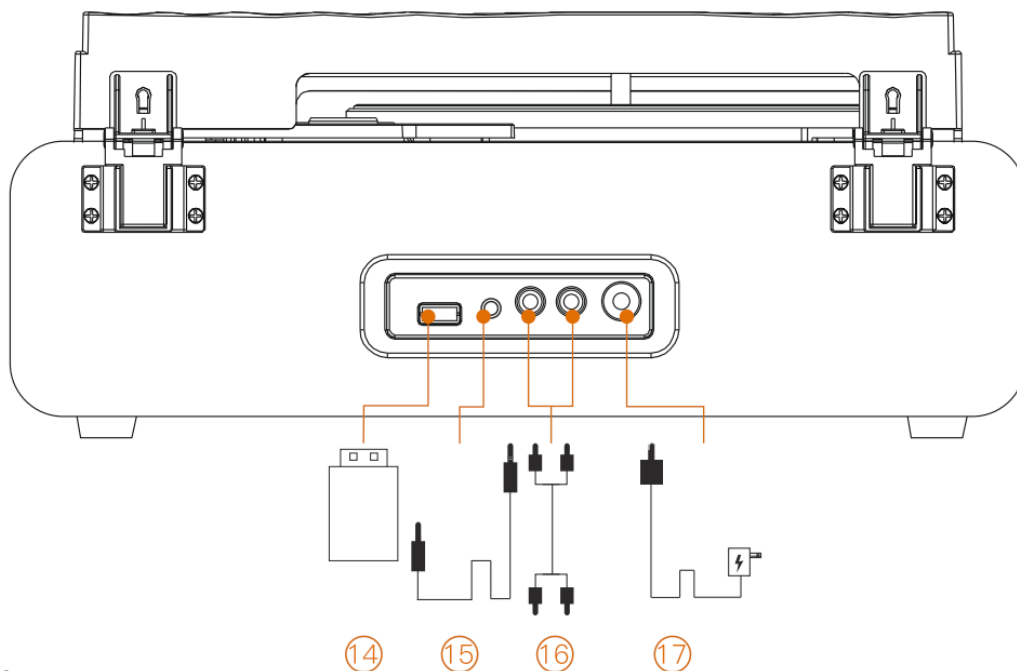

How to Play Bluetooth

1. When turn on the record player, it will show flashing blue light, means the turntable is searching and waiting to connect to Bluetooth
2. Switch the Bluetooth function of your Bluetooth output device on (such as a mobile phone) and select the Bluetooth equipment code "Turntable" to connect
3. When the Bluetooth device has connected successfully, the blue light will no longer flash but be static
4. Start playback of the music on your Bluetooth device and enjoy the music through the speakers of this turntable

Notes

1. When play vinyl record you cannot use the Bluetooth function, you need to stop playing vinyl record and putting the arm down, when the indicator show blue light flashing, you can connect with your phone or other Bluetooth devices.
2. If you want to connect the unit to another Bluetooth enabled device after you've already successfully paired, turn off the Bluetooth on the device that was previously paired with the unit. The light will be flashing blue again, repeat step 1-4 above.
3. This record player only support Bluetooth input, not support Bluetooth output. If you want to connect an external speaker, please connect it via RCA jack.

 
How to Play Vinyl Record

NOTED:


– Remove the stylus protector.

1. Place the record on the turntable, use the 45 rpm adaptor if required.
2. Set the speed selector to the correct position, depending on the record to be played.

3. Push the lift lever up to raise the tone arm from the arm rest, and then slowly move it to the record side. The turntable will start to rotate. (Turn off the "AUTO STOP" switch, the turntable will keep on rotating.)
4. Put down the lift lever to drop the tone arm and touch the record gently. vinyl playing starts now.
5. Push the lift lever upward to raise the tone arm from the arm rest, the turntable will still be rotating but vinyl playing will stop. To continue the playing, the lift lever needs to be put down.
6. Adjust the volume to the desired level.
7. At the end of a record, push the lift lever upward to raise the tone arm and move it to the arm rest, and then put down the lift lever.
8. Turn off the turntable or stop manually (Lift the tone arm from the record and return it to the arm rest).

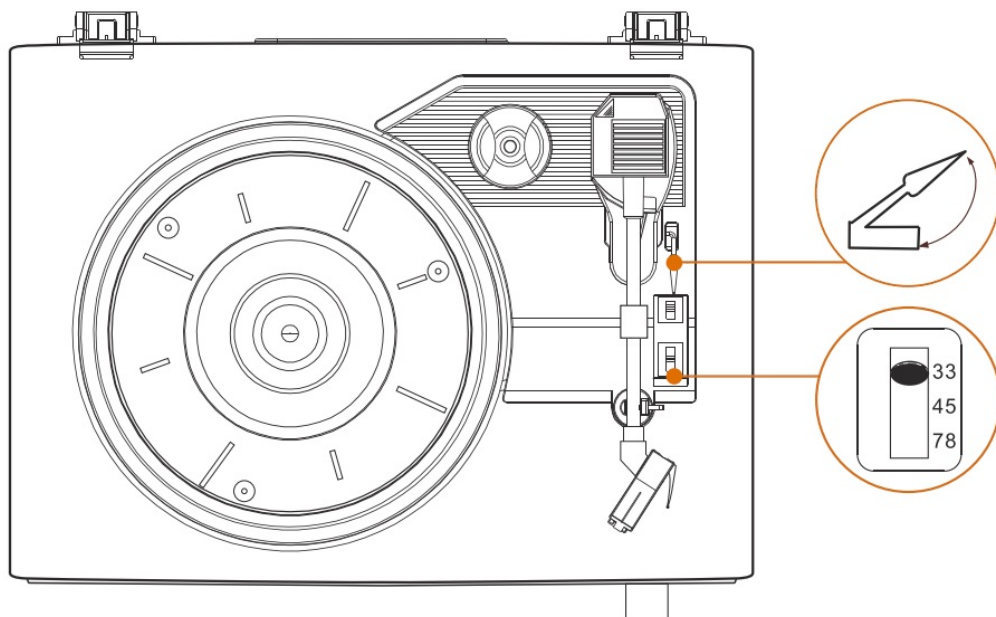

Tonearm Ring Adjustment

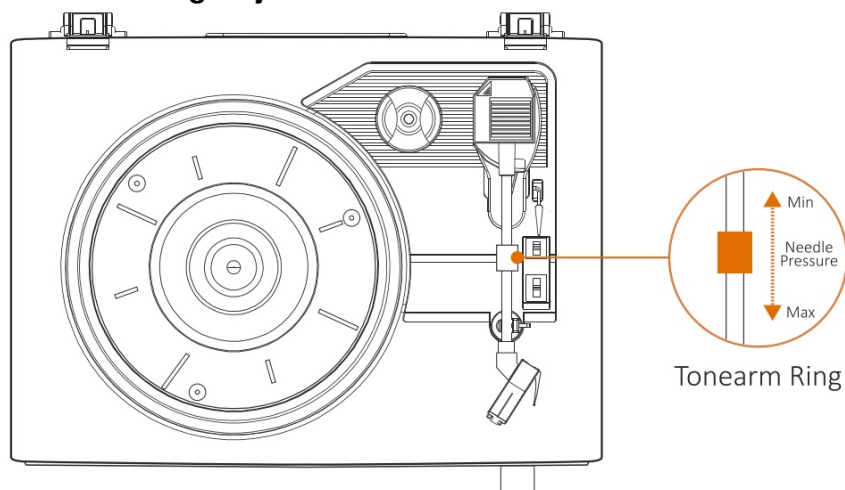 

1. As the tonearm ring moves closer to the needle, the heavier the needle pressure will be, the lighter it will be otherwise
2. Normally please keep the tonearm ring at the Min needle pressure position
3. If you want to adjust the sound effect, or try other troubleshooting but still skip songs, you can place the tonearm on its rest then adjust the position of the tonearm ring moderately

How to Use Auto Stop Switch

1. When you choose “turn on” the AUTO STOP switch, the turntable will stop spinning automatically
2. When you choose “turn off” the AUTO STOP switch, the turntable will keep spinning
3. If your vinyl has a few songs, we advise you turn on it, after music finishing, it will stop spinning
4. If your vinyl has many songs, we advise you turn off it, it may stop playback in the middle if you turn on it
5. **Note:** Sometimes, when your record has been scratched or damaged, it may still keep spinning or repeat skipping even if you turn on the AUTO STOP switch, in this case, we advise you change the record or position the tone arm to its original place to stop it.

How to Connect External Speakers

1. **For Active Speakers:** Connect the RCA audio cable to the RCA Output Jack at the back of the turntable then plug the other end into your active speakers, the sound will be transferred from turntable to your external active speakers
2. **For Passive Speakers:** Connect the RCA audio cable to the RCA Output Jack at the back of the turntable, then plug the other end into an amplifier, next, connect the amplifier with your passive speakers, the sound will finally be transferred from turntable to your passive speakers

Turntable Specification

Item	Specification
Item Model	UD002
Drive System	Belt Drive
Rated Voltage(adaptor)	100-240v
Speed	33 1/3 RPM, 45 RPM and 78 RPM
Bluetooth Input	Yes
USB Input	Yes
Bluetooth Output	No
Bluetooth Version	V5.2
Bluetooth Effective Range	5_10m
Frequency Response Range	120Hz-16kliz
Built-in Speaker Output Power	3Wx 2
Built-in Speaker Impedance	40
Operating Temperature Range	-10 C—+40 C
Adaptor	DC 5V 1.5A

U dreamer

Warning

TO PREVENT FIRE OR SHOCK HADARD, DO NOT USE THIS LUB WITH AN EXTENSON COND
RECEPTACLE OR OTHE ROUTLET UNLESS THE BLADES CAN BE FULL INSERTED TO PREVENT BLADE

SURE TO PREVENT FOR SHOCK HARD DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE

 
IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that product heat
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for a long periods of time.
14. the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. This appliance shall not be exposed to dripping or splashing water and that no object filled with liquids such as vases shall be placed on the apparatus.
16. Do not overload wall outlet. Use only power source as indicated.
17. Use replacement part as specified by the manufacturer.
18. Upon completion of any service or repairs to this product, ask the service technician to perform safety checks.
19. Power Sources- This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instruction.
20. Object and Liquid Entry- Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
21. Damage Requiring Service- Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a) When the power-supply cord or plug is damaged,
 - b) If liquid has been spilled, or objects have fallen into the product,

- c) If the product has been exposed to rain or water,
 - d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - e) If the product has been dropped or damaged in any way,
 - f) When the product exhibits a distinct change in performance- this indicates a need for service.
22. Main plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
 23. Excessive sound pressure from earphones and headphone can cause hearing loss.
 24. Minimum distances of 10 cm around the apparatus for sufficient ventilation.
 25. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
 26. No naked flame sources, such as lighted candles, should be placed on the apparatus.
 27. The use of apparatus in moderate climates.

Highlight Features

1. Belt-driven System M
2. Built-in 2*3W Speakers
3. Bluetooth **Input**: Freely listen to phone music via Bluetooth (**Note**: This record player only support Bluetooth input ,not support Bluetooth output)
4. **USB Input**: You can transfer music from other device via USB and play it on turntable
5. **RCA Line-out**: Allows convenient connection of external speakers (**Note**: for active speakers, pls connect turntable with active speakers directly via RCA line out;for passive speakers, pls connect turntable with amplifier first via RCA,then connect amplifier with passive speakers)
6. **Aux Input**: Connect devices with AUX Output like iPad via AUX input jack
7. **Support 3 Speeds**:33,1/3RPM 45RPM:78RPM Play 3 Sizes of Records:"10",12" \
8. **Headphone Jack**; 45 Adaptor; Tone Arm Lifter Removable Dust Cover SV 154 Power Adaptor
 1. **Bluetooth Mode: The Indicator Light**: Blue
 2. **LP Mode: The Indicator Light**: Green

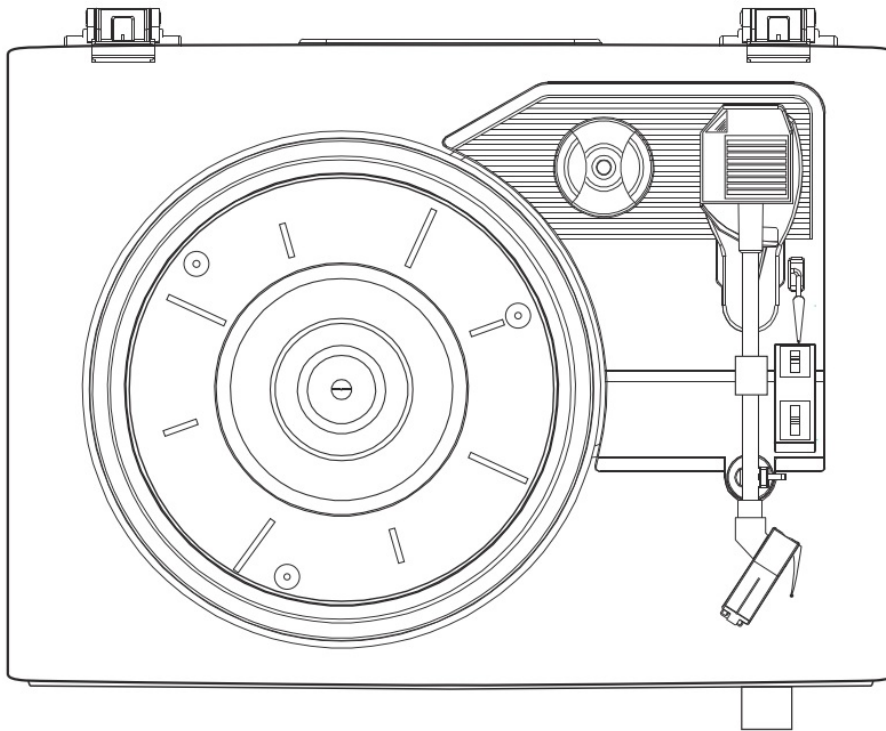

What are Included in the Package

After opening the package, please check the items as below carefully before using.

1. Turntable*1pcs
2. User Manual*1 pcs
3. DC Adaptor 100240V, 5V, 1.5A * 1 pcs

Service

Tech support email: us262966@yeah.net

Udreamer WARRANTY

1. Warranty

Terms Within 1 month from the date of purchase, any problems caused by product's performances under normal operation, without overhaul, can be replaced for a new turntable. Within a half of year from the date of purchase, any problems caused by product's performances under normal operation, without overhaul can be accepted by maintenance service.

2. This Warranty Card Automatically Expires under the Following Circums Tances. But Customer Can Still Enjoy Fee-Based Maintenance Services.

- a) No "Udreamer" trademarks disqualified products.
- b) Disassembling, replacing the failure product without authorization.
- c) The product with series number missing or altered.
- d) The fault or damage caused by man-made or abnormal operations. (subject to the environmental with too wet or too dry, unstable voltage or current, zero ground voltage is too larger, etc.)
- e) For all damages from outside force including liquid, crack, improper plugging, insect pests, etc.
- f) Natural consumption. the nature consumption of shell, patch components, wear and aging)
- g) Damage caused by force majeure (e.g. fire, flood. earthquake and other disasters)

h) The fault caused by software operation outside the scope of Udreamer permission.

i) The failure product NOT belonging to Udreamer.

3. Maintenance Service Notices


User must send the product for repairing or maintenance. Before sending it, please contact the post-sales department of Udreamer to ascertain the cause of fault and fill up the maintenance application form. The original or a copy of purchase voucher(invoice) is needed when consumer sends the product to Udreamer. The service of “warranty” or “maintenance” is applicable to electrical components only(hardware board). It does not include the shell, manual ,packing or other accessories.

4. Particularly Declaration

Udreamer shall NOT be responsible for any mechanical failure or a result of direct and indirect losses caused by software problems. The native consumer is protected by the consumer protection laws of his local country, if consumer buys product in a foreign country, the consumer must follow the foreign country’s consumer protection law.

Interpretation of this warranty card owned by Udreamer

Documents / Resources

	Udreamer UD002 Wireless Record Player Turntable [pdf] Instruction Manual C1pqI-XDKGL, UD002, UD002 Wireless Record Player Turntable, Wireless Record Player Turn table, Record Player Turntable, Turntable
--	---