



Udreamer UD009 Wooden Bluetooth Input and Output Turntable User Manual

[Home](#) » [Udreamer](#) » Udreamer UD009 Wooden Bluetooth Input and Output Turntable User Manual 

Contents

- 1 Udreamer UD009 Wooden Bluetooth Input and Output Turntable
- 2 SAFETY INSTRUCTION
- 3 PRODUCT STRUCTURE AND COMPONENT
- 4 Package list
- 5 Turntable specification
- 6 Cartridge :Audio Technical AT-3600L
- 7 TURNTABLE SET UP
- 8 Turntable platter and belt setup
- 9 Cartridge tracking force adjustment
- 10 Speed alignment
- 11 Main power connection
- 12 OPERATION
- 13 Turntable Opetation
- 14 Bluetooth transmission/Bluetooth output
- 15 Record the vinyl to your computer
- 16 Software Playthrough
- 17 Monitoring
- 18 Recording
- 19 Recording, editing and exporting
- 20 Turntable body
- 21 Stylus tip
- 22 Replacing the stylus
- 23 When the turntable is moved
- 24 TECH SUPPORT
- 25 Documents / Resources
 - 25.1 References
- 26 Related Posts





SAFETY INSTRUCTION



Read and understand this entire manual before using this product. Keep these instructions for future reference.

1. Do not use this product near water.
2. This product should be operated only by the type of power source indicated on the marking label or in this instruction manual.
3. Do not defeat the safety purpose of the polarized plug. A polarized plug has two blades with one blade wider than the other. This plug will fit into the power outlet only one way. If you are unable to insert the plug fully into the outlet try reversing the plug. If the plug should still fail to fit, contact your electrician.
4. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the product.
5. Do not overload wall outlets, extension cords, or integral convenience recaptures as this can result in a risk of fire or electric shock.
6. Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
7. Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer al servicing to qualified service personnel.
8. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
9. Do not use attachments not recommended by the product manufacturer as they may cause hazards.
10. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
11. Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating. Do not block or cover these openings.
12. Unplug the product during lightning storm or when unused for long periods of time.
13. This product can be used only in countries where the product is sold. Make sure that the operating voltage and

the plug of AC the adapter of the product are correct for the country you live in.

PRODUCT STRUCTURE AND COMPONENT

1. Motor Pulley
2. Drive Belt
3. Turntable Sub-Spindle
4. Turntable Sub-Platter
5. Turntable Platter
6. Counterweight
7. Tonearm Rest
8. Tonearm Lift Lever
9.) Tonearm Clip
10. PHONO& Bluetooth Input /Output Switch
11. Power Indicator
12. Volume Switch
13. Stylus Cartridge
14. Ground Connector
15. Phono & Line Out Jacks
16. Line Out Phono
17. USB Port for PC Link
18. 33/45 RPM Selector
19. Auto Stop Selector
20. Pilch
21. Power Cord Jack
22. External Speaker Jacks

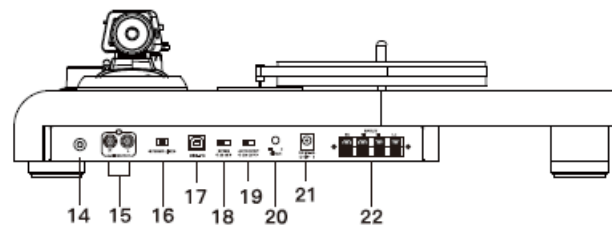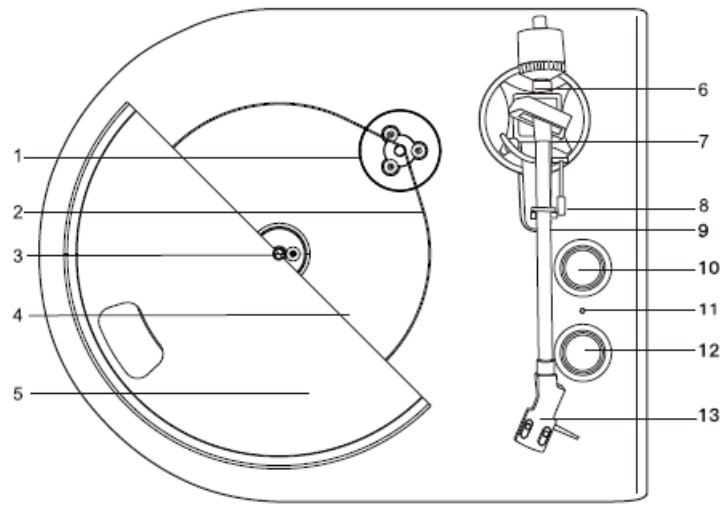

Package list

Before installing the turntable, check the package contents to ensure all parts below are included and free of visible damage. Please retain the original packaging materials for exchange or return purposes.

- 1*Turntable Unit
- 1*Turntable Lid
- 1*Mat
- 1*Turntable Platter
- 1*Tonearm Counter Weight 1*45 RPM Adapter
- 1 *Drive Belt
- 1 *Sub-Platter
- 1 *Belt-Hook
- 1*9V/2.0A DC Adapter 1 * PC Link Cable
- 1*RCA Cable
- 1 *User Manual

Turntable specification

Power	AC power adapter, DC output 9V2A
Power Consumption	36W
Turntable Speed	33 1/3,45 RPM
Wow and Flutter	±0.15%
Signal to Noise	65dB
Tracking Force Range	0-6.0g
Effective Tonearm Length	8.6"(218.5mm)
Dimensions(L x W x H)	16.9"×13.38x1.1"(430*340*128mm)(lid closed),16.9"×13.38"×15.67"(430*340*398mm) (lid open)
Weight	13.42lb(6.1kg)



Cartridge :Audio Technical AT-3600L

Frequency Response	20Hz-20kHz
Channel Balance	<2.5dB
Channel Separation	>18dB
Output Voltage	2.5mV
Recommended Load Resistance	47kΩ
Amplifier Connection	MM -input
Recommended Tracking Force	3.5±0.5g
Weight	0.18oz

TURNTABLE SET UP


Turntable installation

- Mount the product on a level surface.
- To avoid the effects of vibrations and acoustic pressure, do not mount the product next to such items as speakers.
- The product may pick up radio static if placed next to a radio. Therefore, try to keep the product away from radios.
- If the product is near equipment (cell phone, etc.) that emits strong radio waves, noise may occur.

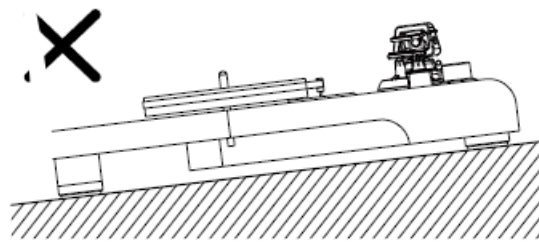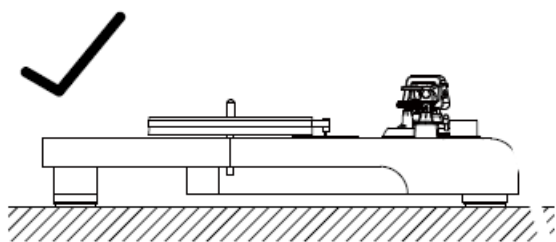


Turntable platter and belt setup


- Loop the belt onto the sub-platter

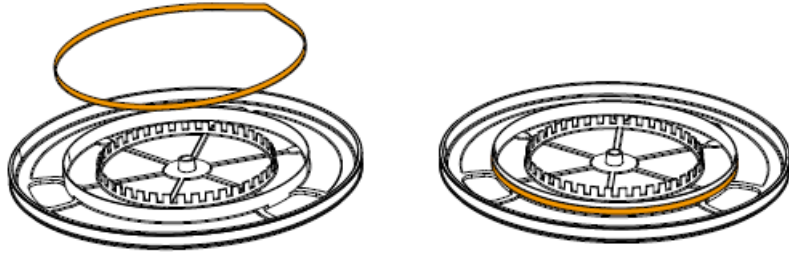


- Carefully place the main platter to the spindle located in the middle of the turntable

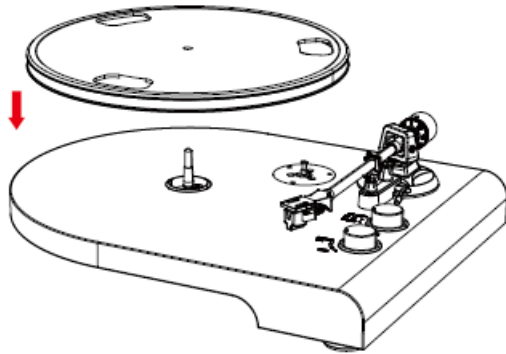

- Loop the belt onto the motor pulley

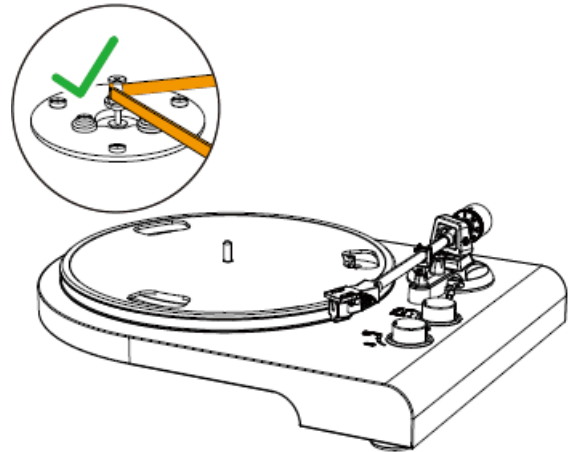


- Slowly rotate the platter ten times in the direction of the arrow for resetting the auto mechanism to avoid any twists in the belt and make sure the belt rides smoothly along the drive rim on the underside of the platter

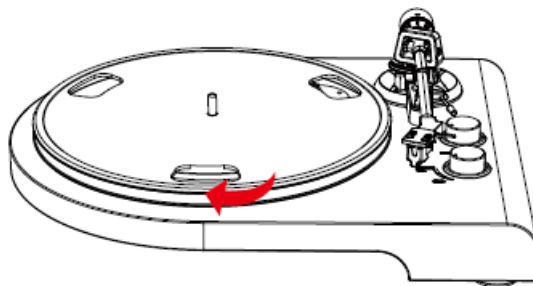

Cartridge tracking force adjustment

The Counterweight supplied is suitable for cartridges weighing between 1.6-3.59.

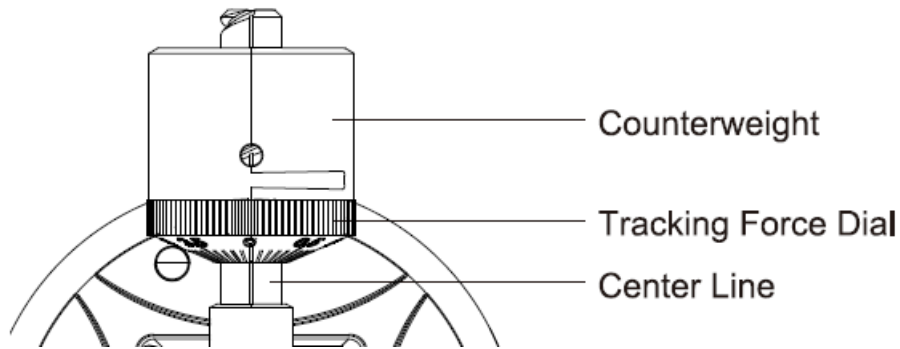


1. Gently push and turn the Counterweight onto the rear of the tonearm (with the dial facing toward the front of the turntable).
2. Pull the protector straight forward to remove it.





Notes



Applying a downward force may cause the stylus to come off the body. Only low volume is output if the stylus has come off, or is about to come off, so refer to “Replacing the stylus” to reattach the stylus correctly.

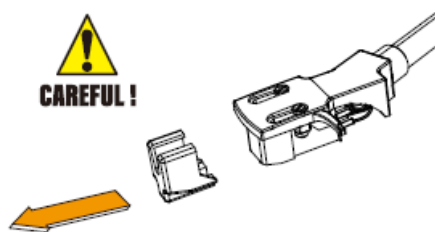



3. Remove the tie-wrap and unlock the tonearm.
4. Lower the tonearm lift lever and position the cartridge in the space between the tonearm rest and platter.
5. Carefully rotate the Counterweight until the tonearm achieves a neutral balance. The tonearm should return to this balanced position if it is moved up or down. This adjustment must be done carefully.

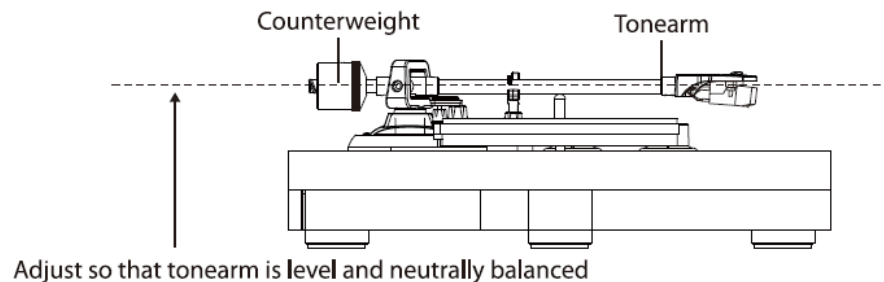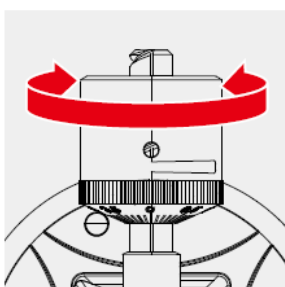

6. Once the tonearm is correctly balanced, return the tonearm to its rest. Hold the Counterweight without moving it, and gently rotate the tracking force dial until the zero is in line with black center line on the rear of the tonearm. Check to make sure the tonearm is still neutrally balanced.

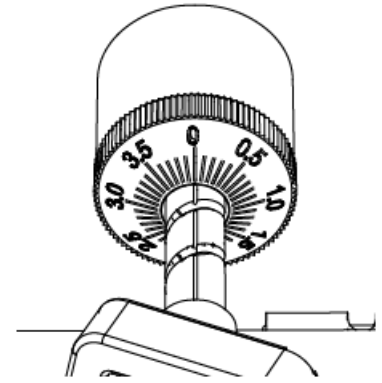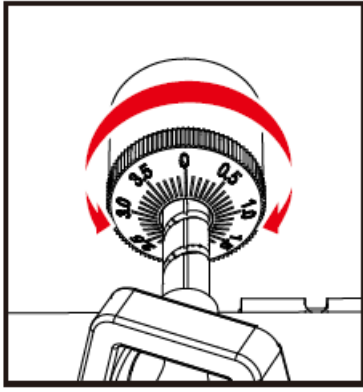

7. Rotate the counterweight counter clockwise (as seen from the front) to adjust the tracking force according to the cartridge manufacturer's recommendations.

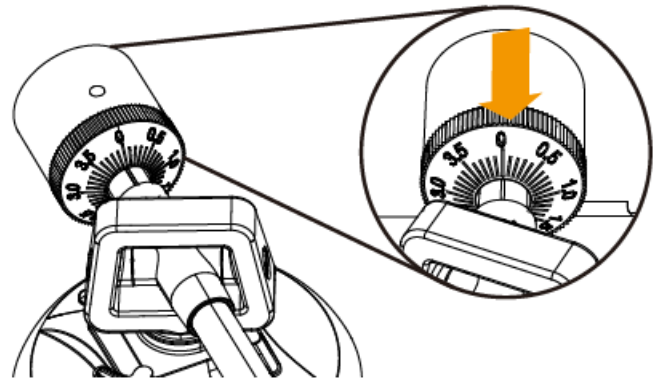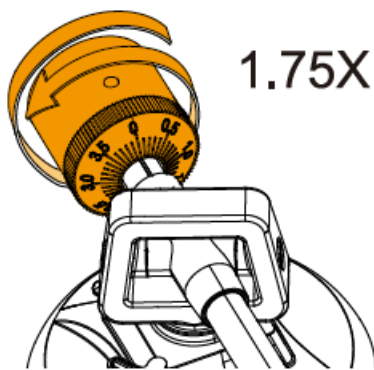

Notes

Each mark on the scale represents 0.05g. The recommended tracking force for the factory-installed cartridge is $3.0g \pm 0.5g$. The cartridge tracking force only goes up to 2g for one rotation of the tracking force dial. You will need to make more than one rotation to reach 3.5g.


Speed alignment

- The pitch adjust control (20) is made to adjust the turntable speed lightly. To check if the speed of a record that is playing is correct, and if it needs to be adjusted, do the following:
- Usually ,the strobe dots is in the middle between “-” and “+”
- For faster speed, slowly turn the Pitch Control (20) in the “+” direction. For slower speed, slowly turn the Pitch Control (20) in the “-” direction.

Connection to external amplifier with RCA audio cable

If you wish to use your amplifier or external speakers, please follow the instructions below

RCA wired connection

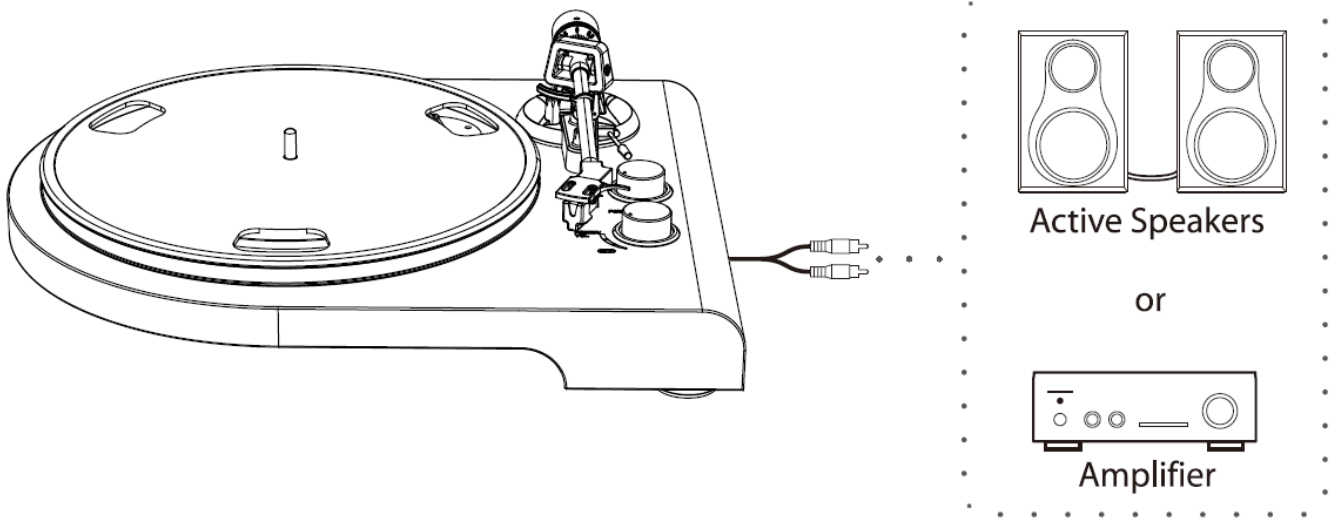

Setting pre-amplifier selector switch

- This product has a built-in phono equalizer function. You can use the product even if you do not have a phono amplifier or connectable equipment with a built-in phono amplifier.
- Use the pre-amplifier selector switch to set the output, as shown below.


Connectable equipment being used	Position of pre-amplifier selector switch	Where to connect RCA audio cable
Device with phono input	PHONO	Phono input jack and ground (earth) terminal of connectable equipment
Device without phono input	LINE	AUX or line input jack of connectable equipment

NOTE: The RCA Jacks are not designed to be connected directly to the passive/unpowered speakers on LINE mode. If connected to the passive speakers, there will be no sound.

Connecting the device

Align the settings for the pre-amplifier selector switch and connect the RCA audio cable to an input jack that is compatible with the connectable equipment you are using (amplifier, active speakers, etc.).

- Align the settings for the pre-amplifier selector switch and connect the RCA audio cable to an input jack that is compatible with the connectable equipment you are using (amplifier, active speakers, etc.).

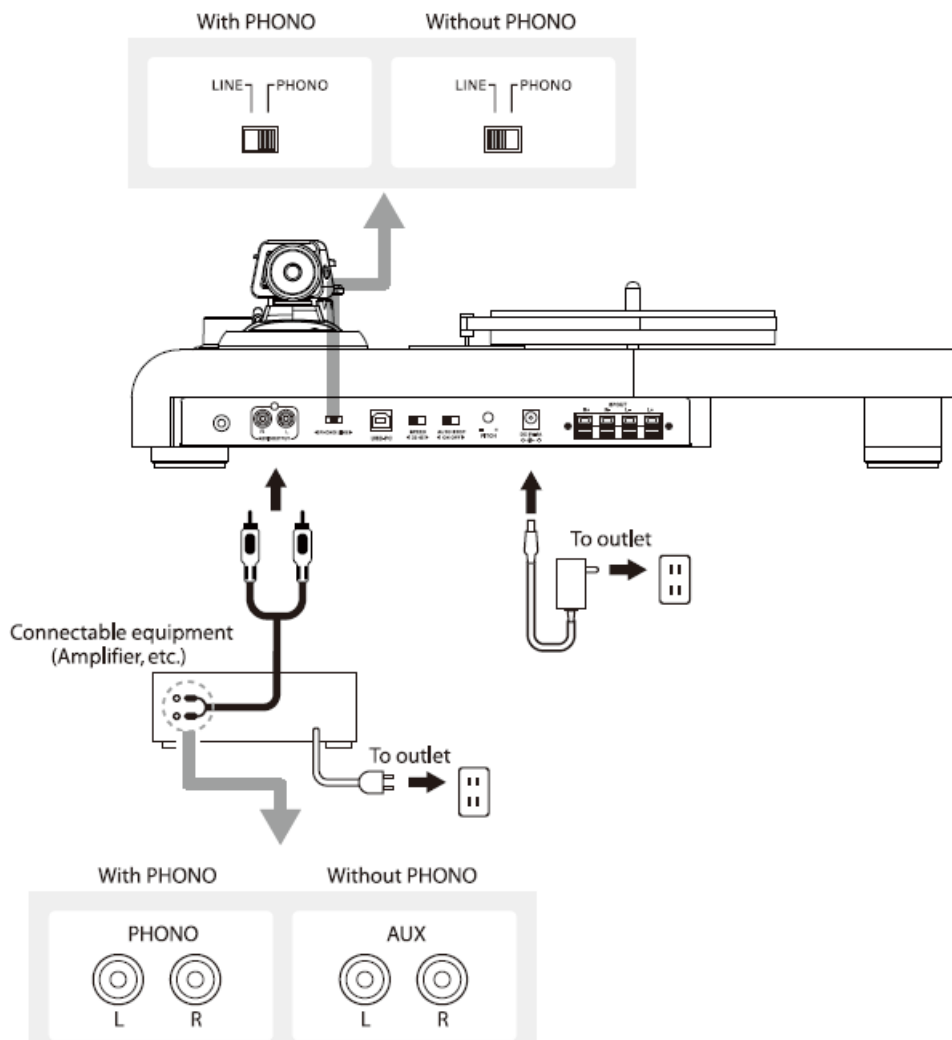

Main power connection

1. Insert the DC plug of the AC adapter cord into the DC INPUT Jack at the back of the turntable.
2. Plug the AC adapter into a normal power outlet.

NOTE: Do not plug the AC power adapter into a power outlet before all turntable assembly is completed. Before turning on turntable power, recheck all connections to make sure they are correct and secure. Always turn off the turntable before connecting or disconnecting from power.


OPERATION

Play a record


1. Before playing a record

Pull the protector straight forward to remove it.

Notes: Applying a downward force may cause the stylus to come off the body. Only low volume is output if the stylus has come off, or is about to come off, so refer to “Replacing the stylus” to reattach the stylus correctly.

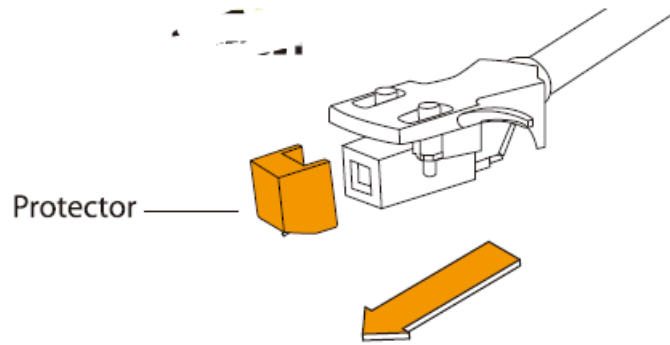

Place the record on the felt mat so that the center hole aligns with the spindle.

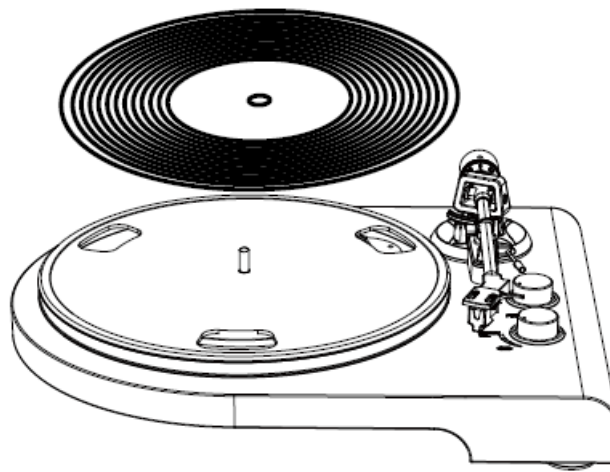

If playing a 45 RPM record with a large center hole, attach the 45 RPM adapter.

Turntable Opetation

- Turn on the power switch knob.
- Place a record on the turntable platter and select the desired speed(33/45) according to the record. NOTE: when playing a 45RPM record, use the included 45RPM adapter.
- Remove the white needle protector and open the tonearm clip to release the tonearm. Push the lift lever backward to raise the tonearm and gently move the tonearm towards the desired position over the record. Push the lift lever forward to lower the tonearm slowly
- onto the desired position on the record
- Choose PHONO mode to start playing

Notes

1. The turntable don't have built in speakers, so please connect your external speakers via RCA cable when in PHONO mode
2. Light will be red in PHONO mode

Bluetooth transmission/Bluetooth output

- This unit support Bluetooth Transmitter. which gives you the option to play your records/songs and listen to them wirelessly through an external Bluetooth speaker system.
- This can only be done if the external speaker has a built-in Bluetooth Receiver. The range is approximately 10 meters.

1. Switch on your external Bluetooth speaker/speaker system first.
2. Turn on the turntable and choose BT OUT.
3. The Bluetooth LED indicator will in blue flashing meaning it's searching for external Bluetooth speaker system to pair.

Once connected to the external Bluetooth speaker system, the Bluetooth LED indicator will lights blue steadily.

Note: It may take for about one minute for the first connection. This will be shorter for the second connection (if using the same Bluetooth speaker) – this is normal for this unit.

4. Starts playback of your records I songs

Notes

1. The Bluetooth transmission option is on the LINE&BT OUT&PHONE ([I]) switch at the back of the turntable ,press the switch middle to set up the Bluetooth transmission (When Bluetooth output working, RCA socket has no audio signal output).
2. This turntable only support Bluetooth Output, not support Bluetooth input.

Bluetooth receiver/Bluetooth input

1. Connect the included power adapter to the turntable and slide the Power Switch to the “ON” position.
2. Rotate the Mode Button to choose BT IN mode. Red light indicates PHONO mode. Blue light indicates Bluetooth Input mode. You will hear an activation sound from the turntable
3. Turn on the Bluetooth feature of your media device and search for and select “Turntable” to pair the media device and turntable.
4. Once your media device is successfully paired with the turntable, the turntable will play a short confirmation sound.
5. Play and stream music from your media device to the turntable.

Note: Bluetooth version 5.0

Record the vinyl to your computer

Please follow the below steps to set up Audacity to record from the USB audio device. For more details, please refer to the BRIEF INTRODUCTION OF AUDACITY at

https://manual.audacityteam.org/man/recording_with_usb_turntables.html

1. Download the Audacity software and complete installation

1.1 Ensure your Audacity software is up to date version from

<http://www.audacityteam.org/download/>

1.2 Follow the instructions to complete installation. You can download the current

2. Set up Audacity to record from the USB audio device

2.1 Connect the USB device Use the supplied USB cable to connect your turntable and your computer. No extra driver is required.

System settings needed for Windows and Mac

Windows

1. By the system clock, right-click over the Speaker icon select Sounds then the Recording tab, and then click on the USB device in the list and click Properties. Click the Advanced tab set your required bit rate and sample rate from the Default Format dropdown (normally " 2 channel 16-bit 44100 Hz ").
2. On the Advanced tab, in the "Default Format" section, make sure the dropdown menu is set to " 2 channel 16-bit 44100 Hz ".

For a more detailed walk-through of the above steps for Windows (or if that does not work for your version of Windows), see Windows: accessing the Windows Sound controls.

Mac

1. From Apple Menu > System Preferences select "Sound" and click on the Input tab
2. Select "USB Audio CODEC" or similar as the input device and verify the Recording Meter shows input.
3. If the recording meter in the Sound preferences panel does not show input:
 1. From the Finder, select Go > Utilities and open Audio MIDI Setup .
 2. If the Audio Devices window is not visible, select Window > Show Audio Devices.
 3. Select your USB input device in the list in the left pane of the Audio Devices window.
 4. Set the Format to "44100.0 Hz" and "2ch-16bit".

 
For a more detailed walk-through of the above steps for Mac, see Mac and USB input devices on the Audacity Wiki.

Launch Audacity.

If Audacity was already running when you connected the cable, choose Transport Rescan Audio Devices or restart Audacity.


Project Rate

Set the Audacity Project Rate in Selection Tool bar at the bottom left of the Audacity screen to 44100 Hz:



Devices

 Use Device Tool bar to set the recording and playback devices and to set the recording channels to "2 (Stereo) Recording Channels", as in the below example on Windows 10



- The Recording Device is set to the USB device (in this case the device name, but often called or including the phrase “USB Audio CODEC”).
- Recording Channels is set to stereo.
- The Playback Device is set to the named speakers of the built-in computer sound device. (Note: Pls choose computer built-in sound device output, otherwise, there will be no sound from computer output when replaying)
- These settings can also be changed in Devices Prefer Windows calls most USB external devices “microphones”. Some higher-end USB recording interfaces may appear as their explicit manufacturer’s name.

Software Playthrough

 
Use Transport > Transport Options > Software Playthrough (on/off) and click “Software Playthrough ” to turn it “on” (the checkmark is shown when it is “on”). This setting can also be enabled or disabled in Recording Preferences. Software Playthrough lets you hear the turntable through the computer speakers when recording. It also lets you hear the turntable without recording if you turn on monitoring (see the next section below).

Note: TPls choose computer built-in sound device output otherwise, there will be no sound from computer output when replaying

Monitoring

Enable monitoring to set the recording level

- Turn monitoring on by clicking once on the microphone icon in the Recording Meter.



- In Mixer Toolbar, turn up the left-hand playback volume slider (by the speaker icon).



- The right-hand recording volume slider (by the microphone icon) can often be used to vary the loudness of the recording, but it may not function with all turntables.
- If it does not, try adjusting the output level on the turntable (often, there is a gain control under the chassis).
- Alternatively, you may be able to adjust the input level on Windows and Linux only, usually by looking for the speaker icon by the system clock. On Windows, rightclick over the speaker icon> “Recording Devices”. Then right-click over USB Audio Codec, choose “Properties” and click the Level/stab.
- Try to aim for a maximum peak of around -6 dB, which corresponds to around 0.5 on the waveform You can always boost the level later with Effect > Amplify or Effect> Normalize after you have completed editing.

Recording

Then, ignoring any instructions in the manufacturer’s guide to select “stereo mix”, simply press the Record button • in Transport Tool bar to start recording from the turntable.

Recording, editing and exporting

Once your USB turntable is set up and working properly, go to the Basic Recording, Editing and Exporting section

of Audacity's Tutorial – Copying tapes, LPs or MiniDiscs to CD for instructions on how to

- make and edit your recording
- export it to an audio file
- import it to iTunes or Windows Media Player
- burn it to CD

Audacity's reference links

- Basic Recording, Editing and Exporting:
https://manual.audacityteam.org/man/basic_recording_editing_and_exporting.html
- • **Tutorial** – Copying tapes, LPs or MiniDiscs to CD:
https://manual.audacityteam.org/man/tutorial_copying_tapes_lps_or_minidisks_to_cd.html


CARE

Turntable body

- When the turntable body is dirty or dusty, first disconnect the AC adapter, and then wipe off the dirt and dust with a soft, dry cloth.
- Do not use benzenes, thinners, etc.
- When storing the product for a long time, disconnect the AC adapter from the outlet and wrap the product in plastic; do not allow it to become damp; the drive belt should be removed to prevent unequal stretching.

Stylus tip


- If dirt and grime are stuck to the stylus tip, clean it with a commercially sold brush.
- We recommend using a stylus cleaner (not included) if the stylus tip is considerably dirty. Clean the stylus tip by moving the brush from the rear to the front of the stylus tip.

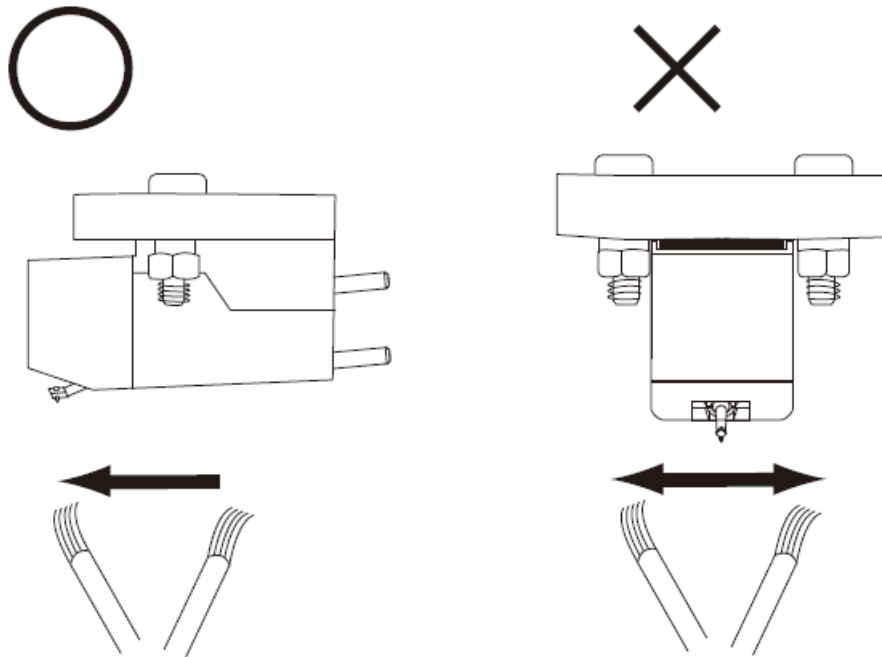

Replacing the stylus


- It's suggested to replace the stylus after 400 hours of use. Removing the Stylus
- In addition to the deterioration of sound quality, records may also be damaged as the cartridge's stylus tip wears down.
- Be sure to disconnect the product's AC adapter from the outlet.
- When replacing the stylus, hold the headshield and the cartridge body tightly.

Rotate the front of the stylus in a forward and down motion.

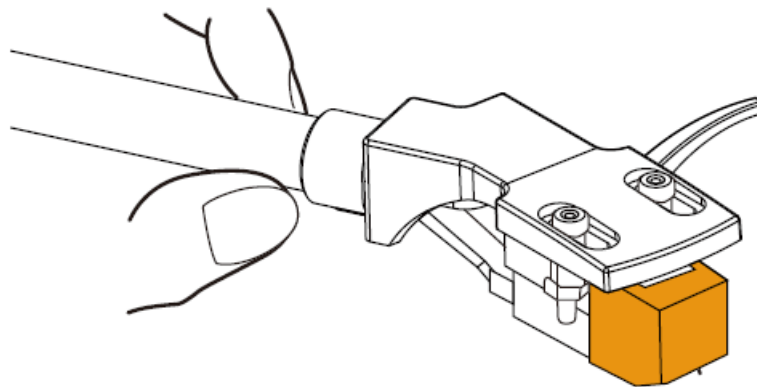


Installing a New Replacement Stylus



1. Mount the new replacement stylus to the cartridge

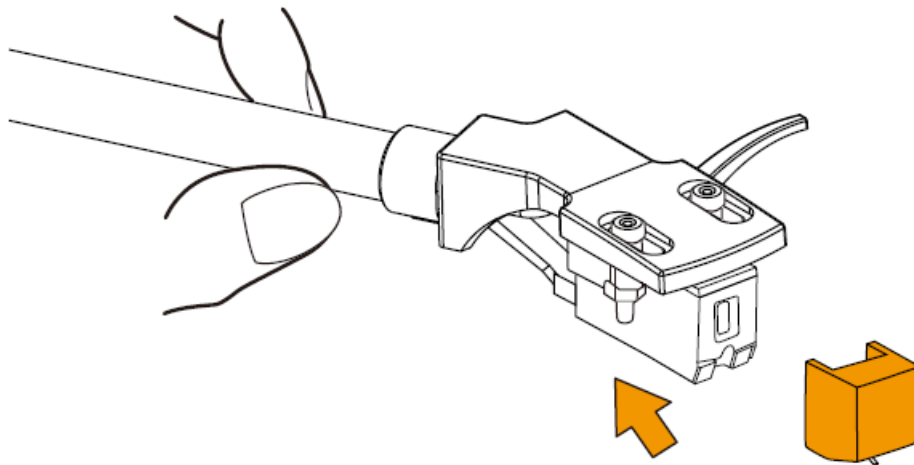

2. Lift the stylus up until you hear a click.

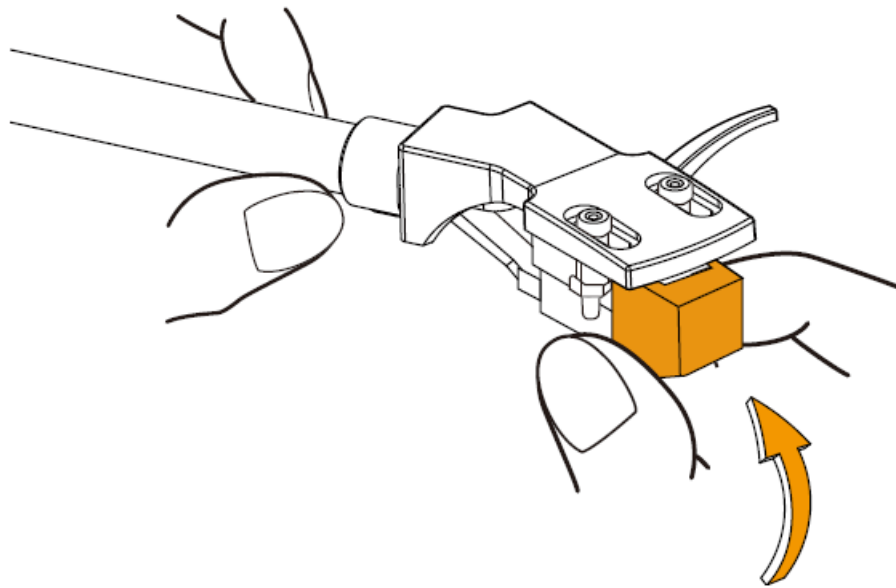

3. Make sure there is no gap between the headshield and the cartridge.

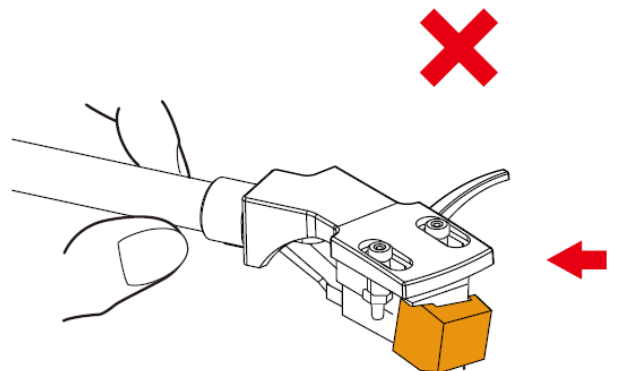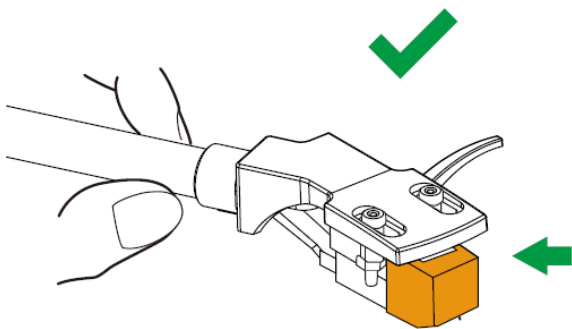

When the turntable is moved


Using the product's original packing materials, wrap the turntable in the reverse order from when you unwrapped it. If you do not have the packaging materials, take the following measures:

- After disconnecting the AC adapter from the outlet, remove the felt mat and platter, and then wrap them so that they do not get damaged.
- Attach the protector to the cartridge.
- Use a string or something similar to tie the tonearm to the rest so that it does not move.
- Wrap the turntable body with paper or a soft cloth so that it does not get damaged.

TECH SUPPORT

- Email: support@retrolifeplayer.com
 - Website: Retrolifeplayer.com
-

Documents / Resources

 <p>The image shows the cover of the user manual for the Udramer UD009. It features a photograph of the wooden turntable with a black vinyl record on the platter. Text on the cover includes the Udramer logo, the model name 'UD009 PRO TURNTABLE SYSTEM', and the title 'USER MANUAL'. Contact information for support@retrolifeplayer.com and the website is also visible.</p>	<p>Udramer UD009 Wooden Bluetooth Input and Output Turntable [pdf] User Manual UD009, UD009 Wooden Bluetooth Input and Output Turntable, Wooden Bluetooth Input and Output Turntable, Bluetooth Input and Output Turntable, Input and Output Turntable, Output Turntable, Turntable</p>
---	---

References

- [User Manual](#)

[Manuals+](#)