

Uhuru UEKM-20 2.4GHz Wireless Ergonomic Keyboard and **Mouse Combo User Manual**

Home » Uhuru » Uhuru UEKM-20 2.4GHz Wireless Ergonomic Keyboard and Mouse Combo User Manual



Contents


- 1 Uhuru UEKM-20 2.4GHz Wireless Ergonomic Keyboard and Mouse
- **2 Keyboard Product Overview**
- **3 Mouse Product Overview**
- **4 Keyboard Specifications**
- **5 Mouse Specifications**
- 6 Install the Batteries
- 7 Install Battery in the Mouse
- 8 Install Battery in the Keyboard
- 9 Connecting the Receiver
- 10 Multimedia Hotkeys Functions
- 11 Power-Save function
- 12 Restore factory default settings
- 13 Cleaning and Maintenance
- 14 General Safety Warnings
- 15 FCC Statement
- 16 Documents / Resources
- 17 Related Posts



Uhuru UEKM-20 2.4GHz Wireless Ergonomic Keyboard and Mouse Combo




Keyboard Product Overview

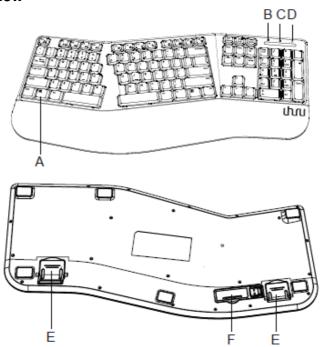

- Windows key
- Num lock indicator
- · Caps lock indicator
- Low battery indicator
- Keyboard scaffold
- Battery compartment

Mouse Product Overview

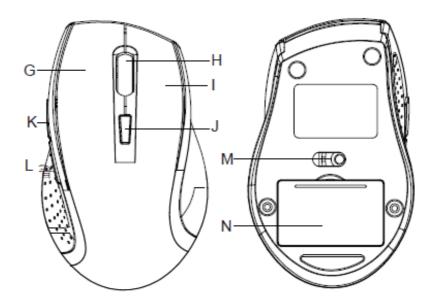

- · Left key
- Roller
- Right Key
- DPI Switch
 - 800/1200/1600
- Forward
- Back
- Switch
- Battery

Keyboard Specifications

- Model No UEKM-20
- Transmission mode 2.4G wireless
- **Keys** 104 keys
- Product Size 501*212*41.5MM
- Product Weight about 1105g
- Working Voltage 3V AA 1.5V*2
- Working Current 6-15MA
- Working Distance up to 8 meters
- Support System WinXP/ Win7/Win8/ Win10 etc.

Mouse Specifications

• Transmission Mode 2.4G wireless

• Number of Buttons: 6

Product Size: 120*74*43MMProduct Weight: about 80g

• Photoelectric Ic: 3065

• **Dpi:** 800/1200/1600 Default 1200

• Rate of Return: 125hz

• Working Voltage: 3v (AA 1.5v*2)

• Working Current: 6-12MA

• Support System: WinXP/ Win7/Win8/ Win10 etc.

Install the Batteries

• The RF2.4GHz Optical mouse use 2*AA alkaline batteries.


• The RF2.4GHz Optical keyboard use 2*AAA alkaline batteries.

Install Battery in the Mouse

• Step 1: Open the battery compartment


• Step 2: Insert the battery as shown inside the battery compartment

• Step 3: Replace the cover

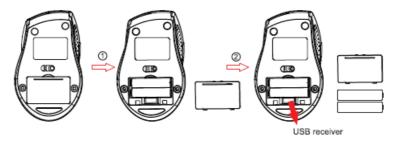


Install Battery in the Keyboard

- **Step1:** Remove the battery compartment cover on the bottom of the keyboard by squeezing the cover in from the tab to release it
- Step2: Insert the batteries as shown inside the battery compartment
- Step3: Replace the cover

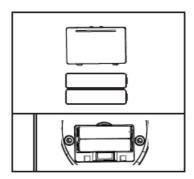

Connecting the Receiver

• Pls, insert the USB receiver into the USB port of your computer or laptop.(* USB nano receiver is inserted on the back of the mouse.

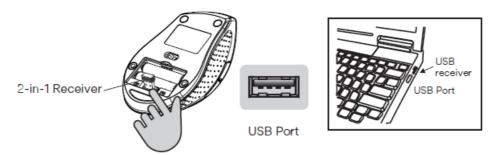

• The connection will be done automatically after 1-3 seconds.

Multimedia Hotkeys Functions

- FN+ESC Music
- FN+F1 Play/Pause
- FN+F2 Previous Track
- FN+F3 Next Track
- FN+F4 Volume Down
- FN+F5 Volume UP
- FN+F6 Mute
- FN+F7 Homepage
- FN+F8 Search
- FN+F9 Favorite
- FN+F10 Mailbox
- FN+F11 Calculator
- FN+F12 My computer


Power-Save function


- The keyboard and mouse will automatically power off when not in use.
- When the low battery indicator lights up on the keyboard, please replace the batteries.

Restore factory default settings

When you find this set doesn't work, you can make the mouse back to working condition by restoring the mouse back to factory default settings.

- 1. Check the battery volume is normal; if the battery is used out, please replace new batteries.
- 2. For the mouse, reinsert the USB receiver onto the USB port of the PC or notebook, then reinstall battery again to the mouse.
- 3. For the keyboard, reinsert the USB receiver onto the USB port of the PC or notebook, then reinstall battery again to the mouse.

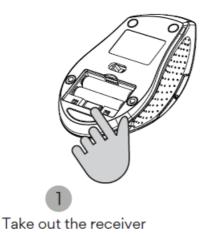

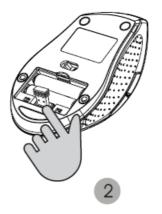

Store the receiver

Cleaning and Maintenance

Unplug or turn off the product before cleaning it. Only use a soft, dry cloth for cleaning the product; do not use a damp cloth. Never clean with industrial-strength polish, wax, benzene, paint thinner, air freshener, lubricant, detergent, or other chemicals. Wipe off any moisture, dirt, or dust on the power plug pins with a clean, dry cloth.

Disposal

Always dispose of the used appliance at a recycling center. Do not dispose of the used appliance together with the household waste.

Note: Due to 2.4G wave technology adoption, the connection can be subject to interference from obstacles, like walls, metals, or other electronic devices. Please keep the space between the keyboards and the USB receiver free of obstacles. In line with the policy of continuous development, the manufacturer reserves the right to amend the specifications without prior notification.

The illustrations in this user manual are for reference only. Please operate according to the real design.

General Safety Warnings

- Make sure the location for the product is well ventilated, away from damp and cold, protected from overheating
 and away from direct sunlight, away from moisture drips or splashes and protected from excessive dust or
 grease.
- Do not place the product set near heat sources (eg. radiators, stoves, electrical equipment, amplifiers).
- Do not place containers with liquids (eg. vases) or with small metallic objects on top of the product.
- Do not place any naked flame sources (eg. lit candles, cigarettes) on the product.
- Supervise young children to ensure they do not play with the product. When removing or replacing batteries, make sure to keep them out of reach of infants and children.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may

cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by the manufacturer could void your authority to operate this equipment.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

Thank you for your trust!

• Need some help: support@uhurumobility.com

For more products: www.uhurumobility.com

Documents / Resources

Uhuru UEKM-20 2.4GHz Wireless Ergonomic Keyboard and Mouse Combo [pdf] User Man ual
UEKM-20M, UEKM20M, 2AYO2-UEKM-20M, 2AYO2UEKM20M, UEKM-20 2.4GHz Wireless Er gonomic Keyboard and Mouse Combo, UEKM-20, 2.4GHz Wireless Ergonomic Keyboard and Mouse Combo

Manuals+.