



UISP LBE-5AC-XR-US Litebeam AC 5 GHz XR Instruction Manual

[Home](#) » [UISP](#) » UISP LBE-5AC-XR-US Litebeam AC 5 GHz XR Instruction Manual 




5AC-XR-US Litebeam AC 5 GHz XR Instruction Manual

Contents

- [1 LBE-5AC-XR-US Litebeam AC 5 GHz XR](#)
- [2 Documents / Resources](#)
- [3 Related Posts](#)

LBE-5AC-XR-US Litebeam AC 5 GHz XR



--	--

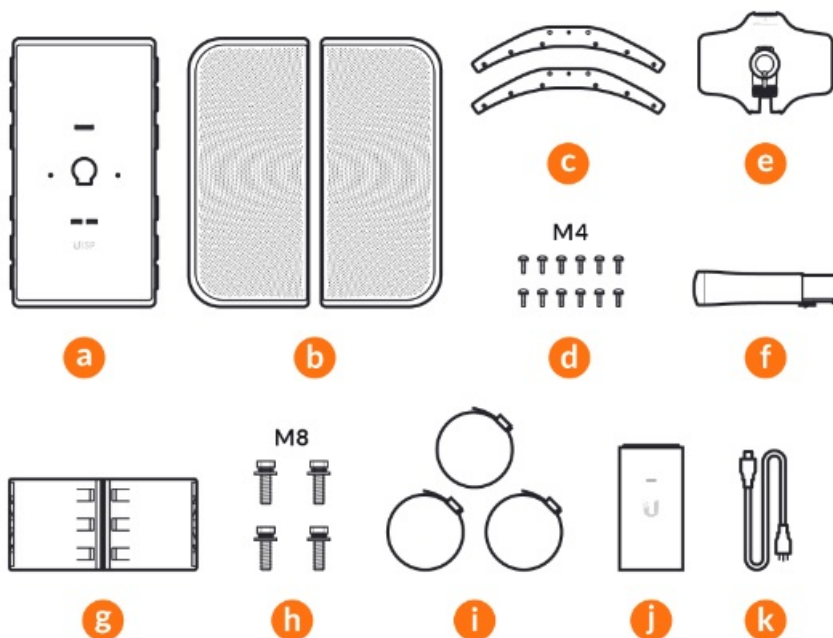


1



2

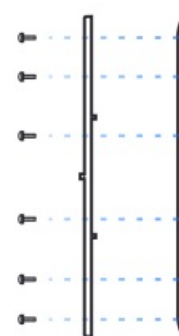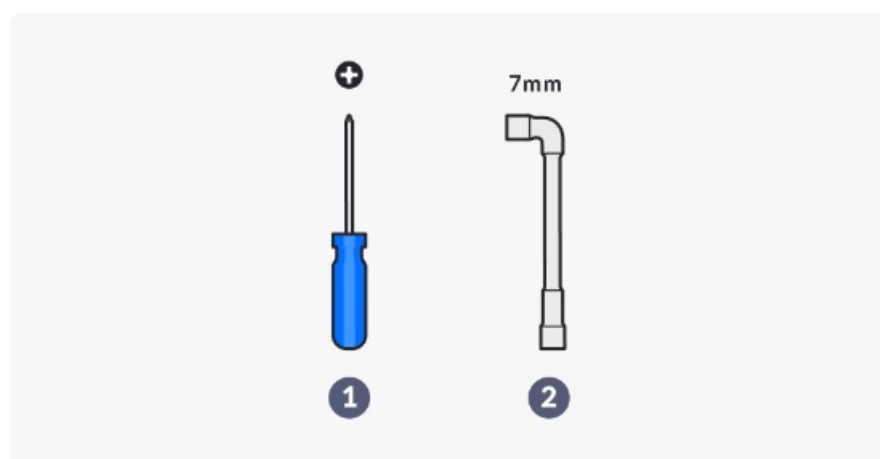


3

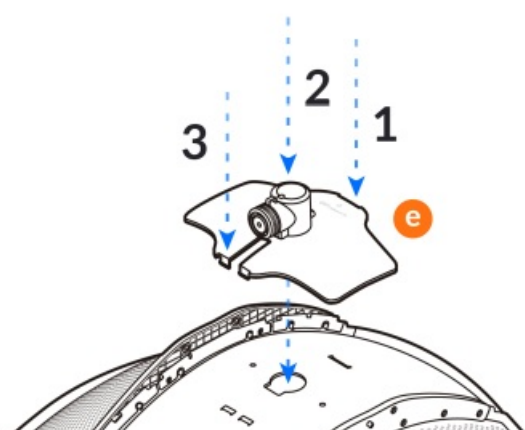


6

4

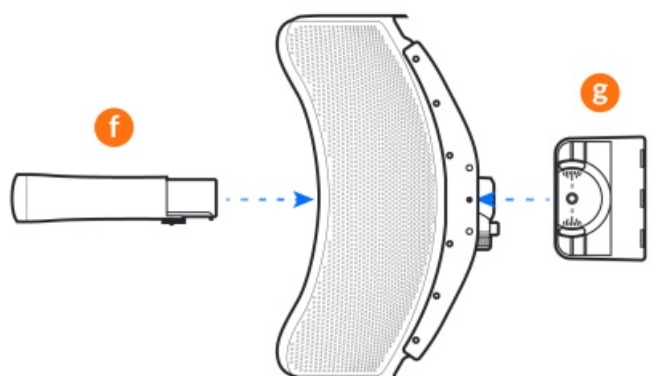

5

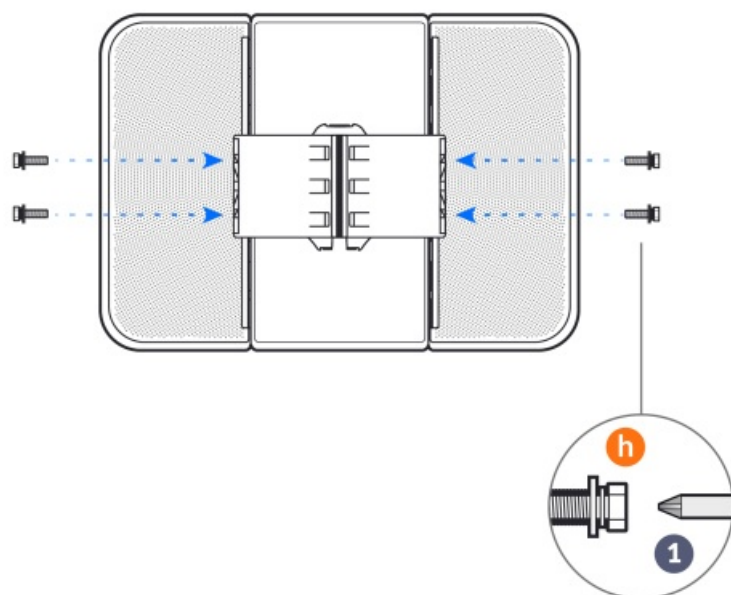


8




7

10



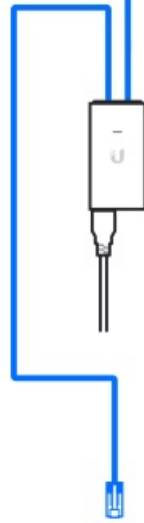

9

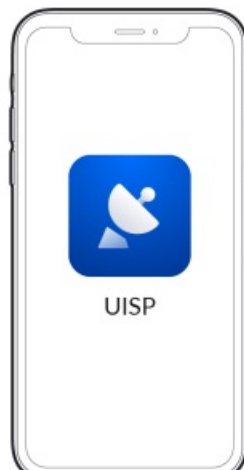


C20202021 Ubiquiti Inc. All rights reserved. Ubiquiti, Ubiquiti Networks, the Ubiquiti U logo, air MAX, airOS, Inner Feed, LiteSeam, and UISP are trademarks or registered trademarks of Ubiquiti Inc. in the United States and in other countries. App Store and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries. Google Play and the Google Play logo are trademarks of Google Inc. All other trademarks are the property of their respective owners.



Documents / Resources

A vertical strip of seven numbered diagrams (1-7) showing the installation steps for the UISP LBE-5AC-XR-US Litebeam AC 5 GHz XR antenna. The diagrams include: 1. Preparing the antenna and mounting bracket. 2. Mounting the antenna to the bracket. 3. Attaching the mounting bracket to the wall. 4. Tightening the mounting bracket. 5. Mounting the antenna to the bracket. 6. Mounting the antenna to the bracket. 7. Mounting the antenna to the bracket.	UISP LBE-5AC-XR-US Litebeam AC 5 GHz XR [pdf] Instruction Manual LBE-5AC-XR-US, Litebeam AC 5 GHz XR, LBE-5AC-XR-US Litebeam AC 5 GHz XR, AC 5 GHz XR
---	--

 8



9



10

