



UISP Wave Long Range Distribution Antenna User Guide

[Home](#) » [UISP](#) » UISP Wave Long Range Distribution Antenna User Guide 

Contents


- [1 UISP Wave Long Range Distribution Antenna](#)
- [2 TOOLS AND PARTS INCLUDED](#)
- [3 INSTALLATION INSTRUCTIONS](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)



UISP Wave Long Range Distribution Antenna



TOOLS AND PARTS INCLUDED

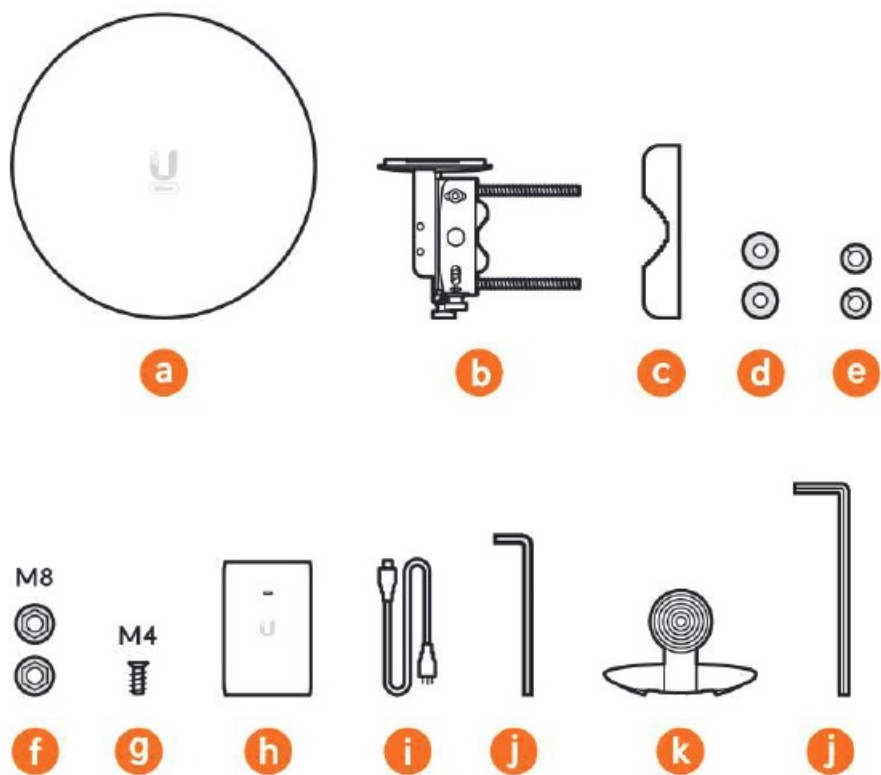


13mm







1


INSTALLATION INSTRUCTIONS


$25\text{mm} < \varnothing < 63.5\text{mm}$

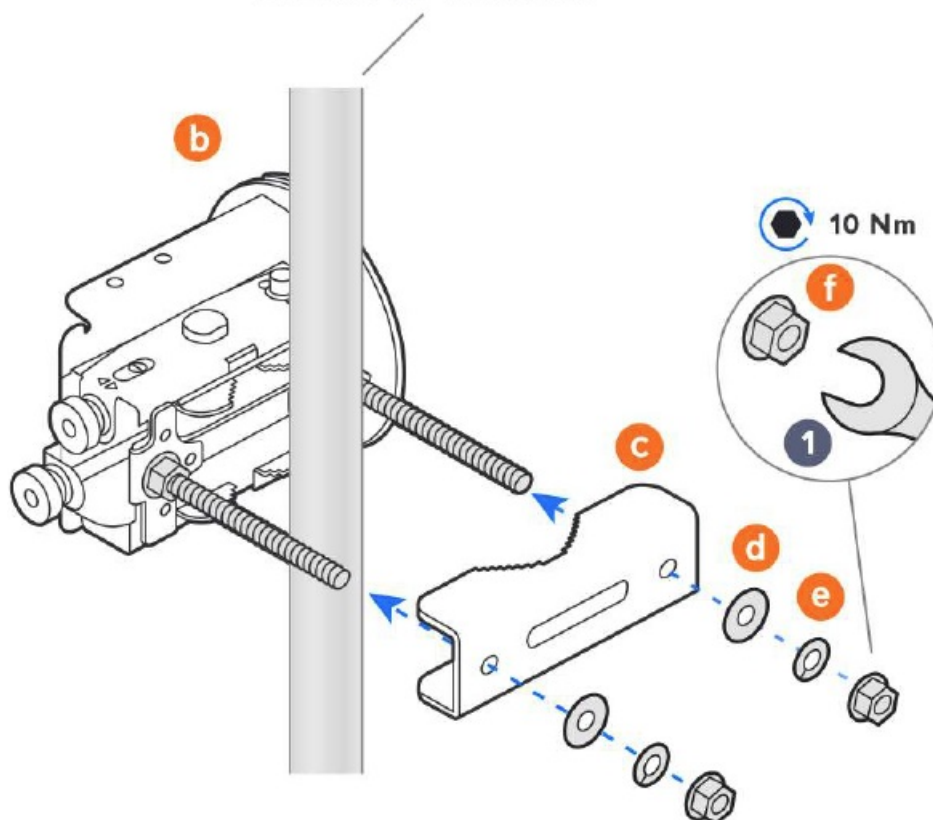


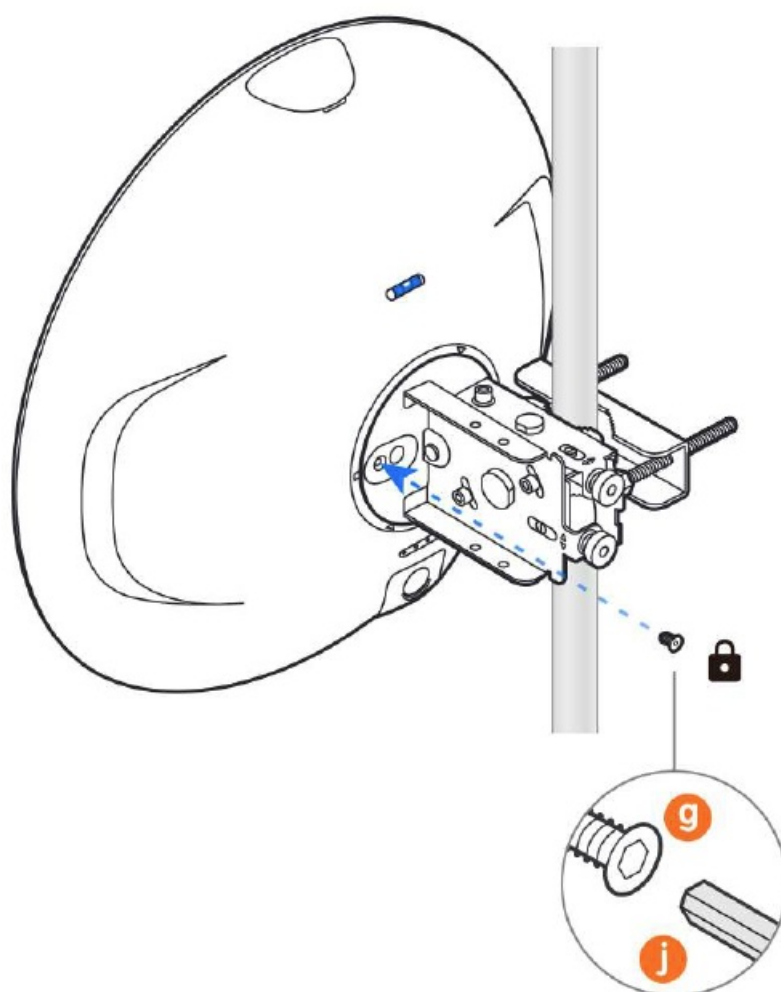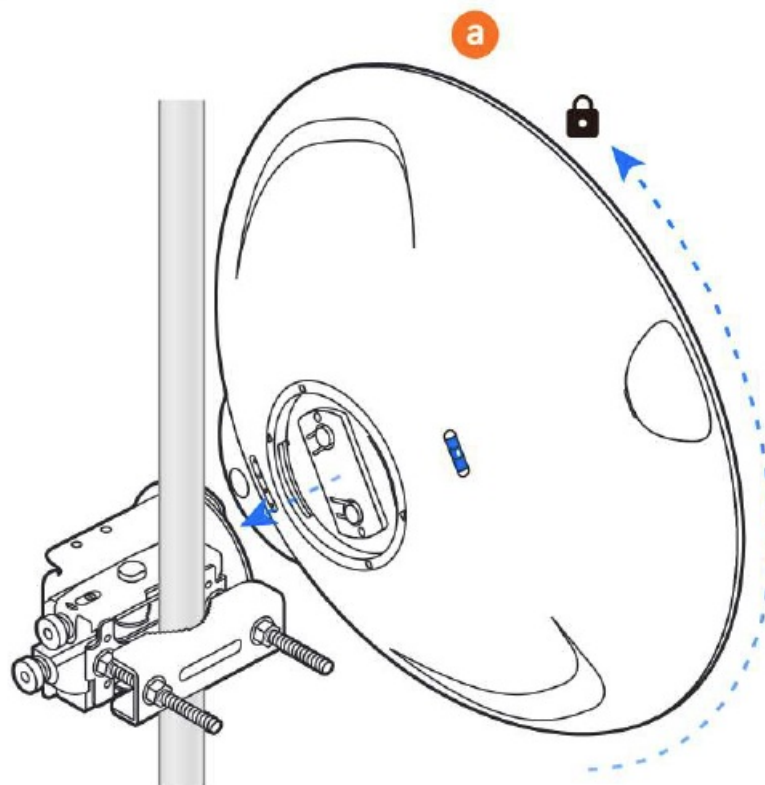


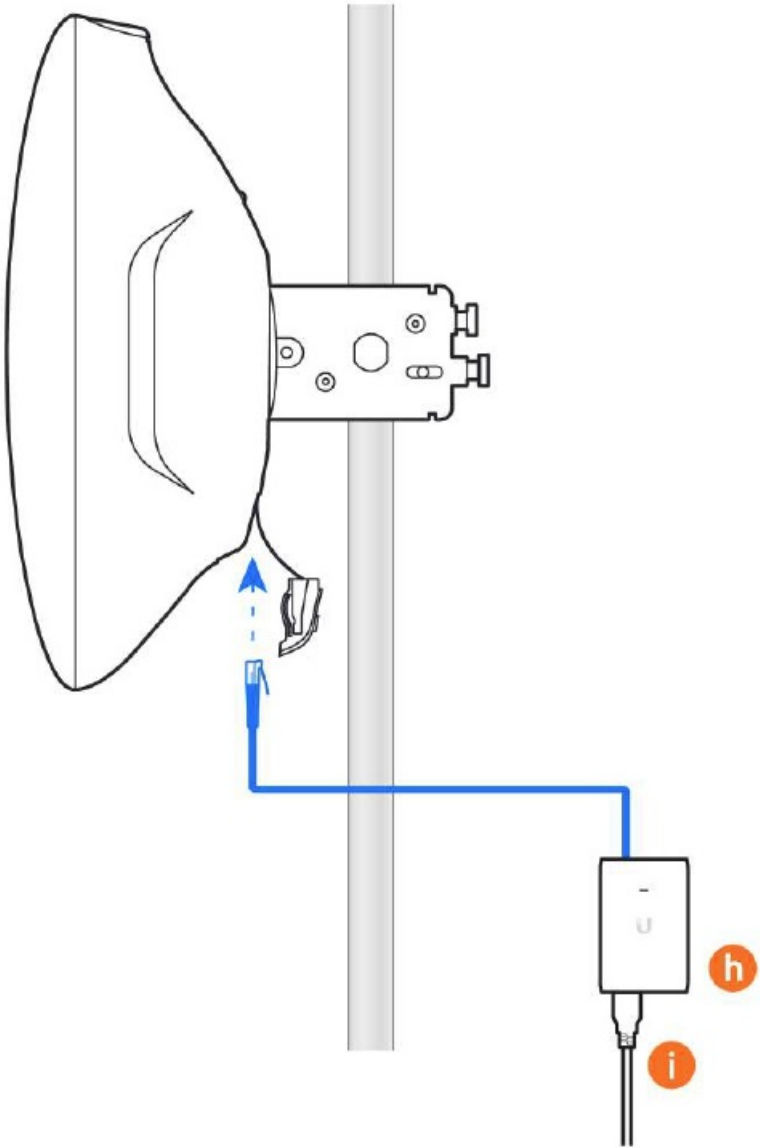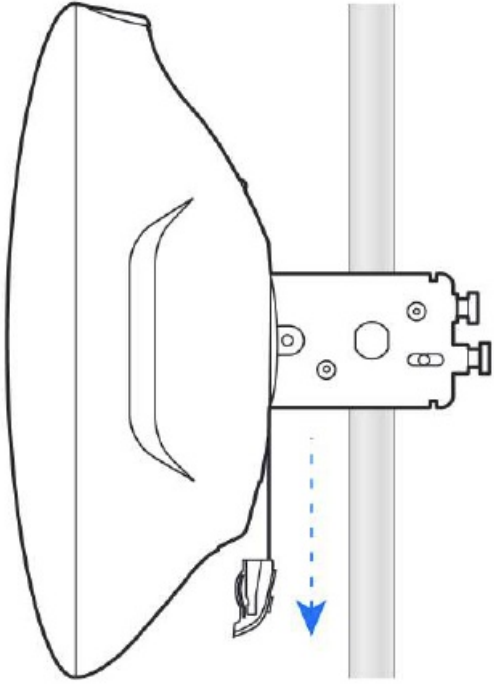



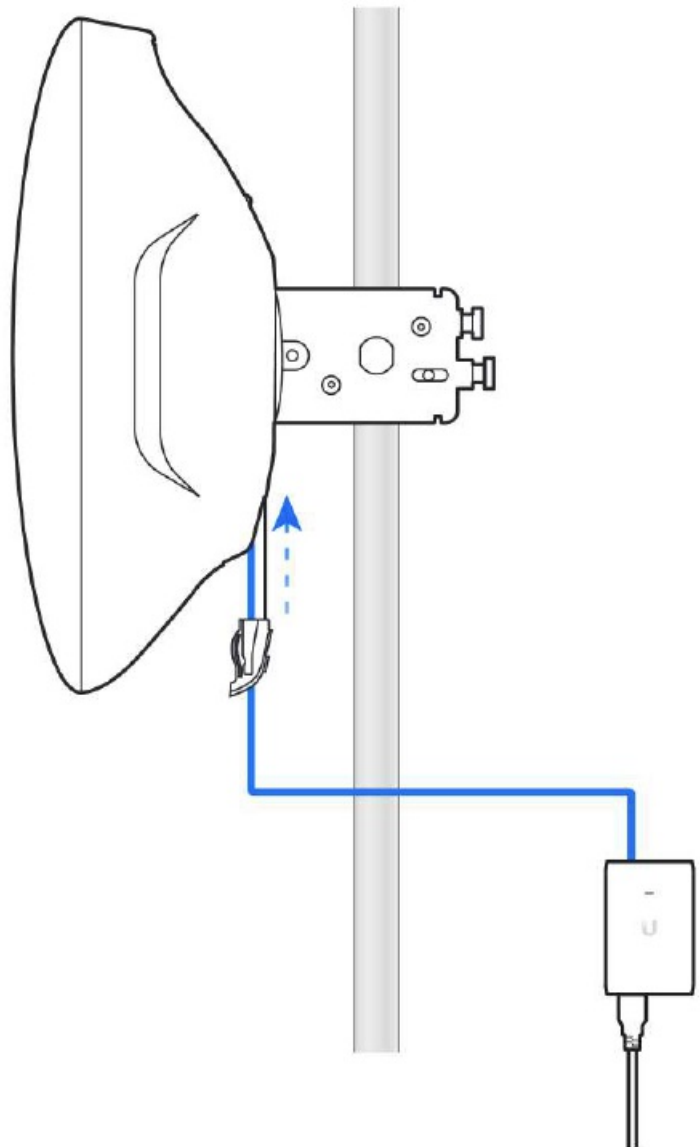


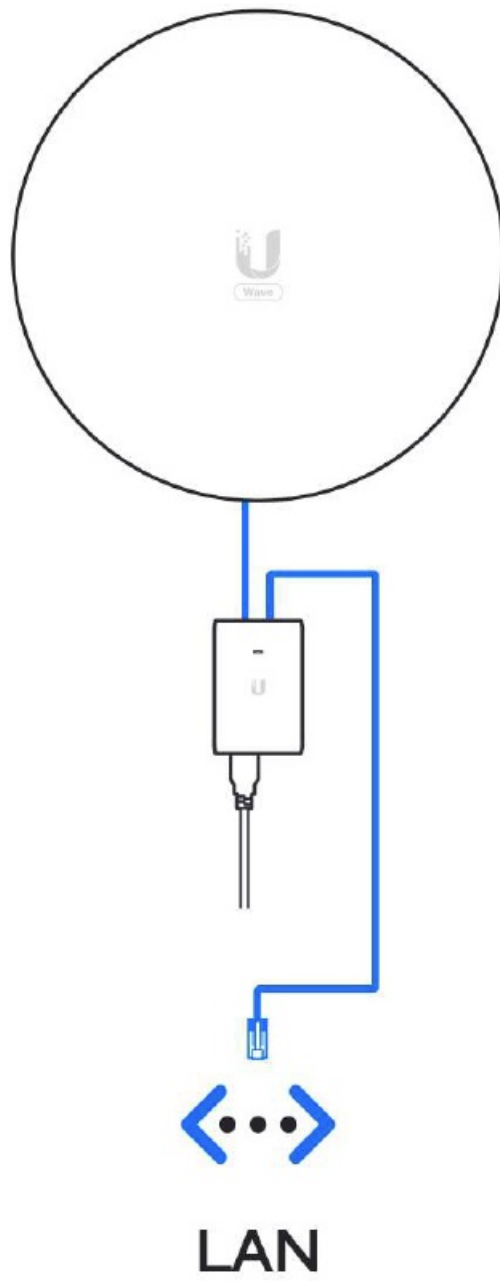


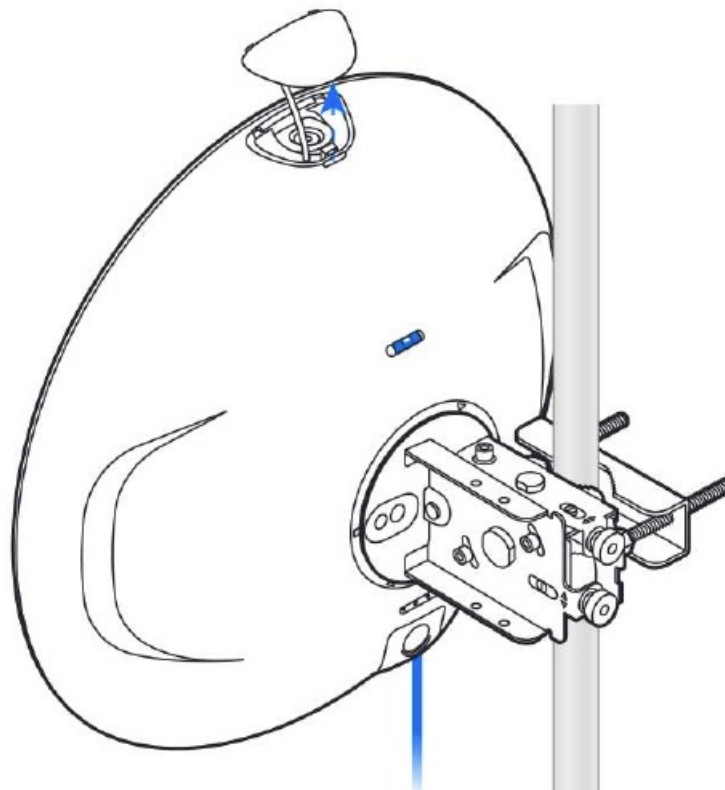

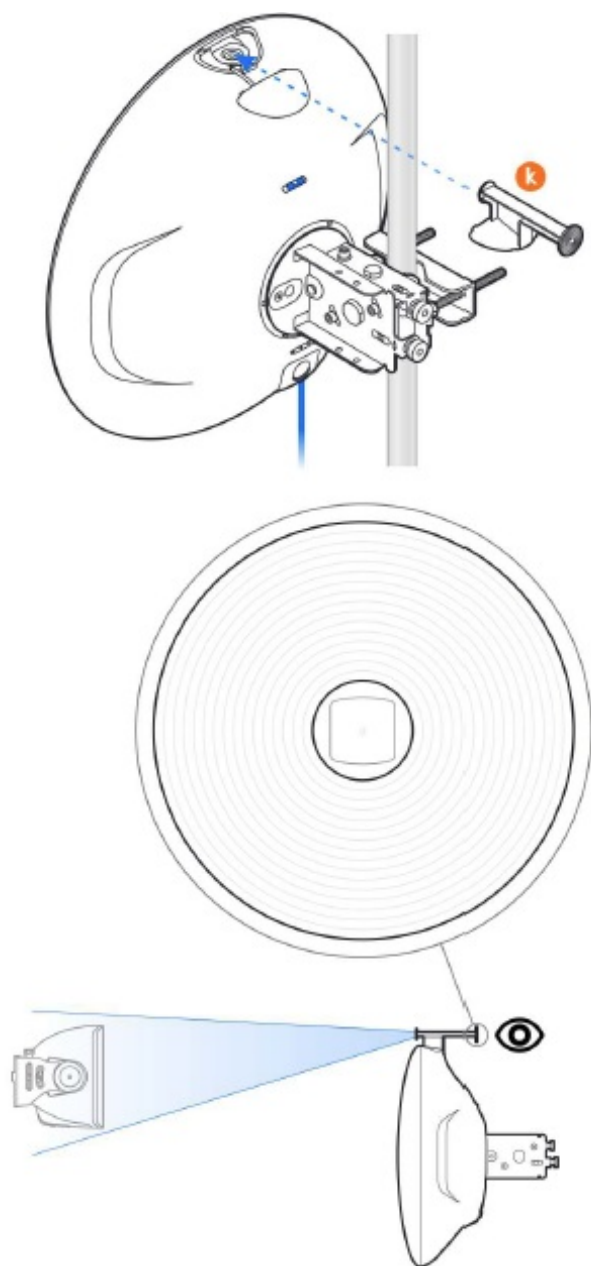

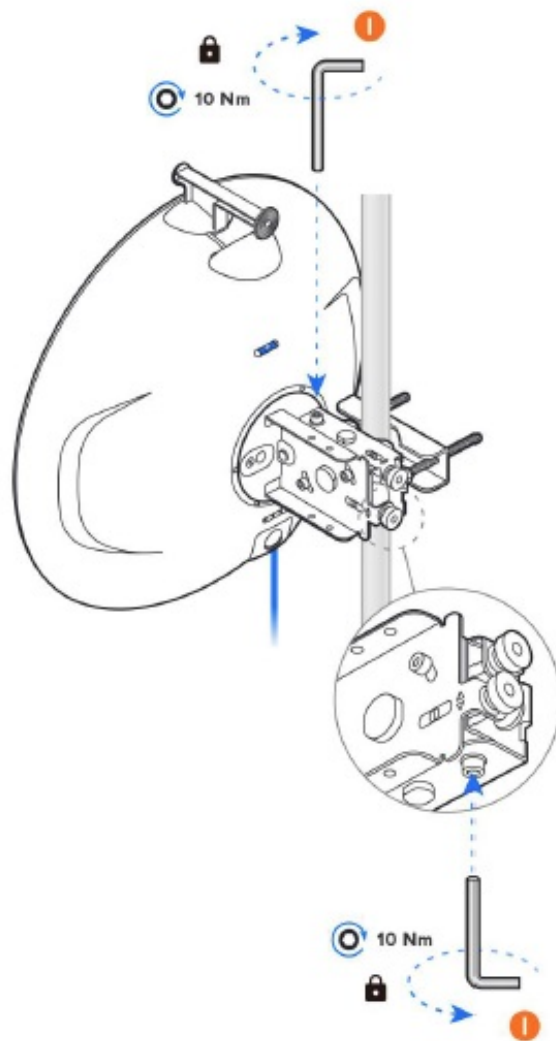

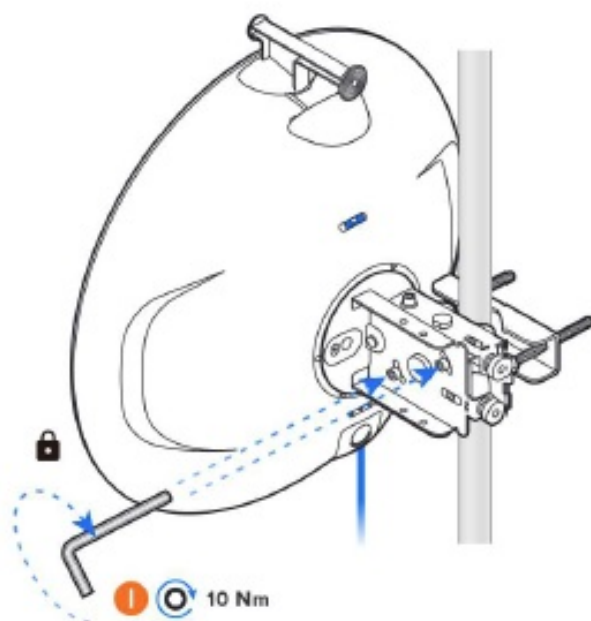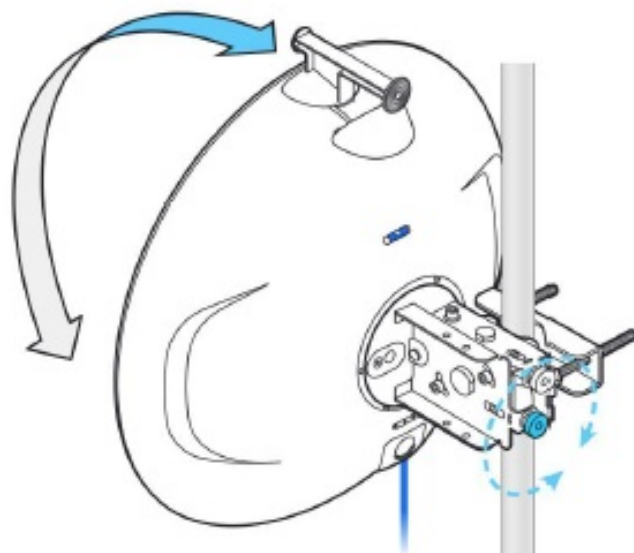

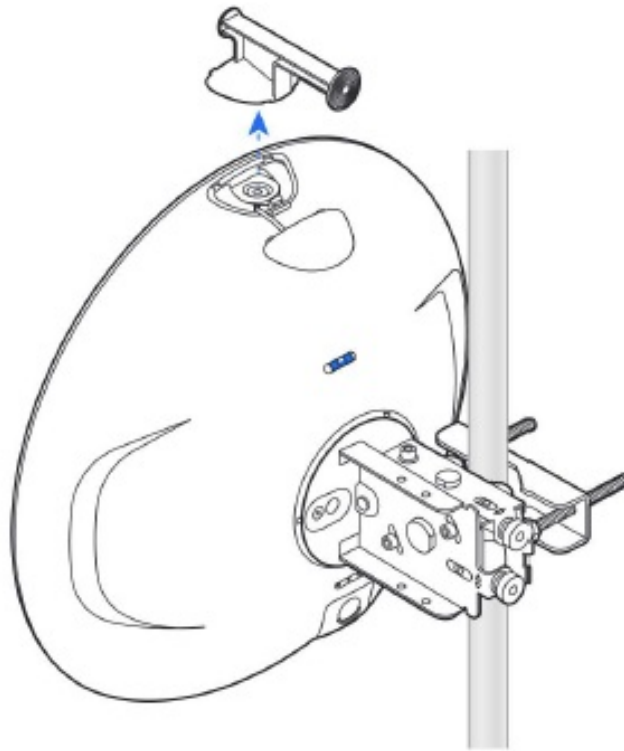

Get Answers help.ui.com

Documents / Resources

USP


1

2

3

4

5

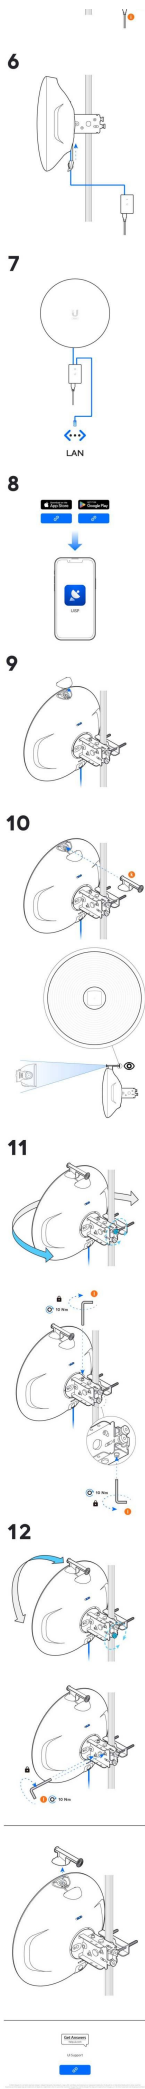

[UISP Wave Long Range Distribution Antenna](#) [pdf] User Guide

Wave Long Range Distribution Antenna, Long Range Distribution Antenna, Distribution Antenna , Antenna

