



ULINE Drop (N) Tell Indicators Installation Guide

[Home](#) » [ULINE](#) » ULINE Drop (N) Tell Indicators Installation Guide 

ULINE Drop (N) Tell Indicators Installation Guide

ULINE
DROP (N) TELL
INDICATORS

1-800-295-5510
uline.com



- Contents
- 1 MOUNTING
 - 2 Documents / Resources
 - 3 Related Posts

MOUNTING

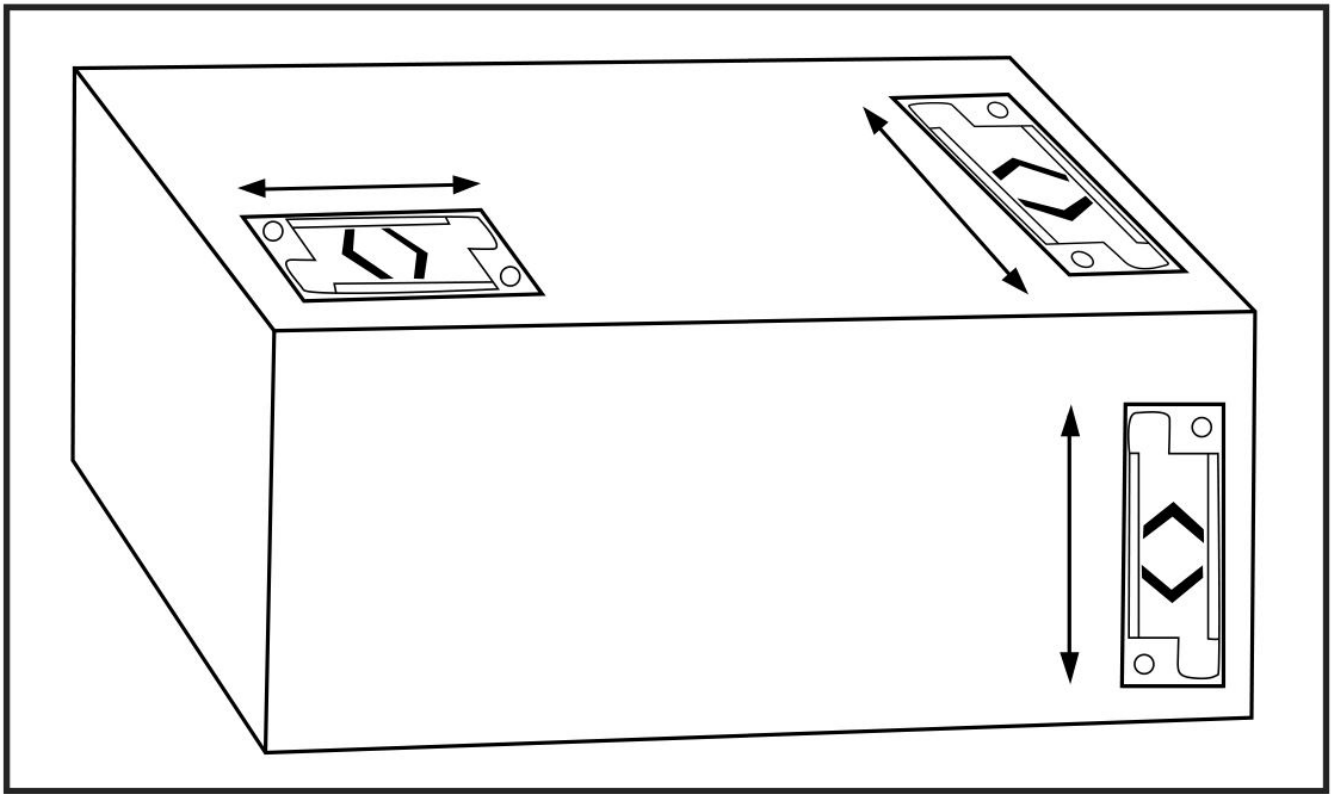 


Figure 1

1. Mount the DROP (N) TELL indicator with either adhesive back tape or two #6-32 screws. There is pressure sensitive tape on the back of the indicator.
2. If mounting with adhesive back, remove the liner from the tape and press the unit to a flat surface on the package or on the product to be monitored.
3. The DROP (N) TELL indicator must be aligned with arrows pointed toward the direction of the shock to be monitored. Three units are needed to provide complete three-dimensional readout (six directions). (See Figure 1)

RESETTABLE INDICATOR ACTIVATION

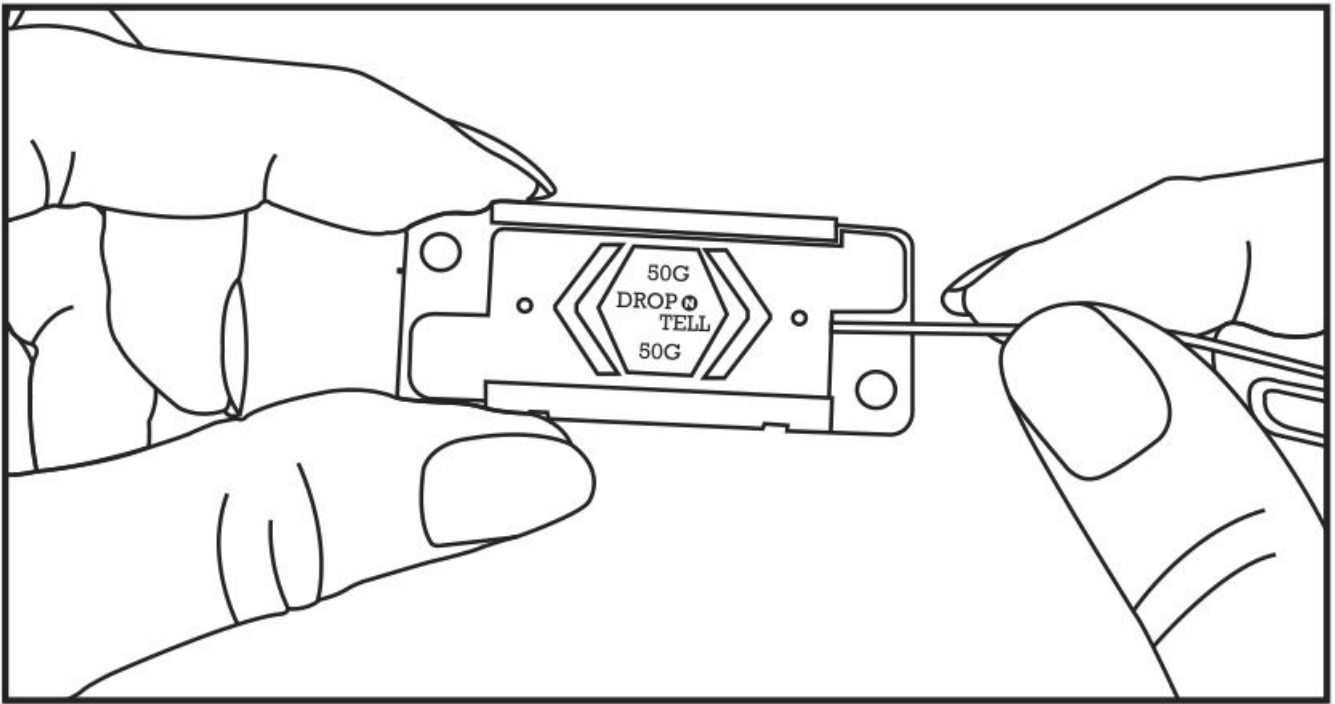


Figure 2

1. Push the end of a paper clip into the small hole on the side of the indicator until the arrow snaps back. (See Figure 2)




NOTE: Apply only enough pressure to reset the arrow and spring assembly. The arrow will snap quickly into a covered position and a slight snap can be heard. The indicator is now ready for use.

TYPICAL USAGE CHART

- Activation depends upon the type and the amount of cushioning used to protect a product in transit. Drop height will also affect activation.

		Container Area in Cubic Feet				
CONTAINER WEIGHT IN POUNDS		0-1	1-5	6-15	16-50	50+
	0-10	100G	100G	50G	50G	25G
	11-25	100G	50G	50G	25G	25G
	26-50	50G	25G	25G	25G	25G
	51-100	50G	25G	25G	15G	15G
	101-250	25G	25G	15G	15G	15G
	250-1000	15G	10G	10G	10G	10G
	Over 1000	5G	5G	10G	10G	10G

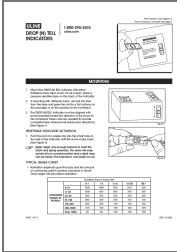

[ULINE Drop \(N\) Tell Indicators](#) [pdf] Installation Guide
Drop N Tell Indicators