

ULINE Gravity Roller Side Rails H-6906 User Guide

[Home](#) » [ULINE](#) » ULINE Gravity Roller Side Rails H-6906 User Guide

ULINE Gravity Roller Side Rails H-6906
User Guide


ULINE H-6906 GRAVITY ROLLER SIDE RAILS

1-800-295-5510
uline.com


TOOLS NEEDED




9/16" (14 mm) Wrench

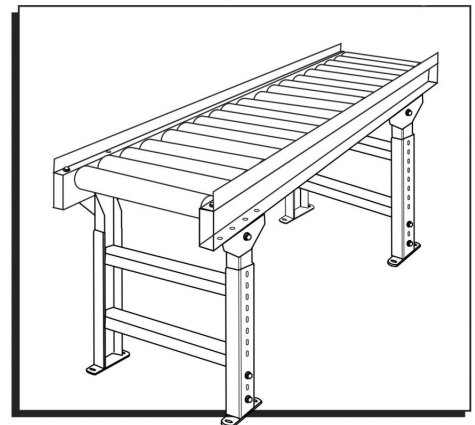


PARTS

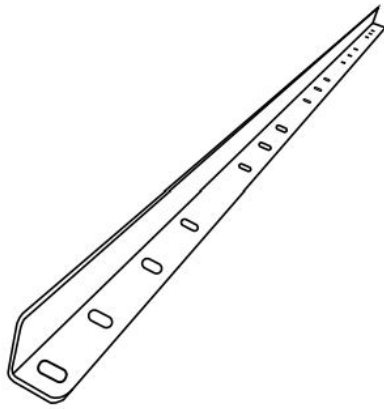

Side Rail x 2

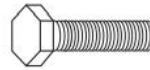


Bolt x 4

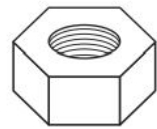


Nut x 4

ASSEMBLY

1. Place side rail flush to the end of conveyor. (See Figure 1)

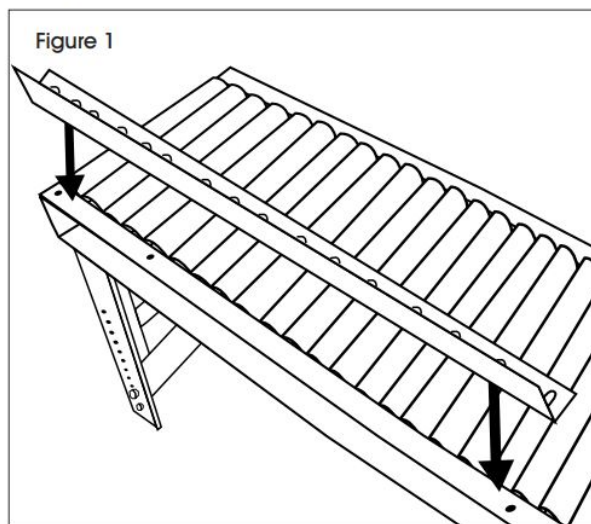

2. Insert bolts through holes at beginning and end of the side rail. Hand tighten nuts to secure. Use wrench to fully tighten. Repeat for opposite side. (See Figure 2)

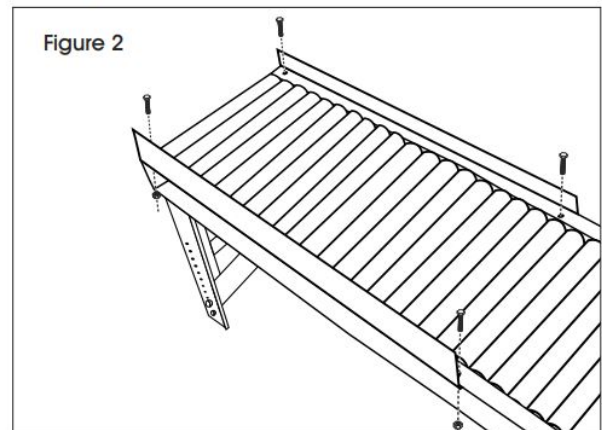


3. For conveyor that runs longer than 5 feet, repeat steps 1-2.

Contents [[hide](#)]

- 1 Documents / Resources
- 2 Related Posts

Documents / Resources

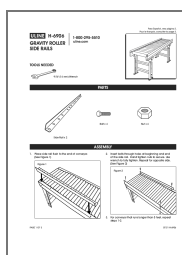

[ULINe Gravity Roller Side Rails H-6906](#) [pdf] User Guide
Gravity Roller Side Rails, H-6906