

ULTIMEA Aura A40 Soundbar With App Control User Manual

Home » ULTIMEA » ULTIMEA Aura A40 Soundbar With App Control User Manual

Contents


- 1 ULTIMEA Aura A40 Soundbar With App Control
- **2 ACCESSORIES LIST**
- **3 SOUNDBAR CONTROLS**
- **4 CONNECT TO TV VIA OPTICAL/AUX**
- **5 CONNECT SUBWOOFER TO SOUNDBAR**
- **6 CONNECT SURROUND SPEAKER TO**
- **SOUNDBAR**
- **7 PLACEMENT RECOMMENDATION**
- **8 WALL MOUNT INSTALLATION**
- 9 SPECIFICATIONS
- 10 Documents / Resources
 - 10.1 References
- 11 Related Posts



ULTIMEA Aura A40 Soundbar With App Control




ACCESSORIES LIST

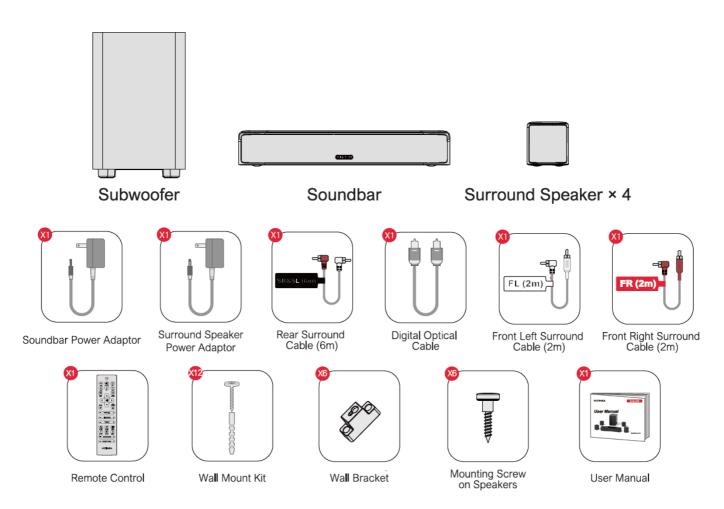

SOUNDBAR CONTROLS

Control Panel

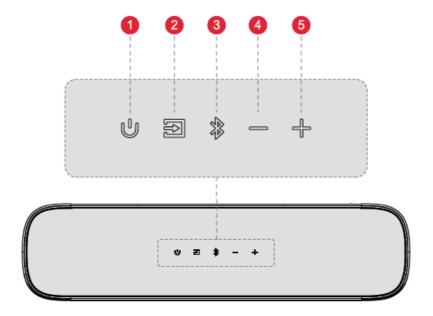



Press to power on / standby.



Press to switch source: OPT(OPTICAL)-BT-AUX-USB.




Press to switch to the BT channel and enter pairing mode. Hold for 3 seconds to disconnect the current device and choose to connect to a new device manually on your mobile phone / PC / TV (BT ID: Aura A40).

4. "C": Volume Down



Remote Control

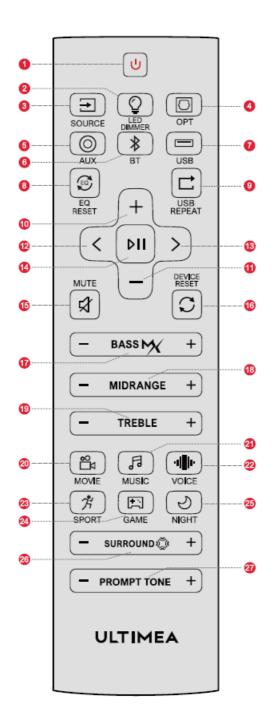



Press to power on / standby.



Press to adjust display brightness in 5 levels. Press and hold for 3s to turn off

3. "**===**": **SOURCE**

Press to switch source: OPT-BT-AUX-USB

4. "OPT

Press to switch to the OPTICAL source.

5. "O": AUX

Press to switch to AUX source.



Press to switch to BLUETOOTH source.

7. ": USB

Press to switch to the USB source.



Press to restore EQ to default settings.



USB Mode: Press to switch between single loop playback and list loop playback.

- 10. "+": VOLUME UP
- 11. "_": VOLUME DOWN

12. "<": PREVIOUS

For BT and USB mode only: Skip to the previous track.

13. ">": NEXT

For BT and USB mode only: Skip to the next track.

14. "PLAY / PAUSE

For BT and USB mode only.

16. "DEVICE RESET

Press for 5 seconds to initialize the device.

17. " BASS ": BASSMAX

Press to adjust the bass level, and the display will show: "B5-6" "B5-5", "B5-4", "B5-3", "B5-2", "B5-1", "B5 0", "B5 1" "B5 2", "B5 3", "B5 4", "B5 5", "B5 6".

18. "MIDRANGE": MIDRANGE

Press to adjust alto level, the display will show: "MR-6", "MR-5", "MR-4", "MR-2", "MR-2", "MR-1", "MR-0", "MR-1", "MR-6".

19. "TREBLE": TREBLE

Press to adjust the treble level, and the display will show: "TB-5", "TB-4", "TB-4", "TB-3" "TB-2", "TB-1", "TB 0", "TB 1" "TB 2", "B 3", "TB 4", "TB 5", "TB 6"

20. "MOVIE

Press to switch to MOVIE mode, the display will show: "MOVI"

21. "F": MUSIC

Press to switch to MUSIC mode, the display will show: "MUSE"

Press to switch to VOICE mode, and the display will show: "VOI["



Press to switch to SPORT mode, and the display will show: "5PRT"



Press to switch to GAME mode, and the display will show: "GAME".




Press to switch to NIGHT mode, and the display will show: "NIGT".

Press to adjust surround sound level, the display will show: "5R-6", "5R-5", "5R-4", "5R-3", "5R-2", "5R - 1", "5R 0", "5R 1", "5R 2" "5R 3", "5R 4", "5R 6".

27. "PROMPT TONE": PROMPT TONE

Press to adjust prompt tone level, the display will show: "PT O", "PT 1", "PT 2", "PT3".


CONNECT TO TV VIA OPTICAL/AUX

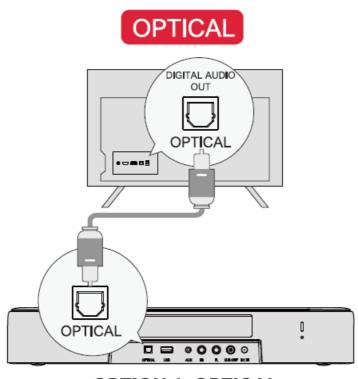

OPTION 1: OPTICAL

- 1. Make sure the TV's port is OPTICAL OUT, and connect both sides of the cable to OPTICAL, for both the TV and the soundbar.
- 2. Make sure the optical plug is inserted correctly as shown in the picture. Do not insert the plug upside down and break the optical.

Note: If audio is playing from the internal TV speakers, mute or minimize the TV volume.

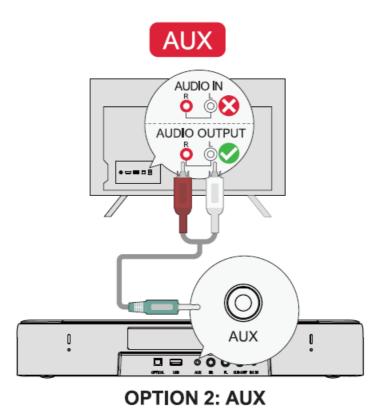

- 1. Connect the 3.5mm to RCA audio cable (Not included) to connect to your TV's RCA AUDIO OUT port.
- 2. Make sure the color of the cable ends matches the color of the TV ports.

Note: Please remember to unplug the AUX cable from the TV and Soundbar when you want to switch to another mode.


In Optical Mode: If there is no sound, try setting the TV audio output to PCM: TV Settings > Home > Settings > Sound > Digital Audio Output > PCM

CONNECT TO BLUETOOTH


- 1. Press the "D" button on the soundbar or remote control to enter Bluetooth pairing mode.
- 2. Open your phone's Bluetooth settings, find and select "Aura A40" to connect the soundbar.

Note:

If it's already in Bluetooth mode and connected, press and hold the "button for 3 seconds to disconnect the current device and connect to the new device manually on your mobile phone / PC / TV.

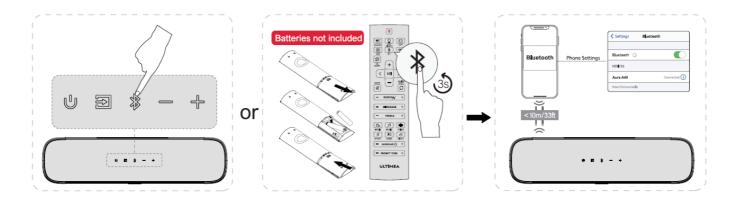


CONNECT SUBWOOFER TO SOUNDBAR

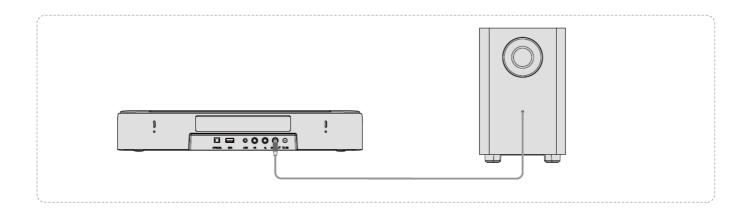


- The subwoofer and Soundbar are connected via a wired connection.
- Simply connect the wire from the back of the subwoofer to the SUB OUT port on the Soundbar.

CONNECT SURROUND SPEAKER TO SOUNDBAR

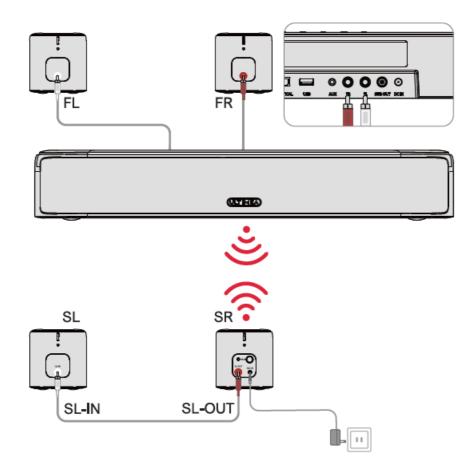

- The front surround speaker is connected to the Soundbar via a wired connection. Use the front surround cable (FR & FL) to connect the front surround to the Soundbar.
- Connect the rear left surround speaker and rear right surround speaker with the rear surround cable, and connect the rear right surround speaker to the power supply. When the Soundbar is powered on, the surround speakers will automatically pair with the Soundbar. When the indicator light on the rear right surround speaker is steady, it indicates successful pairing.
- Manual pairing: Press and hold the Surround button on the remote control for 5 seconds. The display screen will show "SUR" and flash. Press and hold the Pair button on the right surround for 5 seconds. The indicator

 
PLACEMENT RECOMMENDATION





For a better listening experience, lay out the entire system as shown in the picture above.

WALL MOUNT INSTALLATION

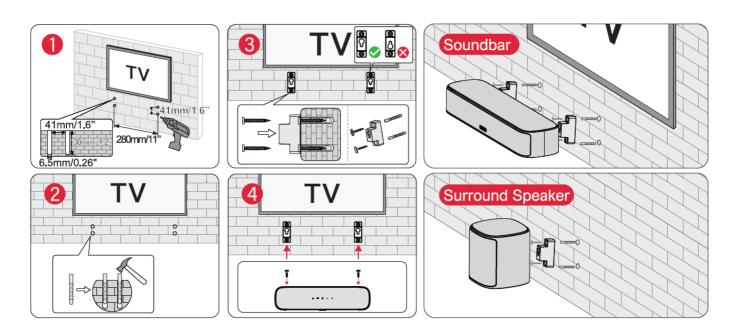

Note:

The wall mount bracket used for the surround speakers is identical to that of the soundbar, so the vertical hole spacing is the same as that of the soundbar, and the installation method is also the same.

SPECIFICATIONS

Model Number	U2601
Power Supply	24V = 3A, 12V = 1.5A
Drivers	2" × 3 (Soundbar) + 2" × 4 (Surround) + 4" x 1 (Subwoofer)
Frequency Response	65Hz - 18kHz
Standby Power	<0.5W
Operating Temperature	-10°C - 45°C/14°F - 113°F

Dimensions and Weight	
Soundbar	400 (W) × 65 (H) × 100 (D)mm 15.7" × 2.6" × 3.9"
Subwoofer	140 (W) x 220(H) × 195 (D)mm 5.5" × 8.7" × 7.7"
Surround	82 (W) × 88 (H) × 81 (D)mm 3.2" × 3.5" × 3.1"
Packaging	327 (W) × 439 (H) ×177 (D)mm 12.9" × 17.3" ×7"
Net Weight	4.8kg / 10.6lbs
Gross Weight	5.7kg / 12.6lbs

WE ARE READY TO HELP

- support@ultimea.com
- support.ultimea.com.

Scan code to download the app



You can also search for "ULTIMEA" on Google Play or Apple Store to download the app.











- @ultimea_official
- +1 888-598-8875 (US) Mon-Fri 9 am-5 pm (PST)
- +49 89-628-25828 (EU) Mon-Fri 9am-5pm (CET)

Documents / Resources



ULTIMEA Aura A40 Soundbar With App Control [pdf] User Manual

Aura A40 Soundbar With App Control, Aura A40, Soundbar With App Control, With App Control, App Control, Control

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.