




UMAX N42 U-Box miniPC User Manual

[Home](#) » [UMAX](#) » UMAX N42 U-Box miniPC User Manual 

 
UMAX N42 U-Box miniPC User Manual



Contents

- [1 OVERVIEW](#)
- [2 TURNING ON YOUR COMPUTER](#)
- [3 EXTENDING STORAGE](#)
- [4 INSTALLING VESA MOUNT](#)
- [5 WORKING WITH WINDOWS® 10](#)
- [6 GET STARTED WITH TIPS IN WINDOWS 10](#)
- [7 SAFETY INFORMATION](#)
- [8 TECHNICAL SUPPORT AND SERVICE CENTER](#)
- [9 Documents / Resources](#)
- [10 Related Posts](#)

OVERVIEW

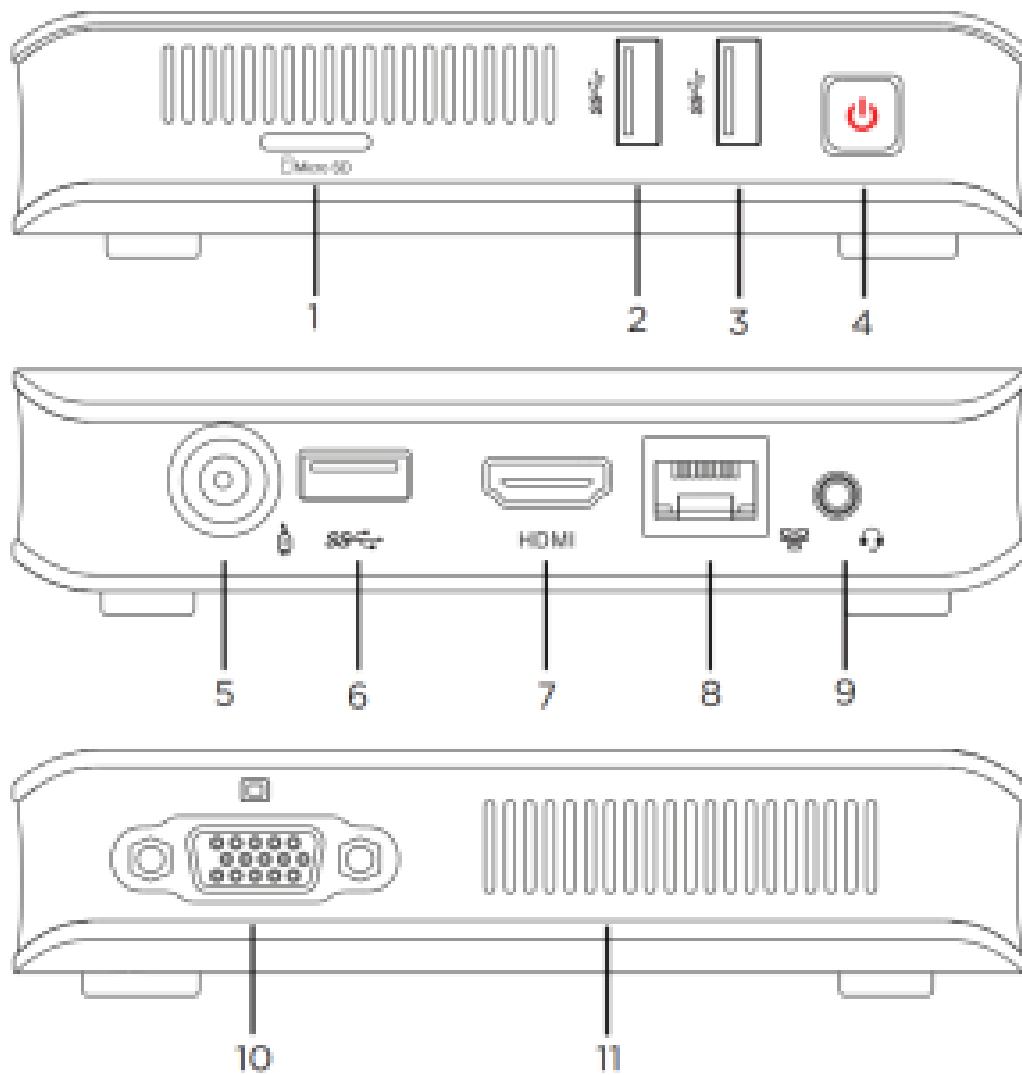

1. micro SD
2. USB 3.0
3. USB 3.0
4. power button
5. power
6. USB 3.0
7. HDMI
8. LAN
9. headphones+microphone jack
10. VGA
11. M.2 SATA SSD 2242

TURNING ON YOUR COMPUTER



 
EXTENDING STORAGE

 
 
You can extend the storage capacity of your mini-PC by adding a **M.2 SATA SSD 2242**. Important: The M.2 SSD must be a **SATA** type, **NVMe** is not supported! The supported length of M.2 SATA SSD is **2242**.

1. Remove all four rubber legs on the bottom case.
2. Remove all four screws on the bottom case.
3. Remove the back case.
4. Insert your M.2 SATA SSD 2242.
5. Fix the SSD position by a screw.
6. Put back the bottom case, fix it by four screws, and put back all rubber legs.

New SSD drive might need to be initialized and formatted before it can be used.

 
1. Press Windows + X to open Windows context menu.
2. Select **Disk Management**.
3. Pop up window will appear. Follow the steps to initialize the drive and format it as **NTFS**.

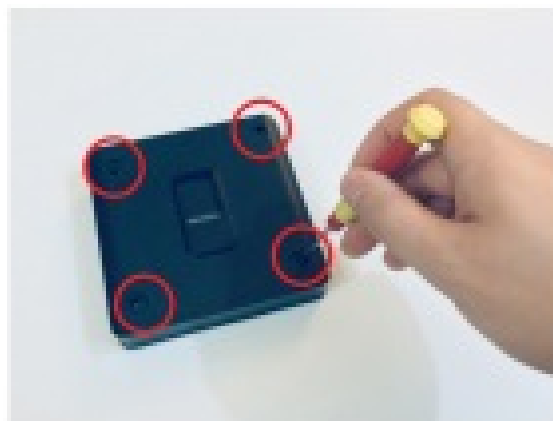

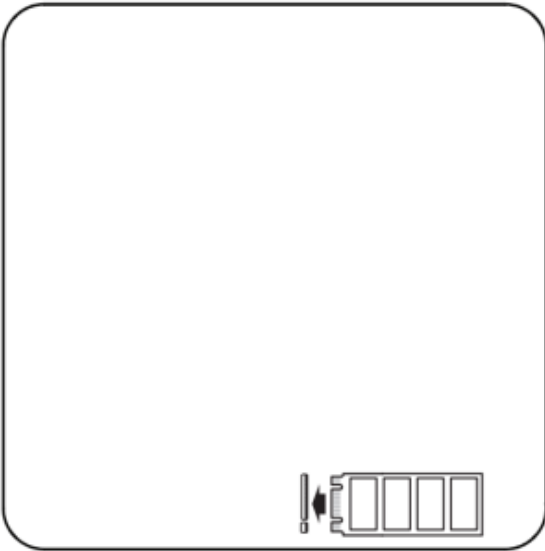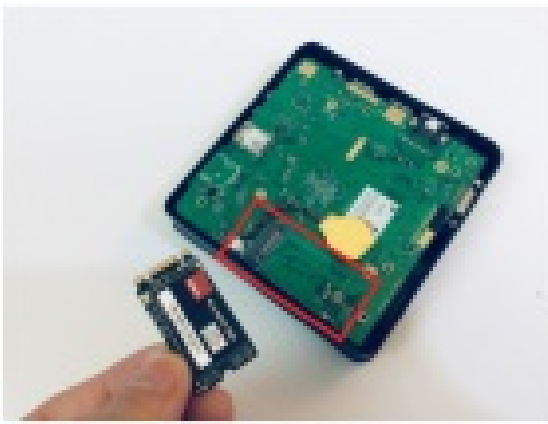





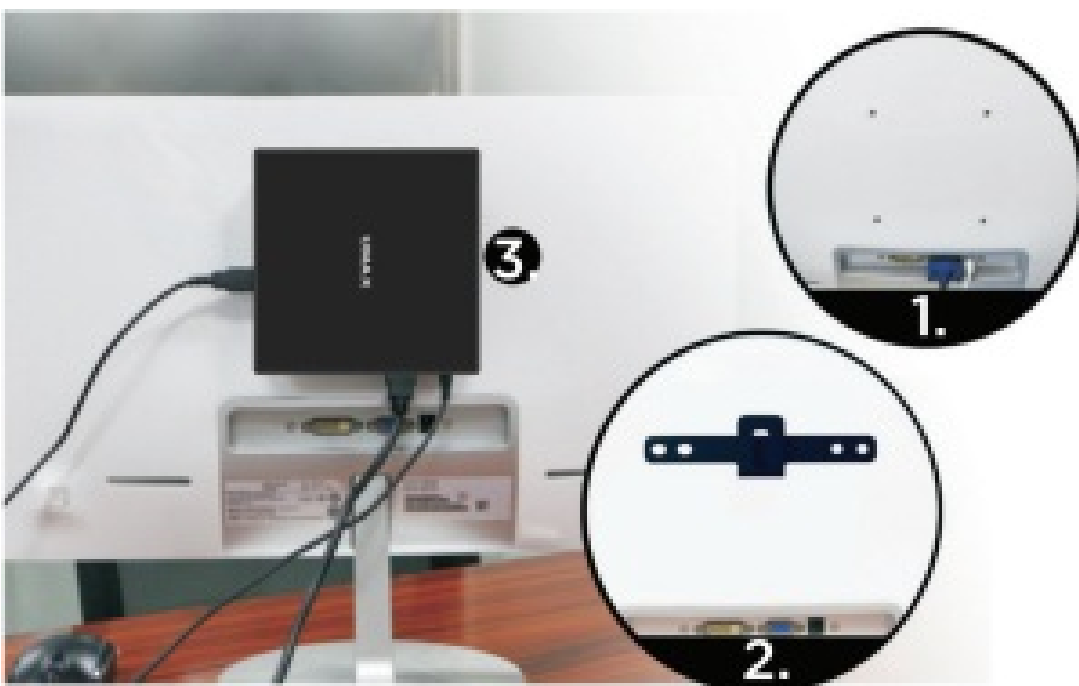






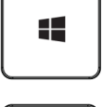

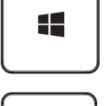

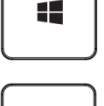

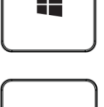





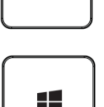





INSTALLING VESA MOUNT

You can place your mini-PC on the back side of an LCD screen using the **VESA mount** included in the package. Screw the VESA mount by two screws to the back side of an LCD screen and then simply hang your mini-PC on the mount.

 


WORKING WITH WINDOWS® 10

-  Launches the Start menu
-  +  Launches Action Center
-  +  Launches the desktop
-  +  Launches the File Explorer
-  +  Launches Settings
-  +  Launches Connect panel
-  +  Activates the Lock screen
-  +  Minimizes all currently active windows
-  +  Launches Search
-  +  Launches Project panel
-  +  Opens the Run windows
-  +  Opens Ease of Access Center
-  +  Opens the context menu of the Start button
-  +  Launches the magnifier icon and zooms in your screen
-  +  Zooms out your screen

GET STARTED WITH TIPS IN WINDOWS 10

Find surprising things you can do in Windows with the **Tips** app – it's included in **Windows 10**. To find the app, choose **Start > Tips** on your device. Then type **Windows** in the search box or select **Browse all tips** to see tips on other things.

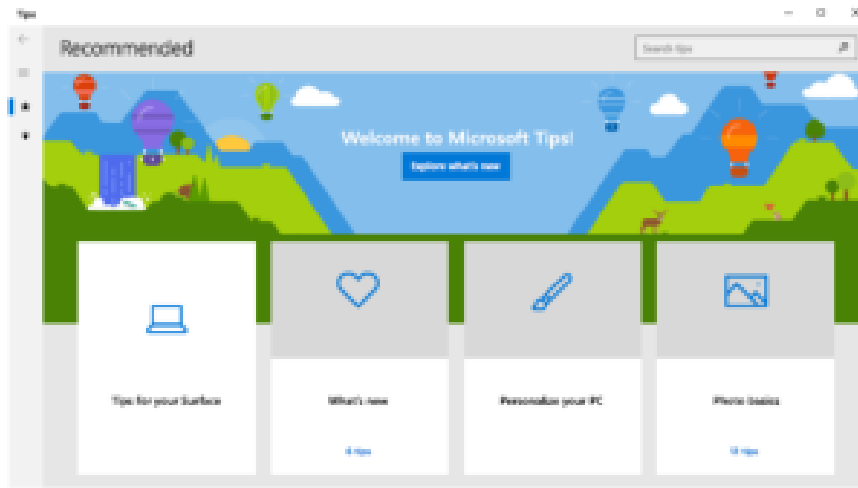

SAFETY INFORMATION

Operating temperature: 10° to 35° C,
storage temperature: -25° to 45° C,
relative humidity: 0% to 90% (noncondensing).

Built-in battery. Do not attempt to replace or remove the battery yourself. You may damage the battery, which could cause overheating and injury. The battery should be replaced by an authorized service provider, and must be recycled or disposed of separately from household waste.

Handle with care. It has sensitive electronic components inside. Place it on a stable work surface that allows for air circulation under and around the computer. Your computer can be damaged if dropped, burned, punctured, or crushed, or if it comes in contact with liquids, oils, and lotions. Do not use a damaged computer as it may cause injury.

Liquid exposure. Keep your computer away from sources of liquid, such as drinks, oils, lotions, sinks, bathtubs, shower stalls, and so on. Protect your computer from dampness, humidity, or wet weather, such as rain, snow, and fog.

Charging. Charge only with the included power adapter. Other power adapters might not meet safety standards, and using such power adapters could pose a risk of death or injury. Using damaged power adapters or cables, or charging when moisture is present, can cause fire, electric shock, injury, or damage to your computer or other property. Do not use a power adapter in wet locations, such as near a sink, bathtub, or shower stall, or connect or disconnect the power adapter with wet hands.

Medical device interference. It contains components and radios that emit electromagnetic fields, including magnets, which may interfere with pacemakers, defibrillators, and other medical devices. Maintain a safe distance between your medical device and computer. Consult your physician and medical device manufacturer for information specific to your medical device.

Repetitive motion. When you perform repetitive activities such as typing or playing games, you may experience discomfort in your hands, arms, wrists, shoulders, neck, or other parts of your body. If you experience discomfort, stop using computer and consult a physician.

Choking hazard. Some accessories may present a choking hazard to small children. Keep these accessories away from small children.

High-consequence activities. Your computer is not intended for use where the failure of the computer could lead to death, personal injury, or severe environmental damage.

Explosive and other atmospheric conditions. Using computer in any area with a potentially explosive atmosphere may be hazardous—particularly in areas where the air contains high levels of flammable chemicals, vapors, or particles such as grain, dust, or metal powders. Exposing computer to environments having high concentrations of industrial chemicals, including evaporating liquified gases such as helium, may damage or impair its functionality

TECHNICAL SUPPORT AND SERVICE CENTER

Tel: +420 800 118 629

E-mail: servis@umax.cz

Umax Czech a.s.

Kolbenova 962/27e

198 00 Prague 9

Czech Republic

MANUFACTURER

Umax Czech a.s., Kolbenova 962/27e, 198 00 Prague 9, Czech Republic

KEEP IN TOUCH



www.umax.cz



[umax.cz](https://www.facebook.com/umax.cz)



UMAX Czech Republic



UMAX Czech



Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local authority for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. Please contact your local or regional waste authority for more information on collection, reuse and recycling programs.



Importer hereby declares that this wireless device is in compliance with the essential requirements and other relevant provisions of the R&TTE Directive and Radio Equipment Directive 2014/53/EU, as applicable. A copy of the EU Declaration of Conformity is available at www.umax.cz.

UMAX

Documents / Resources



[UMAX N42 U-Box miniPC](#) [pdf] User Manual
N42 U-Box, miniPC

Manuals+.