



UMAX UMM210241 24GR Plus U-One Display Monitor User Manual

[Home](#) » [UMAX](#) » UMAX UMM210241 24GR Plus U-One Display Monitor User Manual 

 
UMAX
U-One
24GR Plus



Contents

- 1 OVERVIEW
- 2 ASSEMBLING THE BASE
- 3 TURNING ON
- 4 GET STARTED WITH TIPS IN WINDOWS® 10
- 5 KEYBOARD SHORTCUTS IN WINDOWS 10
- 6 ADDING 2.5" SSD/HDD
- 7 SAFETY INFORMATION
- 8 TECHNICAL SUPPORT AND SERVICE CENTER
- 9 MANUFACTURER
- 10 KEEP IN TOUCH
- 11 Documents / Resources
- 12 Related Posts


OVERVIEW

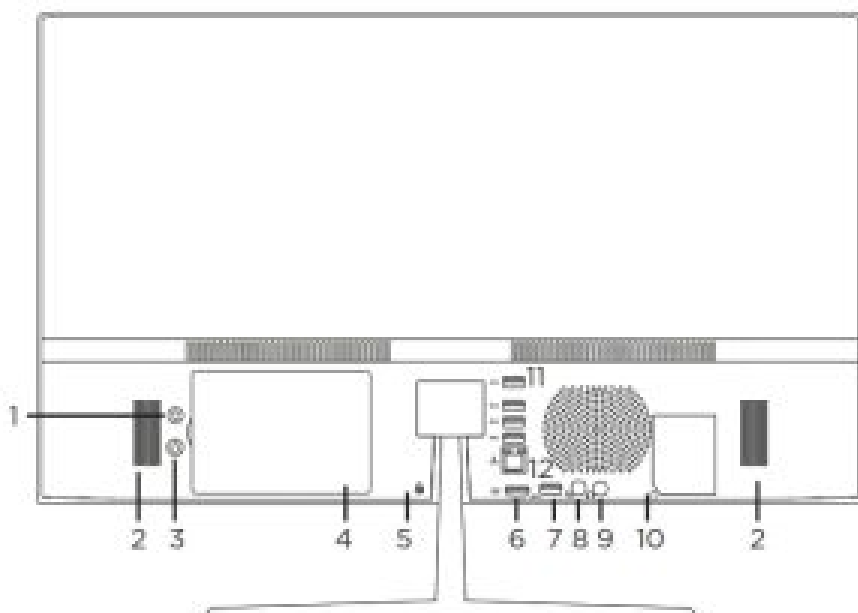

- 1. restart button
- 2. speakers
- 3. on/off button
- 4. 2.5" SATAIII SSD/HDD
- 5. Kensington lock
- 6. HDMI output


- 7. USB
- 8. charging port 12V 3A
- 9. 3.5mm headphone & microphone
- 10. microSD card slot
- 11. 4x USB
- 12. Gbit LAN

 ASSEMBLING THE BASE

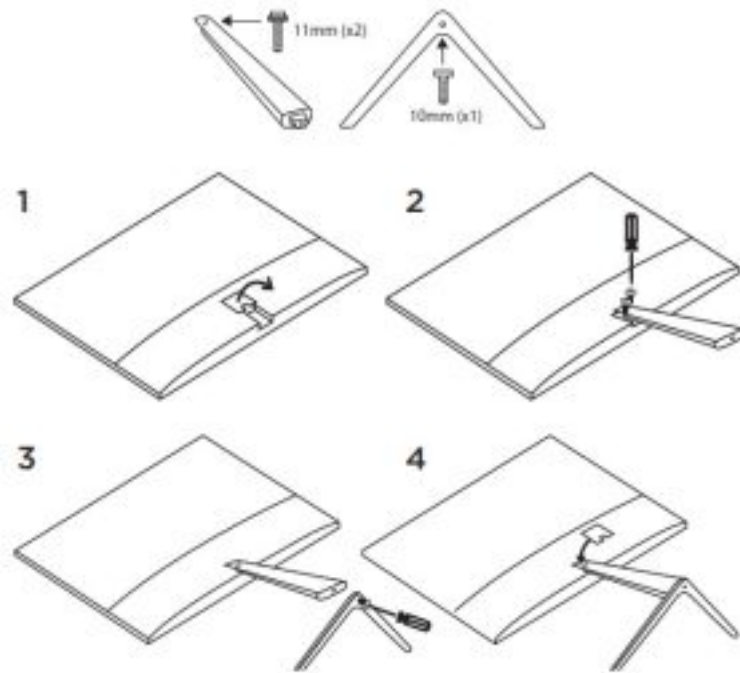


TURNING ON

  Press and hold them for a couple of seconds to turn on your computer.

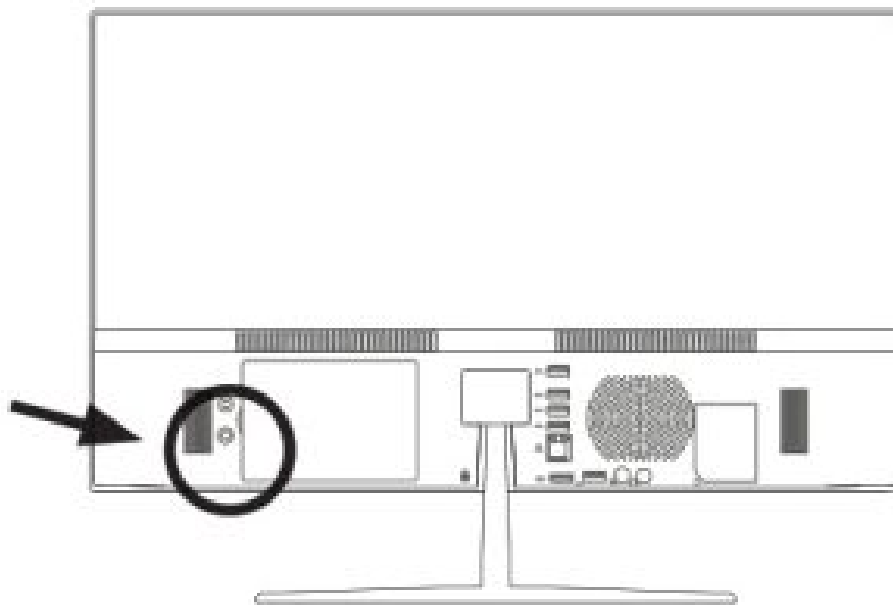





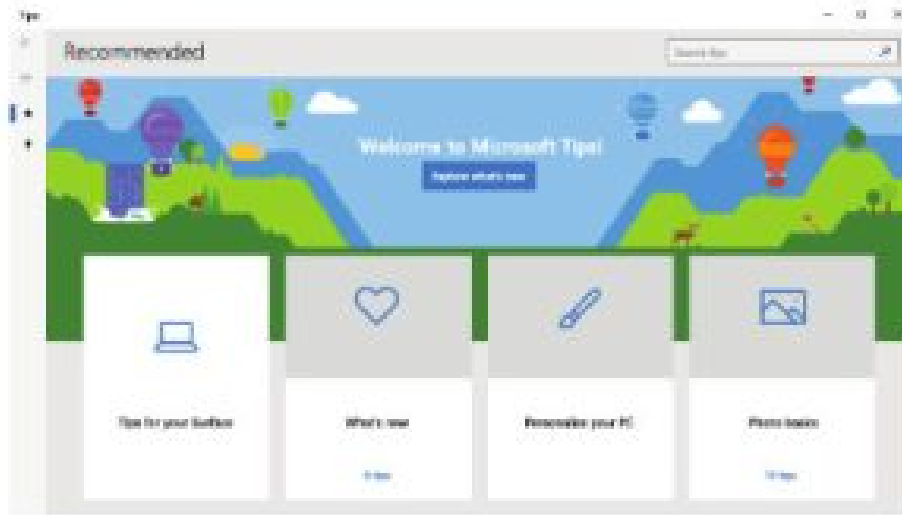






GET STARTED WITH TIPS IN WINDOWS® 10

Find surprising things you can do in Windows with the Tips app – it's included in Windows 10. To find the app, choose Start > Tips on your device. Then type Windows in the search box or select Browse all tips to see tips on other things.



KEYBOARD SHORTCUTS IN WINDOWS 10

		Launches Start menu
	+	 Launches Action Center
	+	 Minimizes all applications
	+	 Launches File Explorer
	+	 Launches Settings
	+	 Launches Connect panel



	+		Locks your computer
	+		Minimizes all applications
	+		Launches Search
	+		Launches Project panel
	+		Launches Run
	+		Opens Ease of Access Center
	+		Opens the context menu of the Start button
	+		Launches the Magnifier and zooms in your screen
	+		Zooms out your screen if Magnifier is open


ADDING 2.5" SSD/HDD

You can easily add a secondary drive for saving files and installing programs by adding a 2.5" SATA3 SSD or HDD drive.

1. Turn off your computer.
2. Remove the hatch on the backside.
3. Screw the holder onto the HDD/SSD.
4. Insert the drive into the computer.
5. Screw it in place and close the hatch.

The new drive needs to be initialized and formatted before it can be used.

 1. Press Windows + X to open the Windows context menu.  + 
2. Select Disk Management.
3. A pop-up window will appear. Follow the steps to initialize the drive and format it as NTFS.

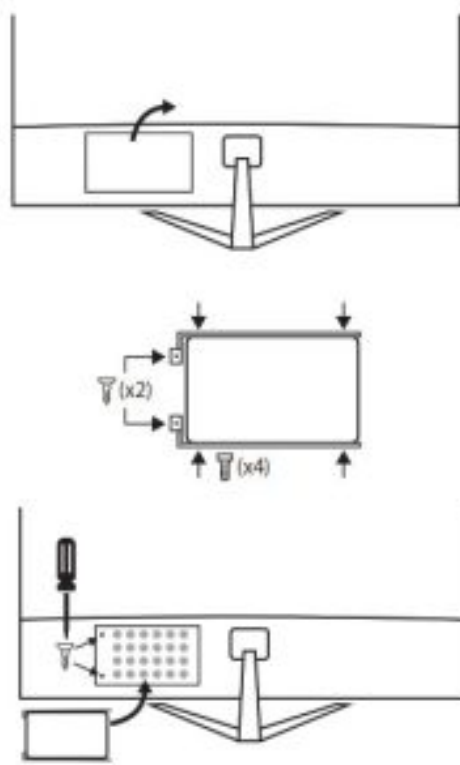

SAFETY INFORMATION

Operating temperature: 10° to 35° C, storage temperature: -25° to 45° C, relative humidity: 0% to 90% (noncondensing).

Handle with care. It has sensitive electronic components inside. Place it on a stable work surface that allows for air circulation under and around the computer. Your computer can be damaged if dropped, burned, punctured, or crushed, or if it comes in contact with liquids, oils, and lotions. Do not use a damaged computer as it may cause injury.

Liquid exposure. Keep your computer away from sources of liquid, such as drinks, oils, lotions, sinks, bathtubs, shower stalls, and so on. Protect your computer from dampness, humidity, or wet weather, such as rain, snow, and fog.

Charging. Charge only with the included power adapter. Other power adapters might not meet safety standards, and using such power adapters could pose a risk of death or injury. Using damaged power adapters or cables, or charging when moisture is present, can cause fire, electric shock, injury, or damage to your computer or other property. Do not use a power adapter in wet locations, such as near a sink, bathtub, or shower stall, or connect or disconnect the power adapter with wet hands.

Medical device interference. It contains components and radios that emit electromagnetic fields, including magnets, which may interfere with pacemakers, defibrillators, and other medical devices. Maintain a safe distance between your medical device and computer. Consult your physician and medical device manufacturer for information specific to your medical device.

Repetitive motion. When you perform repetitive activities such as typing or playing games, you may experience discomfort in your hands, arms, wrists, shoulders, neck, or other parts of your body. If you experience discomfort, stop using a computer and consult a physician.

Choking hazard. Some accessories may present a choking hazard to small children. Keep these accessories away from small children.

High-consequence activities. Your computer is not intended for use where the failure of the computer could lead to death, personal injury, or severe environmental damage.

Explosive and other atmospheric conditions. Using computers in any area with a potentially explosive atmosphere may be hazardous—particularly in areas where the air contains high levels of flammable chemicals, vapors, or particles such as grain, dust, or metal powders. Exposing computers to environments having high concentrations of industrial chemicals, including evaporating liquified gases such as helium may damage or impair its functionality.





TECHNICAL SUPPORT AND SERVICE CENTER

+420 800 118 629
servis@umax.cz
Umax Czech a.s.
Kolbenova 962/27e
198 00 Prague 9
Czech Republic

MANUFACTURER

Umax Czech a.s., Kolbenova 962/27e, 198 00 Prague 9, Czech Republic

KEEP IN TOUCH

			
www.umax.cz	umax.cz	UMAX Czech Republic	UMAX Czech



Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local authority for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. Please contact your local or regional waste authority for more information on the collection, reuse, and recycling programs.




Importer hereby declares that this wireless device is in compliance with the essential requirements and other relevant provisions of the R&TTE Directive and Radio Equipment Directive 2014/53/EU, as

applicable. A copy of the EU Declaration of Conformity is available at www.umax.cz.

© 2021 Umax Czech a.s. All rights reserved. Umax and Umax logo are trademarks of Umax Czech a.s. Windows is a registered trademark of Microsoft Corporation. All other trademarks are the property of their respective owners.

Documents / Resources

	UMAX UMM210241 24GR Plus U-One Display Monitor [pdf] User Manual UMM210241, 24GR Plus U-One Display Monitor, UMM210241 24GR Plus U-One Display Monitor, U-One Display Monitor, Display Monitor, Monitor
---	--