



# UMAX VisionBook 8L Plus Smart Tablet User Manual

[Home](#) » [UMAX](#) » UMAX VisionBook 8L Plus Smart Tablet User Manual 


## UMAX VisionBook 8L Plus Smart Tablet User Manual



### Contents

- [1 OVERVIEW](#)
- [2 TURNING ON](#)
- [3 SAFETY INFORMATION](#)
- [4 TECHNICAL SUPPORT AND SERVICE CENTER](#)
- [5 Documents / Resources](#)
  - [5.1 References](#)
- [6 Related Posts](#)

## OVERVIEW

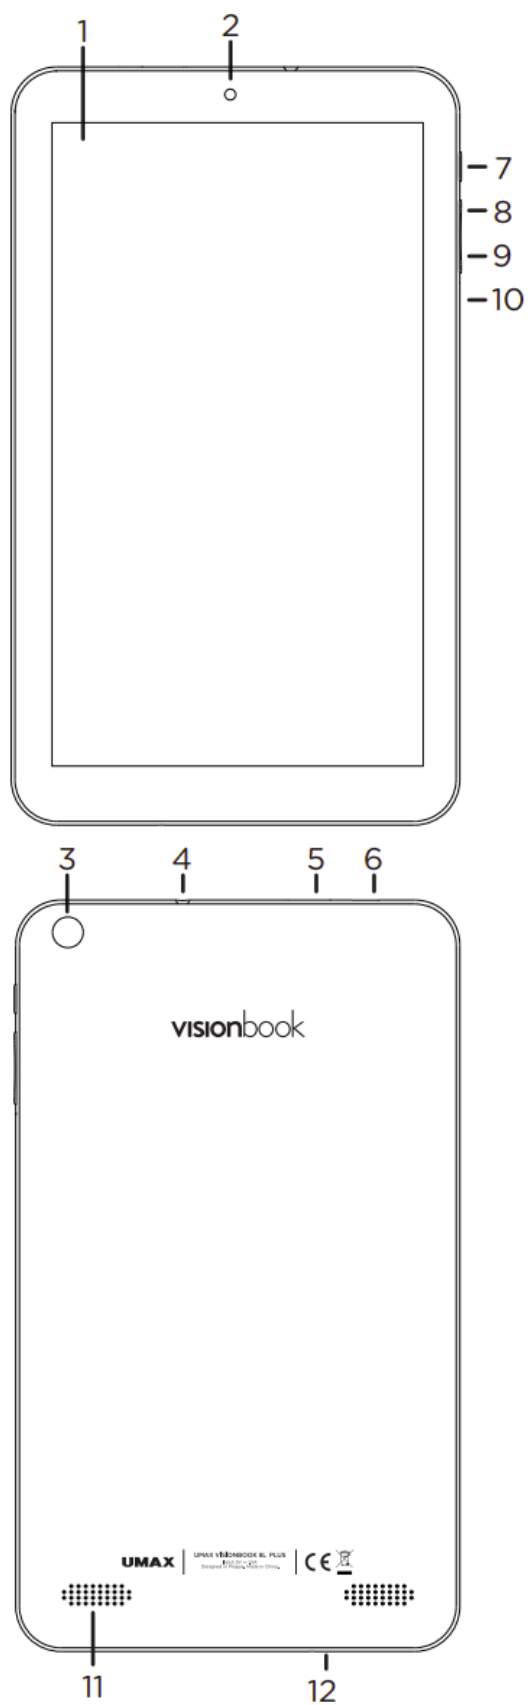


1. touch screen
2. front camera
3. back camera
4. 3.5mm audio jack
5. slot for micro SD card
6. micro USB (charging & data transfer)
7. On/Off button

- 8. volume +
- 9. volume –
- 10. reset
- 11. speaker
- 12. microphone

## TURNING ON

Press and hold the **power button** for a couple of seconds to turn on your tablet. You might need to charge the tablet first.

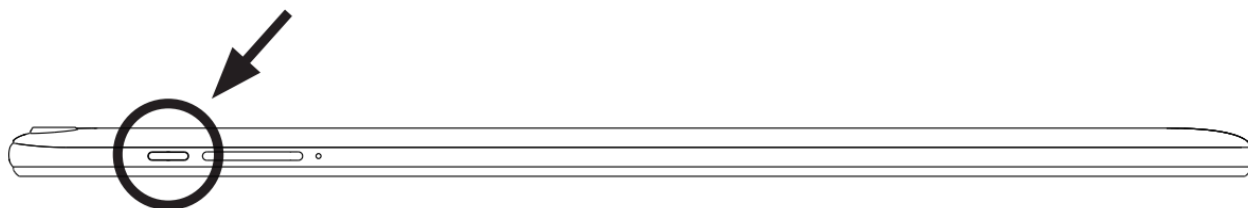

## CHARGING

To charge the tablet, connect the provided charger (5V 1.5A) to the micro USB charging port. Do not use other than the provided charger for charging your computer.

## ADDING MICRO-SD STORAGE

You can expand your storage space for saving files and installing programs by adding microSD card (microSD, microSDHC or microSDXC). The maximum supported capacity is 128 GB



## SAFETY INFORMATION

**Operating temperature:** 10° to 35° C, storage temperature: -25° to 45° C, relative humidity: 0% to 90% (noncondensing).

**Built-in battery.** Do not attempt to replace or remove the battery yourself. You may damage the battery, which

could cause overheating and injury. The battery should be replaced by an authorized service provider, and must be recycled or disposed of separately from household waste

**Handle with care.** It has sensitive electronic components inside. Place it on a stable work surface that allows for air circulation under and around the computer. Your computer can be damaged if dropped, burned, punctured, or crushed, or if it comes in contact with liquids, oils, and lotions. Do not use a damaged computer as it may cause injury.

**Liquid exposure.** Keep your computer away from sources of liquid, such as drinks, oils, lotions, sinks, bathtubs, shower stalls, and so on. Protect your computer from dampness, humidity, or wet weather, such as rain, snow, and fog.

**Charging.** Charge only with the included power adapter. Other power adapters might not meet safety standards, and using such power adapters could pose a risk of death or injury. Using damaged power adapters or cables, or charging when moisture is present, can cause fire, electric shock, injury, or damage to your computer or other property. Do not use a power adapter in wet locations, such as near a sink, bathtub, or shower stall, or connect or disconnect the power adapter with wet hands.

**Medical device interference.** It contains components and radios that emit electromagnetic fields, including magnets, which may interfere with pacemakers, defibrillators, and other medical devices. Maintain a safe distance between your medical device and computer. Consult your physician and medical device manufacturer for information specific to your medical device.

**Repetitive motion.** When you perform repetitive activities such as typing or playing games, you may experience discomfort in your hands, arms, wrists, shoulders, neck, or other parts of your body. If you experience discomfort, stop using computer and consult a physician.

**Choking hazard.** Some accessories may present a choking hazard to small children. Keep these accessories away from small children.

**High-consequence activities.** Your computer is not intended for use where the failure of the computer could lead to death, personal injury, or severe environmental damage.

**Explosive and other atmospheric conditions.** Using computer in any area with a potentially explosive atmosphere may be hazardous—particularly in areas where the air contains high levels of flammable chemicals, vapors, or particles such as grain, dust, or metal powders. Exposing computer to environments having high concentrations of industrial chemicals, including evaporating liquified gases such as helium, may damage or impair its functionality.



Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local authority for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. Please contact your local or regional waste authority for more information on collection, reuse and recycling programs.



Importer hereby declares that this device is in compliance with the essential requirements and other relevant provisions of the Directive 2014/53/EU, as applicable. A copy of the EU Declaration of Conformity is

available at [www.umax.cz](http://www.umax.cz).

© 2022 Umax Czech a.s. All rights reserved. Google, Android, Google Play and other marks are trademarks of Google LLC. Umax, the Umax logo, Visionbook, and Visionbook logo are trademarks of Umax Czech a.s. All other trademarks are the property of their respective owners.

## TECHNICAL SUPPORT AND SERVICE CENTER

+420 800 118 629

[servis@umax.cz](mailto:servis@umax.cz)

### Umax Czech a.s.

Kolbenova 962/27e 198 00 Prague 9 Czech Republic

## MANUFACTURER

Umax Czech a.s., Kolbe nova 962/27e, 198 00 Prague 9, Czech Republic



[WWW.Umax.Cz](http://WWW.Umax.Cz)



[Umax.Cz](https://www.facebook.com/umax.cz)



UMAX Czech Republic



UMAX Czech

## Documents / Resources



[UMAX VisionBook 8L Plus Smart Tablet](#) [pdf] User Manual  
VisionBook 8L Plus Smart Tablet, VisionBook 8L Plus, Smart Tablet, Tablet

## References

- **U** [UMAX - obchod s elektronikou a IT](#)

Manuals+.