

**UMIKAkitchen
2-Pack Large
Digits Classroom
Timer**



UMIKAkitchen 2-Pack Large Digits Classroom Timer User Manual

[Home](#) » [Support](#) » UMIKAkitchen 2-Pack Large Digits Classroom Timer User Manual 

Contents

- [1 UMIKAkitchen 2-Pack Large Digits Classroom Timer](#)
- [2 Introduction](#)
- [3 Specifications](#)
- [4 Package Include](#)
- [5 Features](#)
- [6 Dimension](#)
- [7 Usage](#)
- [8 Care and Maintenance](#)
- [9 Troubleshooting](#)
- [10 Pros and Cons](#)
- [11 Warranty](#)
- [12 FAQs](#)
- [13 References](#)
- [14 Related Posts](#)

UMIKAkitchen

UMIKAkitchen 2-Pack Large Digits Classroom Timer



Launch Date: 2020

Price: \$14.20

Introduction

The UMIKAKitchen 2-Pack Large Digits Classroom Timer. This timer can be used in a lot of different places, like classes, kitchens, and gyms, to help you better manage your time. It has a big, easy-to-read screen with big numbers that can be seen from far away. The timer has a loud sound that you can hear even when there is a lot of noise around. The magnetic back lets it stick to any metal surface, and the hanging hook and telescoping kickstand give you a lot of placement choices. It's easy for people of all ages to use because the buttons are marked and the process is simple. With a setting of 99 minutes and 59 seconds, it can be used as both a countdown timer and a clock. The UMIKAKitchen timer is a reliable tool for keeping track of time that you can use for cooking, chores, sports, and school activities.

Specifications


- **Brand:** UMIKAKitchen
- **Color:** White
- **Material:** Metal
- **UPC:** 789371368703
- **Manufacturer:** UMIKAKitchen

- **Package Dimensions:** 3.27 x 2.83 x 2.01 inches
- **Item Weight:** 3.84 ounces
- **Item Model Number:** UMIKAkitchen-2Pack
- **Display Type:** LCD
- **Power Source:** 1 AAA battery (included)

Package Include

- 2 x UMIKAkitchen Large Digits Classroom Timers
- 2 x AAA Batteries
- 1 x Instruction Manual

Features

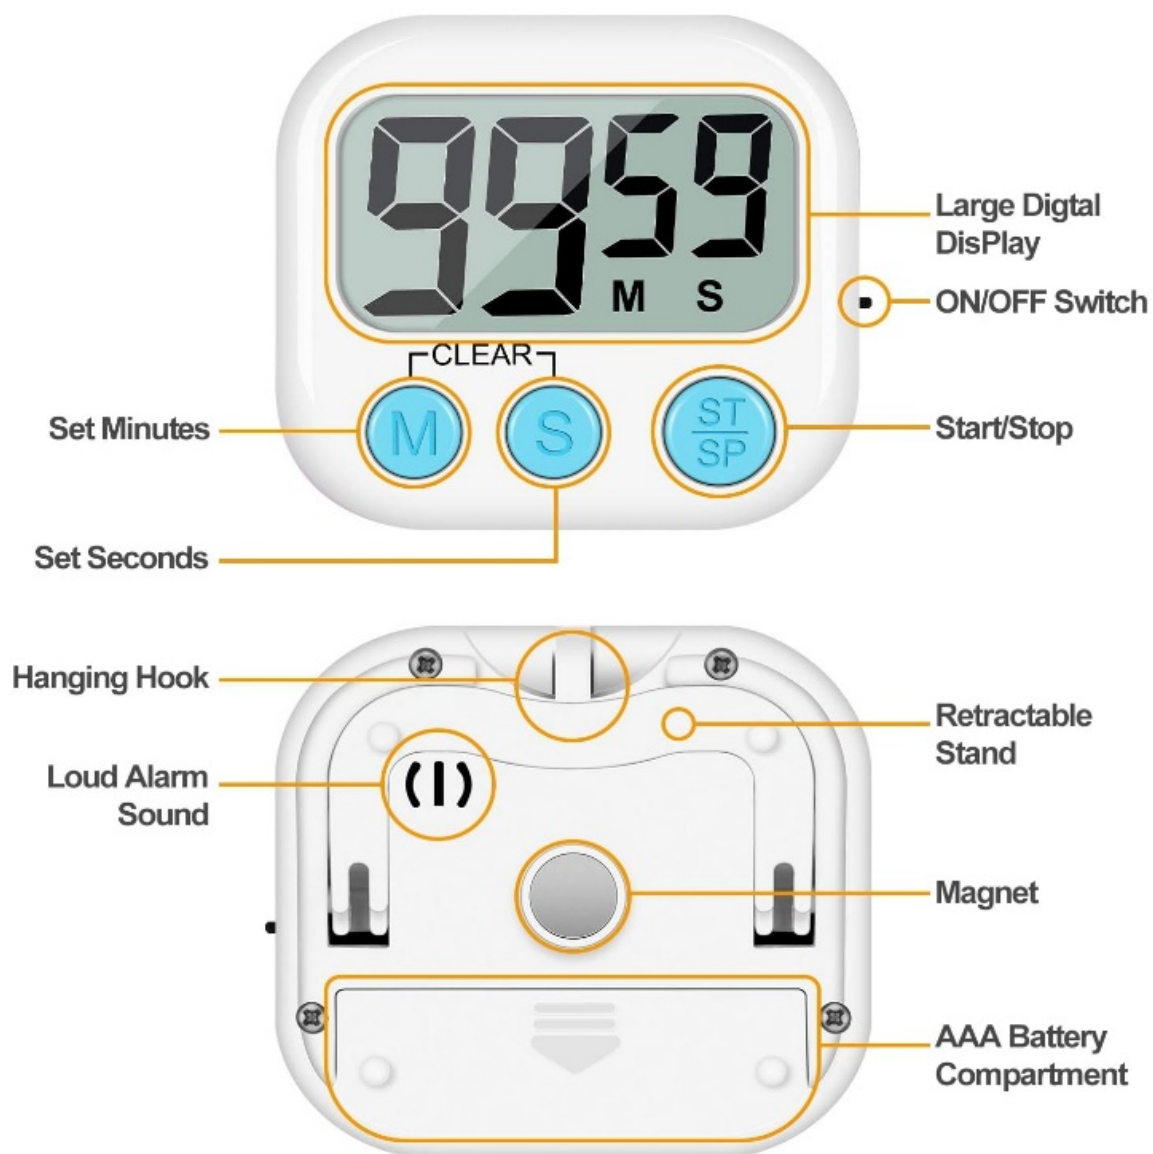

• Large Digits

The UMIKAkitchen timer features a large, easy-to-read display with digits that are clear and highly visible. This ensures that you can see the time remaining or elapsed at a glance, even from a distance, making it perfect for use in various settings such as the kitchen, classroom, or gym.

- **Loud Alarm**

The timer is equipped with a loud and audible alarm that can be heard from a considerable distance. This feature ensures that you won't miss the end of your timing session, whether you're busy with other tasks or in a noisy environment.

- **Magnetic Back**

Designed for convenience, the timer includes a strong magnetic back that allows it to adhere securely to any metal surface, such as a refrigerator or oven. This feature helps keep the timer within easy reach and view.

- **Stand and Hook**

The versatile design of the UMIKAtitchen timer includes a retractable kickstand for stable placement on countertops and a hanging hook for wall mounting. This flexibility ensures that you can position the timer wherever it is most convenient for you.

- **Simple Operation**

The timer is designed for ease of use, with large, clearly labeled buttons for setting minutes, and seconds and starting or stopping the countdown. There are no complicated setups or programming required, making it user-friendly for people of all ages.

- **Countdown and Count-Up**

The timer functions as both a countdown timer and a stopwatch, with a maximum time setting of 99 minutes and 59 seconds. This dual functionality makes it ideal for various activities, such as cooking, homework, sports, exercise, and classroom activities.

- **Precise Countdown or Count-Up**

With its precise timing capabilities, the UMIKAtitchen timer ensures accuracy in all your timing needs. Whether you are tracking cooking times, workout intervals, or study sessions, you can rely on its precision.

- **Loud Alarm with an On/Off Switch**

In addition to its loud alarm, the timer includes an On/Off switch for convenience. This allows you to turn off the timer when it is not in use, conserving battery life.

- **Large LCD Screen**

The timer's large LCD screen provides clear digits with a wide viewing angle, ensuring improved visibility from various perspectives. This feature enhances the overall user experience by making the timer easy to read and use.

- **Versatile Design**

The timer's versatile design includes multiple mounting options, such as a magnetic back for attaching to metal surfaces, a retractable kickstand for countertop use, and a hanging hook for wall mounting. This flexibility allows you to use the timer in various settings and positions.

- **Easy Setup and Operation**

Requiring no complicated set-up or programming, the timer features large, clearly labeled minute, second, and start/stop buttons for easy operation. Additionally, it has a handy pause count function, allowing you to pause and resume the countdown as needed.

Dimension



Usage

Setting the Timer (Countdown):

- Press the “M” button to set the minutes.
- Press the “S” button to set the seconds.
- Press the “START/STOP” button to start the countdown.

Using the Count-Up Feature (Stopwatch):

- Press the “M” and “S” buttons simultaneously to reset the timer to 00:00.
- Press the “START/STOP” button to start counting up.

Resetting the Timer:

- Press the “M” and “S” buttons at the same time to reset the timer to 00:00.

Pausing the Timer:

- Press the “START/STOP” button to pause the countdown.
- Press the “START/STOP” button again to resume.

Turning Off the Alarm:

- Press the “START/STOP” button to stop the alarm when it sounds.

Care and Maintenance

- **Battery Replacement:** Replace the AAA battery when the display becomes dim.
- **Cleaning:** Wipe the timer with a soft, damp cloth. Do not immerse it in water or use abrasive cleaners.
- **Storage:** Store the timer in a dry place when not in use. Avoid exposing it to extreme temperatures or moisture.

Troubleshooting

Issue	Possible Cause	Solution
The timer does not turn on	Dead or incorrectly inserted battery	Replace or correctly insert the battery
Display is dim	Low battery	Replace the battery
The timer does not count down/up	Buttons not responding	Ensure buttons are pressed firmly; reset the timer
The alarm does not sound	Speaker malfunction or low battery	Replace the battery; if the issue persists, contact support

Pros and Cons

Pros

- User-friendly design with large buttons
- Versatile placement options
- A loud alarm that can be heard from another room
- Affordable pricing for a 2-pack

Cons

- Magnet strength may vary; some users report it not holding firmly
- Battery not included, which may be inconvenient for some

Warranty

UMIKAkitchen offers a one-year warranty covering manufacturing defects. For warranty claims, retain your purchase receipt and contact customer service for assistance.

FAQs

What are the main features of the UMIKAkitchen 2-Pack Large Digits Classroom Timer?

The UMIKAkitchen 2-Pack Large Digits Classroom Timer features large, easy-to-read digits, a loud alarm, a magnetic back, a stand and hook for versatile placement, and simple operation.

How loud is the alarm on the UMIKAkitchen 2-Pack Large Digits Classroom Timer?

The UMIKAkitchen 2-Pack Large Digits Classroom Timer has a loud and audible alarm that can be heard from a considerable distance, ensuring you don't miss it.

What is the maximum countdown time on the UMIKAkitchen 2-Pack Large Digits Classroom Timer?

The UMIKAkitchen 2-Pack Large Digits Classroom Timer has a maximum countdown time of 99 minutes and 59 seconds.

How do you set the time on the UMIKAkitchen 2-Pack Large Digits Classroom Timer?

What materials is the UMIKAkitchen 2-Pack Large Digits Classroom Timer made of?

The UMIKAkitchen 2-Pack Large Digits Classroom Timer is made of durable plastic and metal.

What are the dimensions of the UMIKAkitchen 2-Pack Large Digits Classroom Timer?

The dimensions of each UMIKAkitchen 2-Pack Large Digits Classroom Timer are 3.27 x 2.83 x 2.01 inches.

How can you reset the UMIKAkitchen 2-Pack Large Digits Classroom Timer to zero?

How do you clean the UMIKAkitchen 2-Pack Large Digits Classroom Timer?

To clean the UMIKAkitchen 2-Pack Large Digits Classroom Timer, wipe it with a soft, damp cloth. Do not immerse it in water or use abrasive cleaners.

What should you do if the UMIKAkitchen 2-Pack Large Digits Classroom Timer display is dim?

If the display on the UMIKAkitchen 2-Pack Large Digits Classroom Timer is dim, replace the AAA battery with a new one.

What is the best use for the UMIKAkitchen 2-Pack Large Digits Classroom Timer?

The UMIKAkitchen 2-Pack Large Digits Classroom Timer is ideal for various activities such as cooking, homework, sports, exercise, and classroom activities due to its precise timing and versatile features.

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.