



# Unbranded Generic SQ-001 BT Instant Printting Instruction Manual

 
[Home](#) » [Unbranded Generic](#) » Unbranded Generic SQ-001 BT Instant Printting Instruction Manual 

## Contents

- 1 Unbranded Generic SQ-001 BT Instant Printting
- 2 Product Information
- 3 Product Usage Instructions
- 4 Frequently Asked Questions (FAQ)
- 5 Brief Introduction
- 6 Key/Interface Specificantion
- 7 Power Indicator Status
- 8 Use The Wizard
- 9 Paper Replacement Course
- 10 Battery Warning Note
- 11 Matters Needing Attention
- 12 Safety instructions for transformer toys
- 13 FCC WARNING
- 14 Documents / Resources
  - 14.1 References

## Unbranded

Unbranded Generic SQ-001 BT Instant Printting

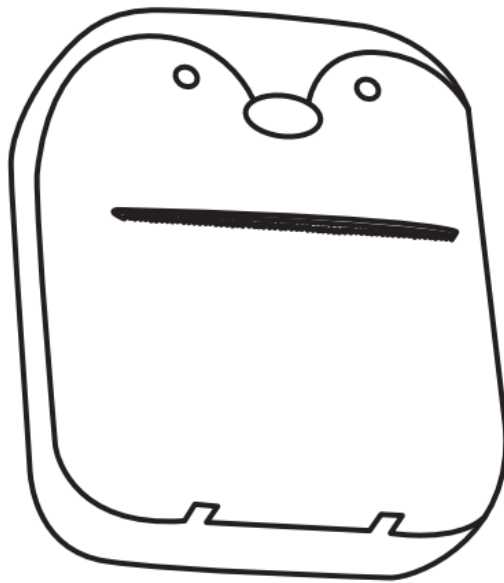

## Product Information

### Specifications

- **Model:** [Product Model]
- **Dimensions:** [Product Dimensions]
- **Weight:** [Product Weight]
- **Power Source:** [Product Power Source]
- **Color:** [Product Color]

### Description

The [Product Name] is a high-quality [product description]. It is designed to [product purpose or function]. With its sleek design and durable construction, this product is perfect for [product use cases].

### Features

- [Feature 1]
- [Feature 2]
- [Feature 3]

### Included Accessories

- [Accessory 1]
- [Accessory 2]
- [Accessory 3]

### Warranty

The [Product Name] comes with a [warranty duration]. Please refer to the warranty information provided in the package for more details.

## Product Usage Instructions

- **Step 1: Unpacking**

Remove the product from its packaging and ensure all included accessories are present.

- **Step 2: Powering On**

Connect the product to a power source using the provided power cable. Press and hold the power button until the device powers on.

- **Step 3: Setup**

Follow the on-screen prompts to complete the initial setup process. This may include language selection, Wi-Fi network connection, and account creation.

- **Step 4: Product Configuration**

Once the setup is complete, navigate to the settings menu to configure the product according to your preferences. This may include adjusting display settings, sound settings, and network settings.

- **Step 5: Product Operation**

Refer to the user manual for detailed instructions on how to use the product's various features and functions. Familiarize yourself with the control buttons, touch screen interface, and any included remote control.

- **Step 6: Product Maintenance**

To ensure optimal performance and longevity of the product, perform regular maintenance tasks such as cleaning the exterior surface, updating firmware/software, and replacing batteries if applicable.

## **Troubleshooting**

If you encounter any issues or have questions regarding the product's usage, please refer to the Frequently Asked Questions (FAQ) section below or contact our customer support for further assistance.

## **Frequently Asked Questions (FAQ)**

- **How do I reset the product to factory settings?**

To reset the product to factory settings, navigate to the settings menu, select "Reset," and follow the on-screen instructions.

- **Can I use this product with other devices?**

Yes, this product is compatible with various devices such as smartphones, tablets, and computers. Please refer to the user manual for instructions on how to connect and use it with different devices.

 
- **Is there a mobile app available for this product?**

Yes, there is a dedicated mobile app available for download on iOS and Android platforms. The app allows you to control and customize the product's settings from your smartphone or tablet.




## **Brief Introduction**

- Welcome and thank you for choosing our products, in order to understand and use our products more quickly, it is recommended that you read this manual carefully before use, and keep it properly for future reference. warnings and precautions in the instruction manual should be complied with. If there is any reference error, we hope that users will understand that the design content will be changed without notice.
- This product is a unique shape, exquisite design, easy to operate children's digital printer, designed for children's digital products, so that children in use to learn more imagination play, experience the fun of nature.
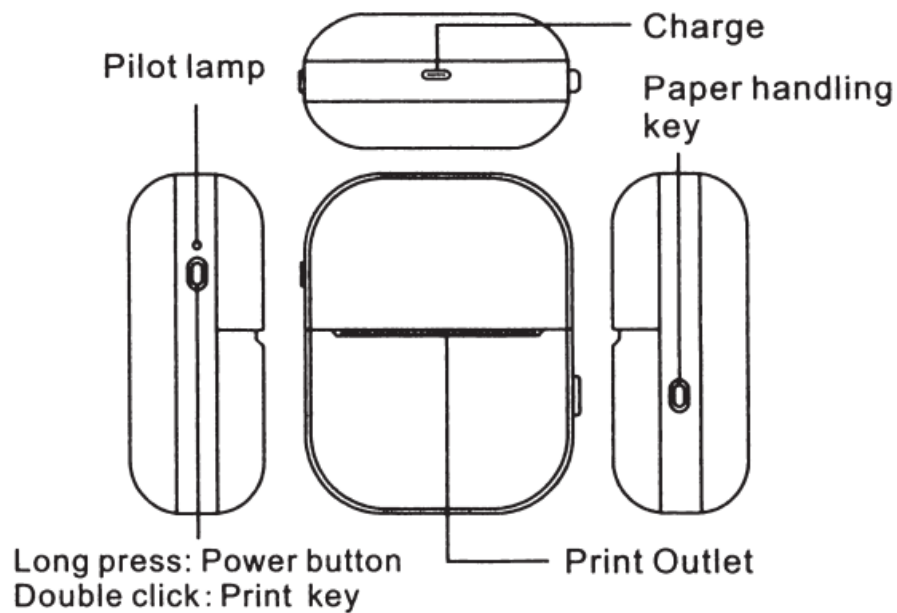
## **Key/Interface Specifcantion**




## Power Indicator Status

 	Blue light is on/quick flashing	Standby/charge completed
	Red light is always on/off	Charging/Charging completed
	Blue light flashing	Print head hot/short of paper

## Use The Wizard

1. First use please charge first, long press the power key 3 seconds to boot.

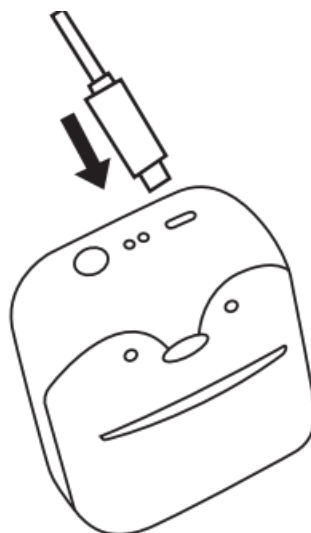

2. Apple store or Google search: WalkPrint, installed APP to use.



**WalkPrint**

efercro

 
2.9 ★  
617 reviews ⓘ

100K+  
Downloads

**E**  
Everyone ⓘ


Install

3. After mobile phone Bluetooth is enabled, download the app with the mobile phone, click “Connect” in the upper right corner of the “Print” TAB to connect the printer, and print the note after successful connection.

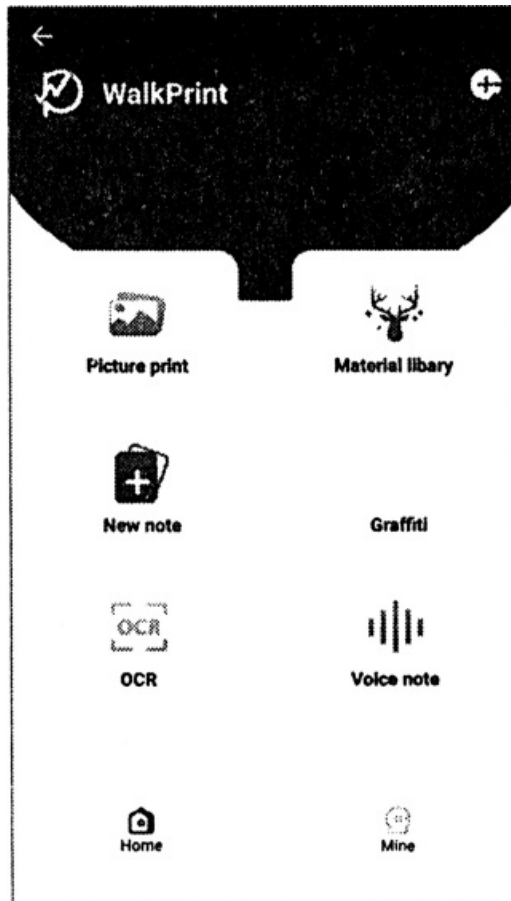


## Paper Replacement Course

 1. Press the loading and unloading paper opening key in the lower right corner to automatically pop open the loading bin and open the cover of the bin upward at the same time.

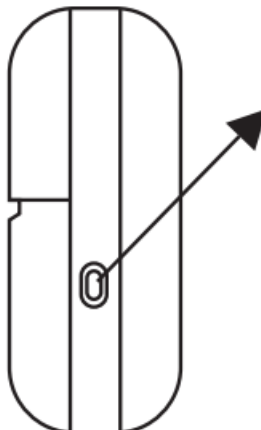


2. Take out the old paper roll and put the new paper roll in the direction shown. The paper should be put straight and not crooked.

 
**(Note:** The new thermosensitive paper needs to be exposed to 2 cm of paper bin length so that the machine can absorb paper automatically when the paper bin is shaped)

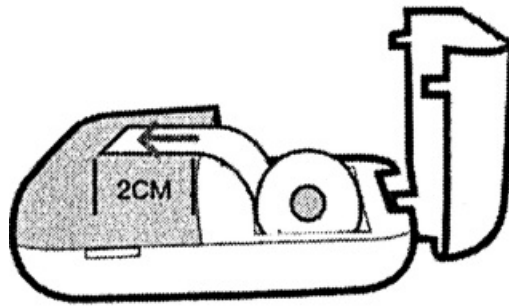

 3. Cover the paper bin, the machine can automatically absorb paper after normal use.

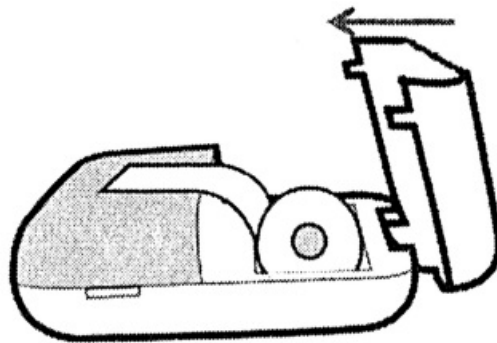

 4. After the above steps are correct, the machine can print normally.

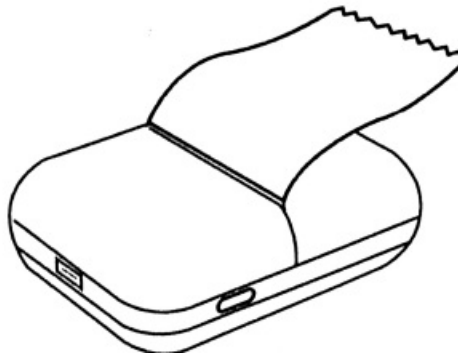

### Battery Warning Note

1. Please use 5V charger to charge according to the specification to avoid damage to the machine;
2. Disassembly, impact, extrusion or fire are prohibited;
3. If severe bulging occurs, do not continue to use;
4. Do not put in high temperature environment, battery after immersion is prohibited to use;
5. Replacement with the wrong type of battery can be explosive, be sure to follow the instructions to dispose of used batteries.

### Matters Needing Attention

1. When charging, please gently insert or pull out the charging line to prevent excessive force damage to the port;
2. After charging, please unplug the charging line in time;
3. In order to avoid danger, do not use or charge in high temperature, high humidity, excessive smoke and dust environment, such as: bathroom, steam room, open fire, etc;

4. Improper charging may lead to print head damage;
5. Do not touch the print head to prevent overheating and scalding;
6. Tear paper blade sharp, be careful not to touch.

### **Safety instructions for transformer toys**

1. Toys should not be eaten by children under 3 years of age;
2. Toys can only use the recommended transformer;
3. Transformers are not toys;
4. Toys that can be cleaned with liquid shall be disconnected from the transformer before cleaning;
5. Toys should not be connected to power supply in excess of the recommended quantity;
6. Check its wires, plugs, shells and other components regularly for damage, and stop using them when found to be damaged until repaired.

### **FCC WARNING**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference
2. this device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- **Note:** The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. This equipment complies with FCC's RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.

	<a href="#">Unbranded Generic SQ-001 BT Instant Printting</a> [pdf] Instruction Manual SQ-001 BT Instant Printting, SQ-001, BT Instant Printting, Instant Printting, Printting
--	---

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.