



# UNI-COM 66439 Keypad Alarm Instruction Manual

[Home](#) » [UNI-COM](#) » **UNI-COM 66439 Keypad Alarm Instruction Manual** 

## Contents

- [1 UNI-COM 66439 Keypad Alarm](#)
- [2 Product Information](#)
- [3 Battery Installation / Setting Your Security Code](#)
- [4 Alarm](#)
- [5 Panic Button](#)
- [6 Batteries](#)
- [7 Troubleshooting](#)
- [8 Safety warning](#)
- [9 Guarantee](#)
- [10 Documents / Resources](#)
  - [10.1 References](#)
- [11 Related Posts](#)

# UNI-COM

**UNI-COM 66439 Keypad Alarm**



## Product Information

The Keypad Alarm is a security device designed to secure your home or office. It features a keypad for inputting security codes, a magnetic contact sensor for detecting door openings, and a panic button for immediate activation of the siren. The device is powered by 2 AA batteries and has a low battery warning feature.

## Battery Installation / Setting Your Security Code

1. Remove the battery cover on the back of the keypad.
2. Insert 2 x AA batteries, observing the polarity markings – the red LED will flash on the front of the keypad for 45 seconds.
3. Refit the battery cover.
4. Before the red LED stops flashing enter the factory default code 0000 followed by the button – you will hear a single beep.
5. Then enter your new 4-8 digit security code followed by the button – you will hear a double beep.
6. Wait for the red LED to stop flashing before you continue.

## Alarm

## Fitting The Alarm



1. Fit a single screw to the wall, then insert the screwhead into the keyhole on the back of the keypad and slide down.
2. The keypad can then be fitted more permanently by inserting a further two screws through the keypad (the holes are located either side of the speaker at the bottom of the keypad) – this is recommended to avoid accidental movement of the keypad and therefore problems setting the alarm.
3. The magnetic contact can be mounted either side of the keypad using the adhesive pad, it must be adjacent and the arrowheads on each unit must line up – ensure the space between the keypad and magnetic contact is 10mm or less.

### **Setting The Alarm**

1. Open the door – the red LED will flash on the front of the keypad for 45 seconds.
2. Before the LED stops flashing enter your security code followed by the # button – the red LED will stop flashing.
3. Exit the building and close the door – there is an exit delay of 30 seconds, the red LED will illuminate momentarily before going off to confirm the alarm is armed.

### **Disarming The Alarm**

1. Open the door – a rapid succession of clicks will sound for 10 seconds (entry delay).
2. Before the clicks stop enter your security code followed by the # button – the red will start flashing and you will not be able to set the alarm again until it stops.
3. Failure to enter the correct security code within 10 seconds will trigger the loud siren. The siren will continue to sound until it is disarmed using your security code.

### **Panic Button**

1. Press the red PANIC button on the front of the keypad to immediately activate the siren.
2. To turn the siren off enter your security code followed by the # button.

### **Batteries**

This product uses 2 x AA batteries. They must be removed prior to disposal. Help the environment by disposing of your product and batteries responsibly.

### Low Battery Warning

The yellow LED on the front of the keypad will flash to indicate when batteries need replacing.

## Troubleshooting

### I have forgotten my security code?

1. Remove the batteries from the keypad – the security code will reset to the factory default code 0000.
2. Follow the Battery installation / Setting your security code section overleaf.

## Safety warning

This product is designed to help deter burglars. It does not guarantee protection and should be used in conjunction with other security measures. Keep out of reach of children. For indoor use only. Remove batteries if the product is not going to be used for an extended period. Do not mix new and used batteries. Do not mix different types of batteries. Exhausted batteries must be removed immediately. Failure to follow these safety instructions could result in fire, electric shock, injury or damage to persons, product or property and will invalidate the guarantee.

## Guarantee

This product is guaranteed for one year from the date of purchase against faulty parts or workmanship. It does not cover batteries or physical damage to the unit. Proof of purchase required. This does not affect your statutory rights.

V2 Made in China

Uni-Com (Global) Ltd. 1 & 2 Enterprise Way, Edenbridge, Kent, TN8 6EW

+44 (0)1732 865238

[info@uni-com.co.uk](mailto:info@uni-com.co.uk)

[www.uni-com.co.uk](http://www.uni-com.co.uk)

### Authorised Representative

Zatisfy AB

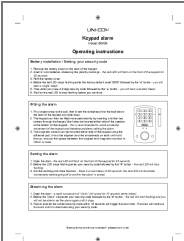
Storgatan 51

90326 Umeå

Sweden

+46 (0)70-5790027

## Documents / Resources

	<p><a href="#">UNI-COM 66439 Keypad Alarm</a> [pdf] Instruction Manual 66439 Keypad Alarm, 66439, Keypad Alarm, Alarm</p>
---	---

## References

-  [Uni-Com \(Global\) Ltd](#)

Manuals+.