



UNI-COM 67443 Remote Control Sockets 3 Pack User Manual

[Home](#) » [UNI-COM](#) » UNI-COM 67443 Remote Control Sockets 3 Pack User Manual 

UNI-COM 67443 Remote Control Sockets 3 Pack User Manual



Contents

- [1 Safety warning](#)
- [2 Directions for use](#)
- [3 How to clear the channels and reset a socket](#)
- [4 Battery replacement – remote](#)
- [5 Specification](#)
- [6 Guarantee](#)
- [7 Support](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)

Safety warning

Keep out of reach of children. For indoor use only. Do not plug in an appliance where the load exceeds 13A. Always ensure the plug of any appliance is fully inserted into the socket. Do not use if the casing of the socket becomes cracked or damaged. Remove the batteries if the remote control is not going to be used for an extended period. Do not mix new and used batteries. Do not mix different types of batteries. Exhausted batteries should be removed immediately. Failure to follow these instructions could result in fire, electric shock, injury or damage to persons, product or property and will invalidate the guarantee.

Directions for use

The remote is supplied with 2 x AAA batteries – before first use remove the battery tab from the battery compartment.

1. Plug a socket into the mains and switch on, the button on the top of the socket will flash red.
2. Within 30 seconds choose a channel (**A,B,C or D**) on the remote and press the corresponding **ON** button, you will hear the relay in the socket click and the button will stop flashing red.
3. Plug your appliance into the socket and use the selected channel **ON/OFF** button to operate.
4. Repeat the above process on the remaining sockets.
5. All sockets can be turned on and off simultaneously using the **ALL ON/OFF** buttons on the remote control.
6. The sockets can also be turned on and off manually by pressing the button on the top of the socket.

How to clear the channels and reset a socket

1. Turn the power off and on at the mains (the button on the top of the socket will flash red).
2. Press and hold the **ALL OFF** button on the remote (the red flashing will become quicker).
3. When the button stops flashing all channels are clear and the socket is reset.

Battery replacement – remote

1. On the back of the remote slide the battery cover down and lift to remove.
2. Insert 2 x AAA batteries, observing the polarity markings.
3. Refit the battery cover.

Specification

- 240V AC 50Hz
- **Max load:** 13A
- **Frequency:** 433.92MHz

Hereby, Uni-Com (Global) Ltd declares that the radio equipment type door chime is in compliance with the Radio Equipment Regulations 2017 (SI 2017/1206) and Directive 2014/53/EU. The full text of the UKCA Declaration of Conformity is available to view at www.uni-com.co.uk.

Guarantee

This product is guaranteed for one year from the date of purchase against faulty parts or workmanship. It does not cover batteries or physical damage to the units. Proof of purchase required. This does not affect your statutory rights.

Batteries



The remote uses 2 x AAA batteries. They should be removed prior to disposal.



Made in China



UK(NI)



Support

Authorised Representative

AB 51 90326 Sweden +46 (0)70-5790027

Uni-Com (Global) Ltd.
1 & 2 Enterprise Way,
Edenbridge, Kent, TN8 6EW
+44 (0)1732 865238
info@uni-com.co.uk
www.uni-com.co.uk

UNI-COM

Documents / Resources

	<p>UNI-COM 67443 Remote Control Sockets 3 Pack [pdf] User Manual</p> <p>67443 Remote Control Sockets 3 Pack, 67443, Remote Control Sockets 3 Pack, Control Sockets 3 Pack</p>
--	---

References

- [Uni-Com \(Global\) Ltd](#)