



UNI-T 251C Leakage Current Clamp Meter Software User Guide

[Home](#) » [UNI-T](#) » UNI-T 251C Leakage Current Clamp Meter Software User Guide 

UNI-T 251C Leakage Current Clamp Meter Software



Contents

1 Software Installation.

1.1 Run the green version on your computer:

1.2 Install the installation version on your computer:

2 Documents / Resources

3 Related Posts

Software Installation.

Run the green version on your computer:

Step1: Put the disc in your CD-ROM.

Step2: Open the CD-ROM at the root list.

Step3: Copy "SetupFile\support" document to your hard disk C: or other disk.

Step4: Open "SetupFile\support" document and double click the icon

 


“ ” to run the software, and you can see the interface of the software and then installation has finished

Install the installation version on your computer:

Step1: Put the disc in your CD-ROM.

Step2: Open the CD-ROM at the root list.



UNI-T®

[illegible]

Manuals+,