



UNI-T 315A Handheld Vibration Testers User Manual

[Home](#) » [UNI-T](#) » UNI-T 315A Handheld Vibration Testers User Manual 

Contents

- [1 UNI-T 315A Handheld Vibration Testers](#)
- [2 System Requirements](#)
- [3 Installing the Software](#)
- [4 Using the Software](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)



UNI-T 315A Handheld Vibration Testers



System Requirements

- Pentium 1 Gigahertz (GHz) processor or faster
- At least 1GB of RAM
- At least 2GB of available space on the hard disk
- USB 2.0/3.0

software only supports the following operating systems

- Microsoft Windows Vista
- Microsoft Windows 7
- Microsoft Windows 8
- Microsoft Windows 10


If your Windows does not contain the corresponding service pack version, please perform a Windows update first.

Installing the Software

1. Insert the installation CD-ROM into your computer
2. The menu will be opened automatically (if installation doesn't start immediately, double-click Setup.exe in your CD-ROM directory).

Using the Software

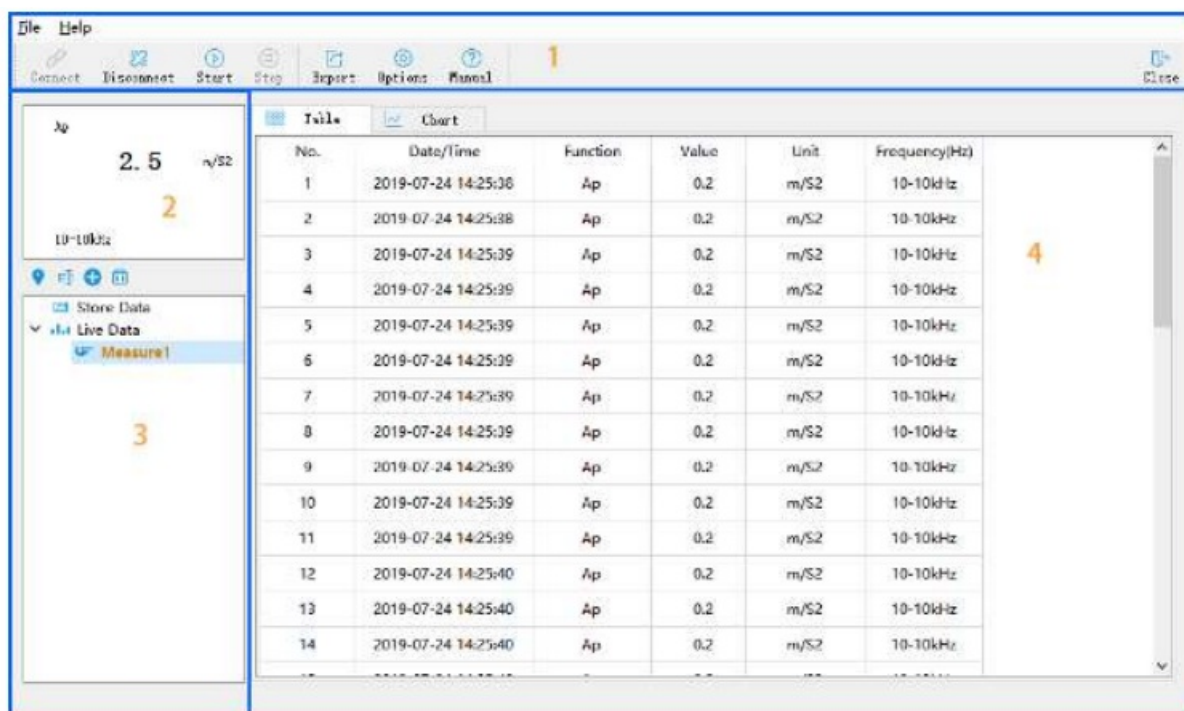

Interface and basic functions



Area	Description
1	Menu and toolbar
2	Shows the live-data from the DMM
3	Data items contain live-data and store-data
4	Data details, contain a table and a chart


Get live-data

Make sure the meter and computer are connected via a USB cable

1. Click the  and the software will attempt to connect to the meter
2. Click the  and the software will get data from the meter
3. Live-data will be displayed in area 2
4. Data details will be saved in the form of tables and charts.


Get Store-Data

1. The stored-data will be saved in the “Store Data” item.

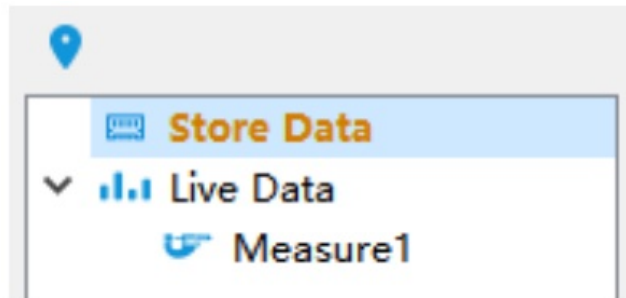

Export

1. Click the  **Export**
2. Select the export project as needed. If you export to PDF, you can select a scene picture.

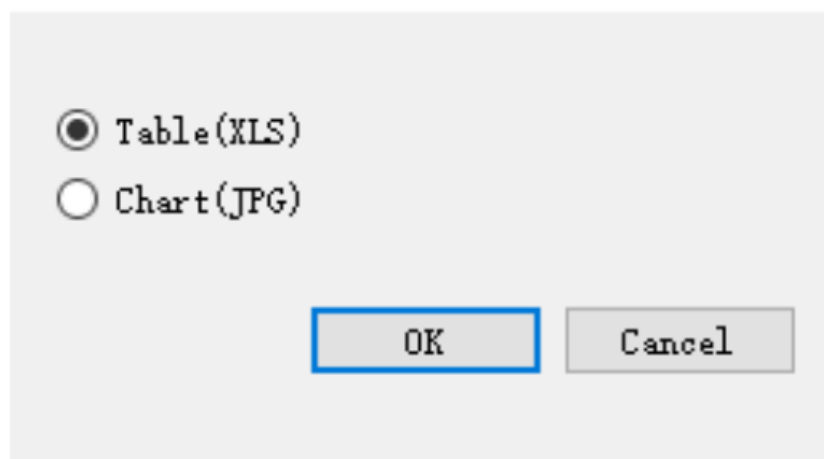

3. Input file name

Setup software



Click **Options** to open options dialog

Sample points 1000 ☒ Infinite

Sample rate 0mS


Skip repeat reading ☐

Ok Cancel

- “Sample Points” Set the number of sampling points. If “Infinite” is checked, the number is unlimited
- “Sample rate”: Set the sampling rate. If the set rate is greater than the actual rate, the actual rate will prevail; if set to 0, the actual rate will be sampled
- “Skip repeat reading”: If checked, the same sample value as the previous one is not recorded


Item operation

Live-data

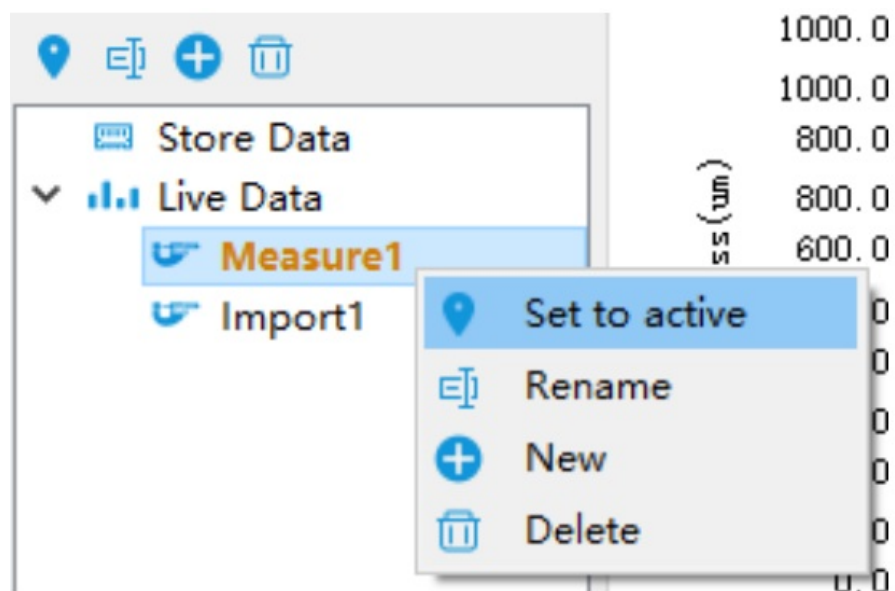

Name	Description
Set to active	Set the selected item to be activated, and the received data will be saved to this item.
Rename	Rename the selected item
New	Create a new item and set it to active
Delete	Delete the selected item

Store-data

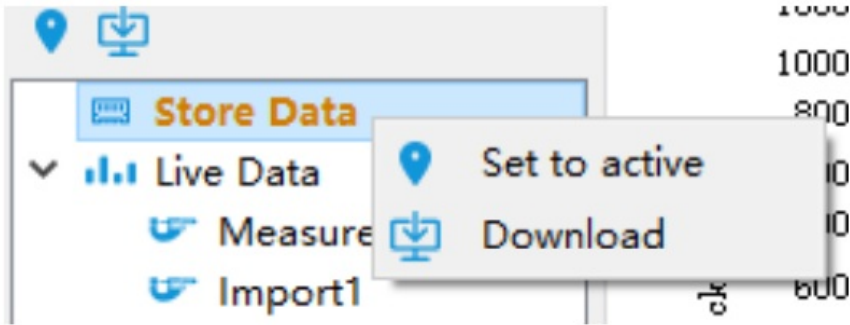


Name	Description
Set to active	Set the selected item to be activated
Download	Download store data

Get help



Click to open the “Software user manual”

Documents / Resources

	<p>UNI-T 315A Handheld Vibration Testers [pdf] User Manual 315A, Handheld Vibration Testers, 315A Handheld Vibration Testers, Vibration Testers, Testers</p>
---	---