



UNI-T LM32DA Digital Angle Meter User Manual

[Home](#) » [UNI-T](#) » UNI-T LM32DA Digital Angle Meter User Manual 

UNI-T®

LM32DA Digital Angle Meter
User Manual

 


LM32DA/LM32DB
Digital Angle Meter User Manual

Contents

- [1 Product Description](#)
- [2 Operation](#)
- [3 Calibration:](#)
- [4 Data hold:](#)
- [5 Unit conversion:](#)
- [6 Specifications](#)
- [7 Documents / Resources](#)

Product Description

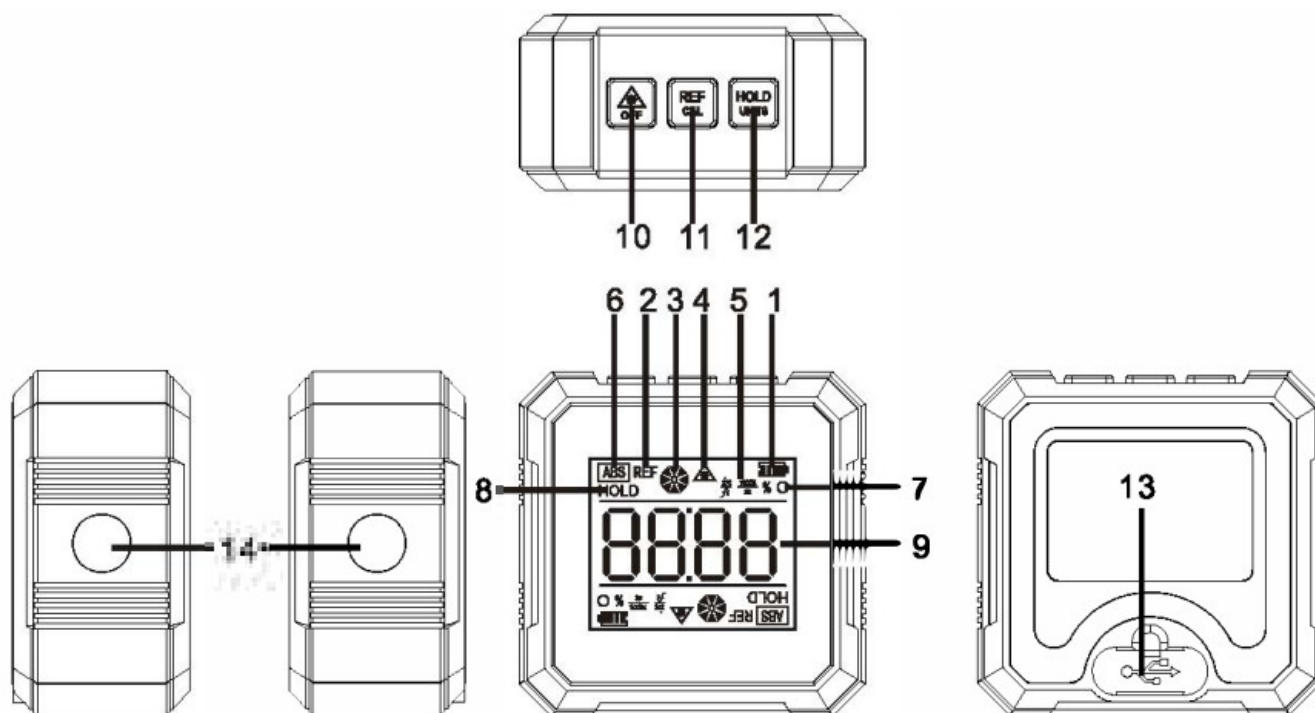

1	Battery status
2	REF relative zero
3	Product tilt direction
4	Laser
5	Unit conversion (in/ft; mm/m)
6	ABS horizontal zero
7	Gradient unit (%!°)
8	Data hold
9	Measurement result
10	Power/laser button
11	REF/ABS/calibration button
12	Data hold/unit conversion button
13	Type-C charging interface
14	Laser emission aperture (LM320B)

Operation

Power on:

 
When the meter is not turned on, short press  to power on.

Power off:



When the meter is turned on, long press  to power off.

Laser (LM320B only)

After turning on the meter, short press  to step through: turn on the left-side laser> turn on the right-side laser > turn on the lasers on both sides> turn off the lasers on both sides.

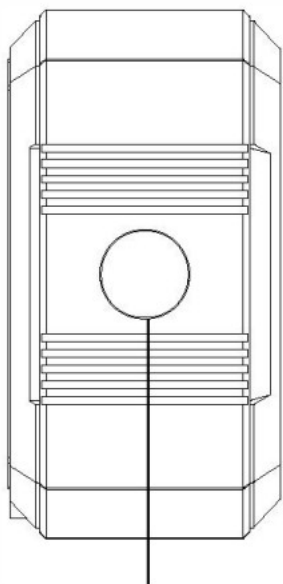


**Left-side laser
(LM320B)**

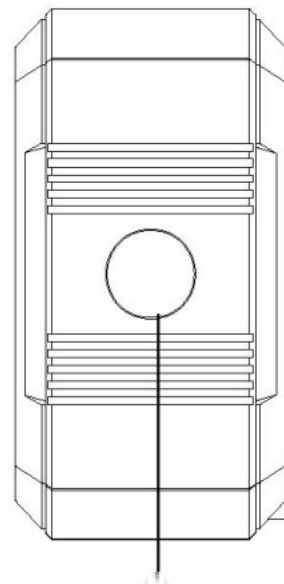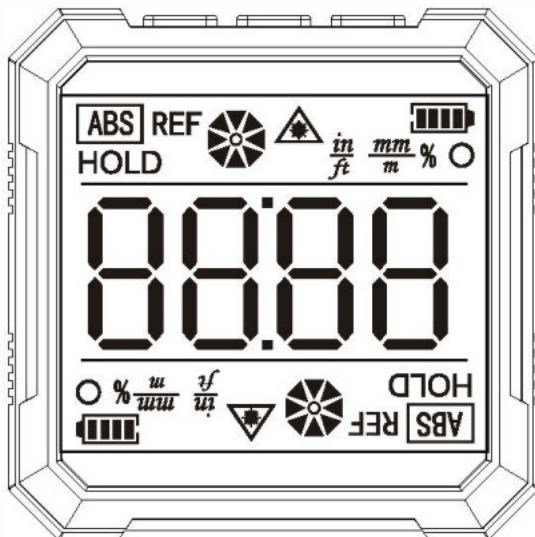  

**Right -side laser
(LM320B)**

Angle measurement:

 
When the meter is turned on, place it on an inclined surface. The value displayed on the screen is the angle between the inclined surface and the horizontal plane.

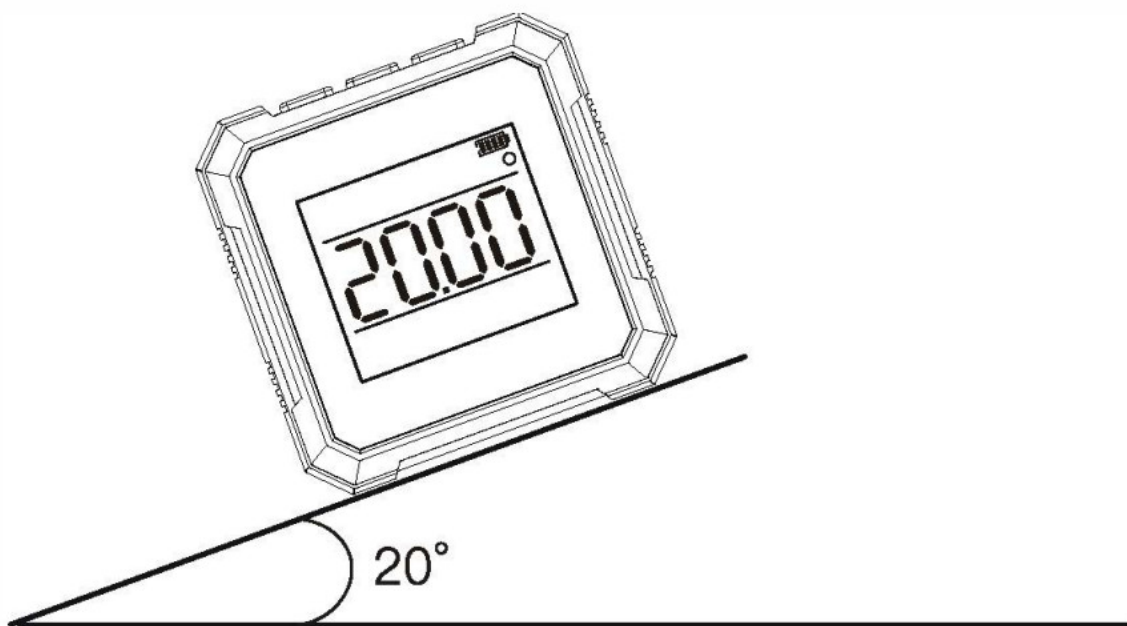


REF (relative value mode):

Short press to enter the relative value mode (set the current measurement value to 0). Short press again to exit this mode.

 
Enter the relative value mode

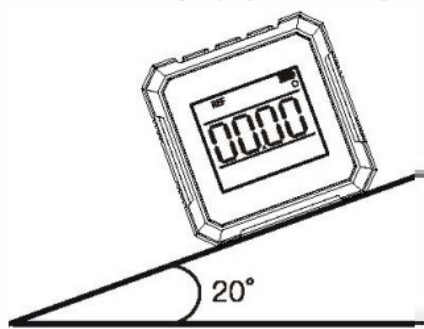

Relative value mode icon

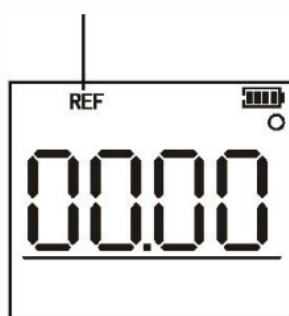 

Absolute value mode icon

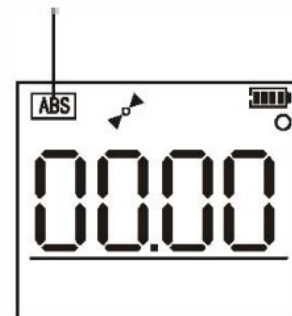 

Calibration:

Place the product upright on a flat, smooth surface as shown in Figure 1. Long press, "1" will show on the screen (Figure 2). Short press  to proceed to the next step (Figure 3). Rotate the product 180° in the same position (Figure 4). Short press  to complete the calibration.

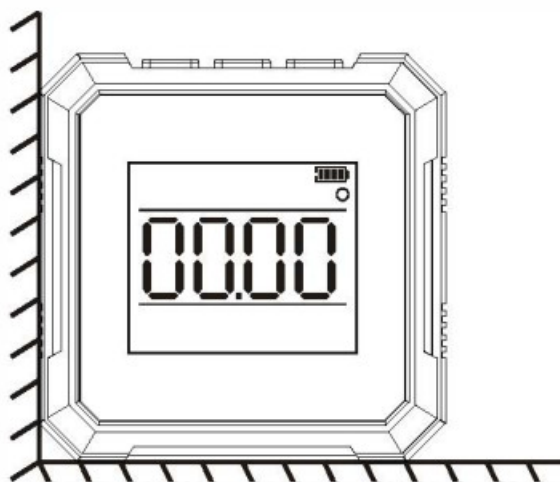 


Figure 1

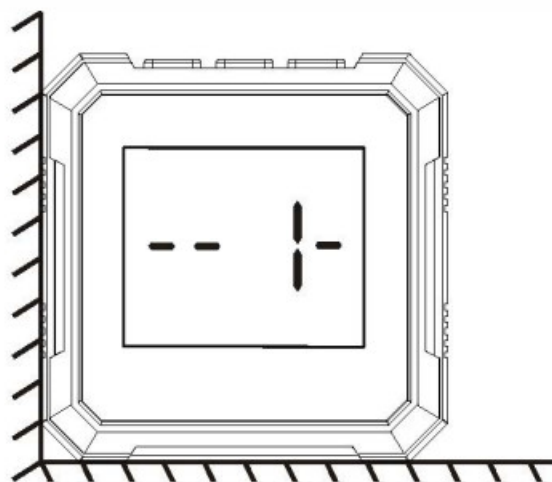 


Figure 2

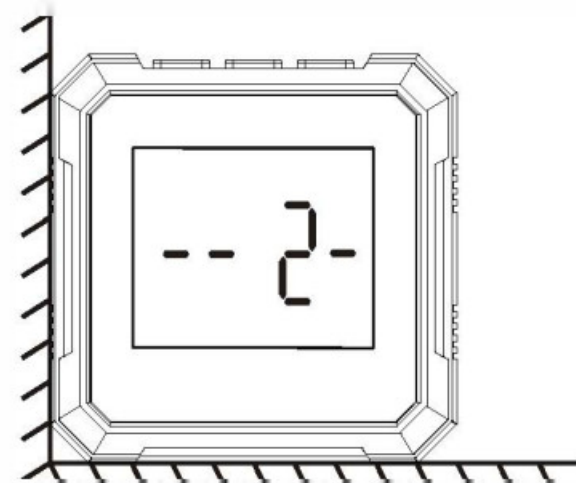 


Figure 3


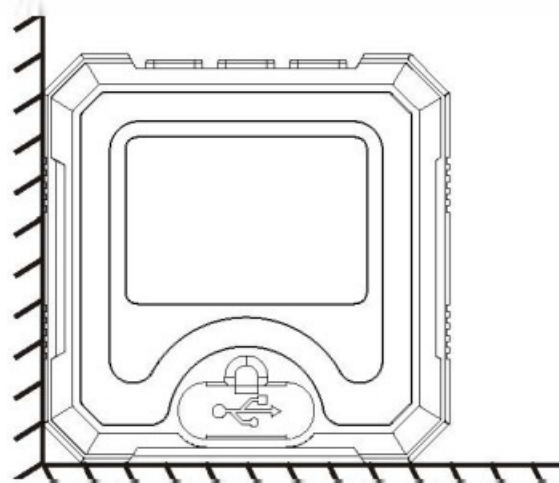 


Figure 4


Data hold:

Short press  to freeze the current measurement data.

 Short press  again to exit this function.

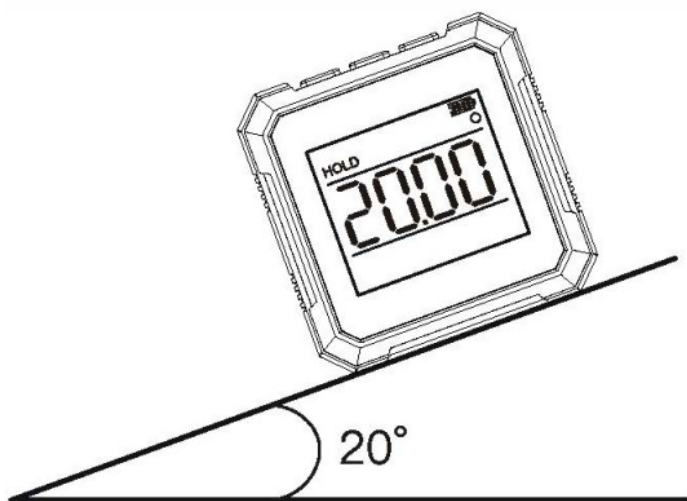


Data hold icon

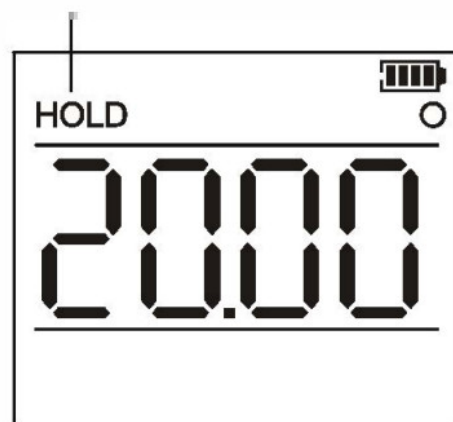 


Unit conversion:

 Long press  to convert the unit (default unit: °). Other selectable units: mm/m, %, in/ft.

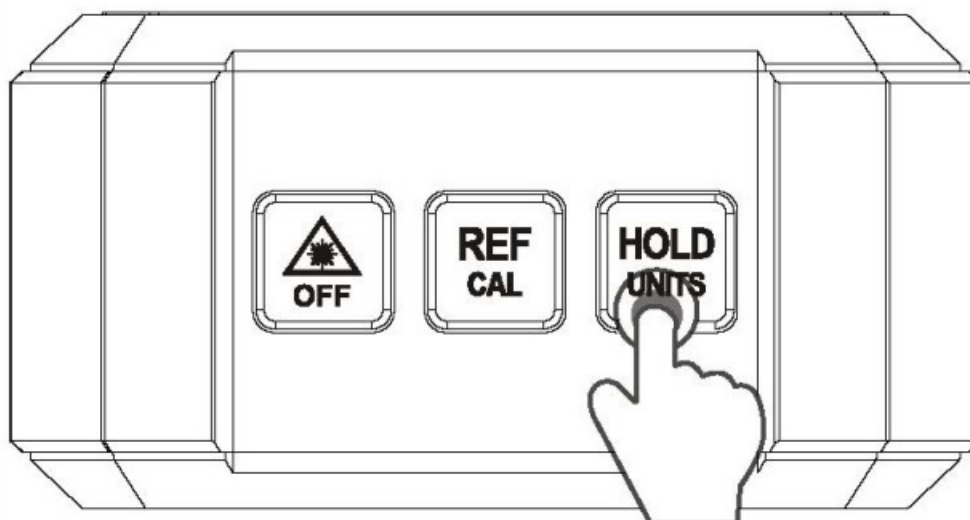

Charging:

 When the low battery indicator  shows on the upper right corner of the screen, please use the attached charging cable to charge the product.

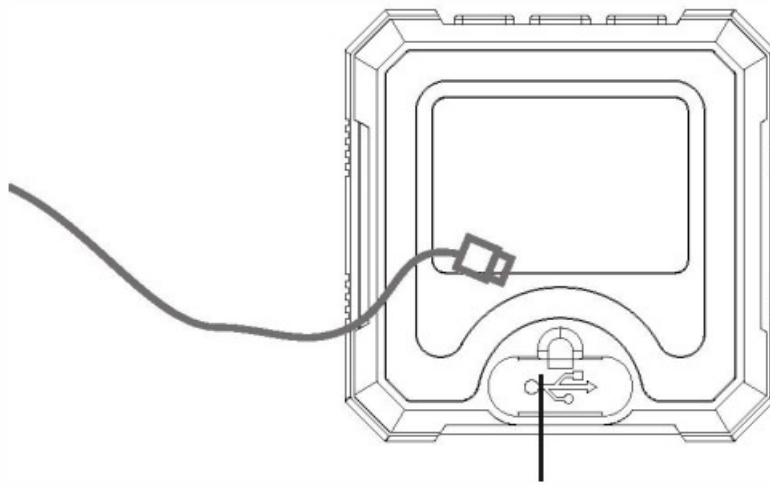

Type-C charging interface

Specifications

Model	LM320A	{ LM320B
Measurement range	4*90°	
Accuracy	± (0.2°)	
Resolution	0.01°	
Laser	/	Two-side lasers
Operating temperature	0-50°C	
Display	EBTN, with backlight	
Battery	3.7V 300mAh lithium battery	
Charging interface	USB Type C	
Battery life	2h	
Magnet base	Two-side magnets	Four-side magnets
Frame material	Aluminum alloy	
Relative/absolute measurement	-,./	
Angle lock	-,./	
Low battery indication	-,./	
Auto power off	5 minutes	
Product size	61*61*31 mm	
Standard accessories	Angle meter: 1pc, USB cable: 1pc, user manual: 1pc, base plate: 1pc	

Cautions

1. Please do not use organic solvents to clean this product.

- 2. Please use a soft cloth to clean the dirt to avoid damaging the surface of the product.
- 3. The meter will power off automatically if no button press occurs for 5 minutes

UNI-T®
UNI-TREND TECHNOLOGY (CHINA) CO., LTD.
No. 6, Gong Ye Bei 1st Road,
Songshan Lake National High-Tech Industrial
Development Zone, Dongguan City,
Guangdong Province, China



Documents / Resources

	UNI-T LM32DA Digital Angle Meter [pdf] User Manual LM32DA, LM32DB, LM32DA Digital Angle Meter, Digital Angle Meter, Angle Meter, Meter
--	---