



UNI-T UT07A-EU Socket Tester User Manual

[Home](#) » [UNI-T](#) » UNI-T UT07A-EU Socket Tester User Manual 

Contents

- [1 UNI-T UT07A-EU Socket Tester](#)
- [2 Operating Instructions](#)
- [3 SPECIFICATIONS](#)
 - [3.1 OPERATION](#)
- [4 Cleaning Requirement](#)
- [5 UNI-TREND TECHNOLOGY \(CHINA\) CO. LTD.](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

UNI-T®

UNI-T UT07A-EU Socket Tester



Operating Instructions

READ ALL OPERATING INSTRUCTIONS BEFORE USE

WARNING: Use extreme caution when testing live electrical circuits due to risk of injury from electric shock. UNI-T Instruments assumes basic knowledge of electricity on the part of the user and is not responsible for any injury or damages due to improper use of this tester. Observe and follow all standard industry safety rules and local electrical codes. When necessary call a qualified electrician to troubleshoot and repair the defective.

SPECIFICATIONS

- **Operating Range:** AC 230V(+10%/-6%).50Hz- 60Hz

OPERATION

- Plug the tester into any 230V(#10%) Volt standard Socket.
- View the indications on the tester and match with the chart on the tester.
- If the tester indicates a wiring problem then turn off all power to the socket and Repair wiring.
- Restore power to the socket and retest.


 

 



NOTICE

- All appliances or equipment on the circuit being tested should be unplugged to help avoid erroneous readings.
- Not a comprehensive diagnostic instrument but a simple instrument to detect nearly all probable common improper wiring conditions.
- Refer all indicated problems to a qualified electrician.
- Will not indicate quality of ground.

- Will not detect 2 hot wires in circuit.
- Will not detect a combination of defects.
- Will not indicate reversal of grounded and grounding conductors.
- Check for correct wiring of Socket and all remotely connected Socket on the branch circuit.
- Operate the test button on the LEAKAGE installed in the circuit. The LEAKAGE must trip.
- If it does not do not use the circuit consult an electrician.
- If the LEAKAGE does trip, reset the LEAKAGE.
- Then, insert the LEAKAGE tester into the Socket to be tested.
- Operate the test button of the LEAKAGE less than 3 Seconds.

If the tester fails to trip the LEAKAGE, it suggests

1. A wiring problem with a totally operable LEAKAGE.
2. Or proper wiring with a faulty LEAKAGE, Consult with an electrician to check the condition of the wiring and "LEAKAGE".

UT07 Series Socket Tester						
		RED	RED	RED	UT07A-EU	UT07B-EU
L>	OK, Phase on the right side	○	●	●	✓	✓
L<	OK, Phase on the left side	●	●	○	✓	✓
	Ground missing	○	●	○	✓	✓
	Phase missing	○	○	○	✓	✓
	Neutral missing	○	○	●	✓	✓
	Neutral missing	●	○	○	✓	✓
L<>PE	Phase/Ground inverted	●	○	●	✓	✓
L<>PE& 	Phase /Ground inverted and Ground missing	●	●	●	✓	✓
Socket Rated Voltage		250VAC			✓	✓
Socket Rated Current					10A	10A
Leakage Test (Press time <3S)		About 30mA			X	✓
 :Double Insulated					✓	✓
CE					✓	✓
Pollution Degree		2			✓	✓
Operating Temperature		0°C~40°C			✓	✓
Storage		-10°C~50°C			✓	✓
Humidity		<75%			✓	✓
Altitude		2000m			✓	✓
This Unit Will Not Detect Earth Neutral Reverse					✓	✓
 Do not discard this product as an unclassified municipal waste, but put it into a fixed cell recycle bin for disposal.					✓	✓

- ○ LED OFF
- ● LED ON

Cleaning Requirement

- Clean it with a cloth dampened with water.

Notes: Resume its use only when it is completely dried out after it is cleaned.

UNI-TREND TECHNOLOGY (CHINA) CO. LTD.

- No6, Gong Ye Bei 1st Road, Songshan Lake National High-Tech Industrial Development Zone, Dongguan City, Guangdong Province, China
- **Tel:** (86-769) 8572 3888
- <http://www.uni-trend.com>

P/N: 110401106039X

MAY.2018 REV. 1

Documents / Resources

	UNI-T UT07A-EU Socket Tester [pdf] User Manual UT07A-EU Socket Tester, UT07A-EU, Socket Tester, Tester
---	---

[Manuals+.](#)