



# UNI-T UT620A Digital Micro Ohm Meter User Manual

[Home](#) » [UNI-T](#) » UNI-T UT620A Digital Micro Ohm Meter User Manual 

UNI-T UT620A Digital Micro Ohm Meter



## Contents

- [1 System Prerequisites](#)
  - [1.1 Recommended configuration](#)
  - [1.2 Install Soft](#)
  - [1.3 ware](#)
- [2 Main Screen](#)
- [3 Using Program](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)

## System Prerequisites

### Recommended configuration

|                  |  |
|------------------|--|
| Processor        | Pentium® 4 or higher with support of all customary operating systems |
| Operating system | Microsoft Windows® XP / Vista / Win7                                 |
| Memory           | 512 MB RAM or higher   |
| Monitor          | VGA (1024 x 768)   |
| Drive            | CD-ROM   |
| Input device     | Mouse or compatible  |
| Interface        | USB  |


## Install Software

### ware

- Insert the provided CD disk into CD-ROM drive.
- Double-click “XXX\_VX.XX.exe” (X can be 0 to 9 or blank, indicating the software version)
- The pop-up windows will guide you through the program setup process.

## Main Screen

- ① Main display screen of measurement
- ② Secondary display screen for measurement
- ③ Control buttons

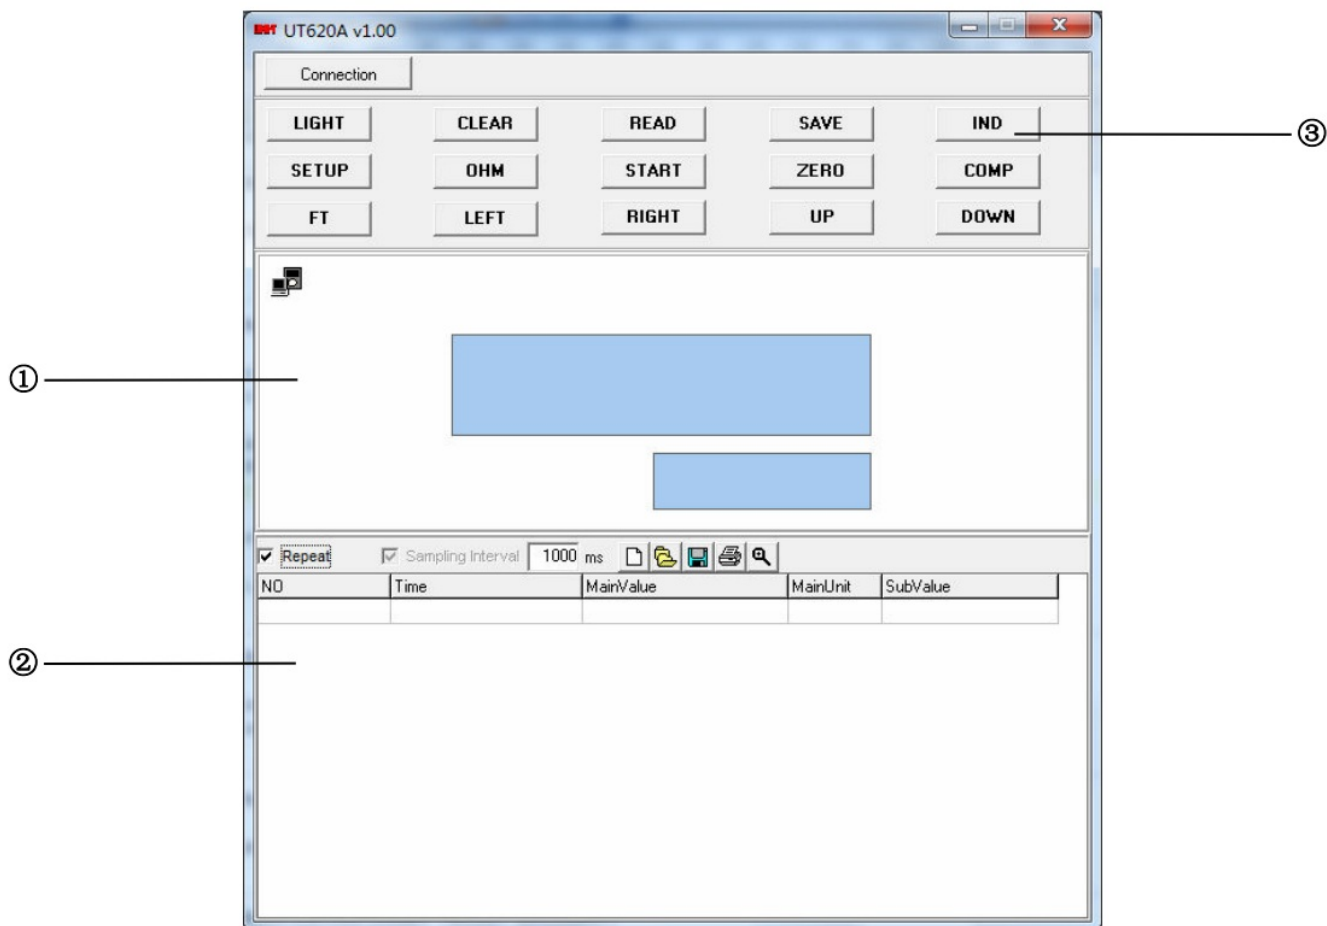

## Using Program

Click “Connection” and is blinking indicates meter is successfully connected to the PC and meter will automatically start taking measurements. Primary display screen shows measurement, secondary display screen shows all measurement data.

- ① Zoom grid
- ② Print data
- ③ Save data (\*.txt, \*.xls, \*.xml)
- ④ Open files (\*.txt, \*.xls, \*.xml)

