



UniFi 6 plus Long Range Installation Guide

[Home](#) » [Unifi](#) » UniFi 6 plus Long Range Installation Guide 

Contents

- [1 UniFi 6 plus Long Range](#)
- [2 PARTS](#)
- [3 INSTALLATION INSTRUCTION](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)




UniFi 6 plus Long Range



PARTS



a

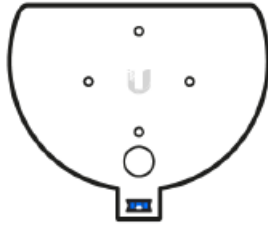

b




c



d




e

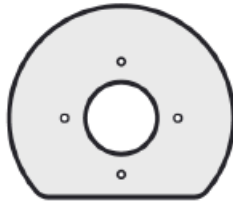

f



g

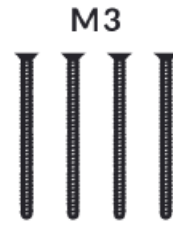


h



i

INSTALLATION INSTRUCTION

A

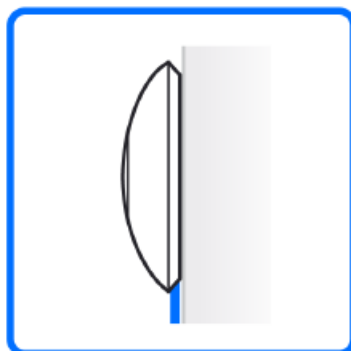

1



2

Ø6mm
(Ø1/4")





3







4




5

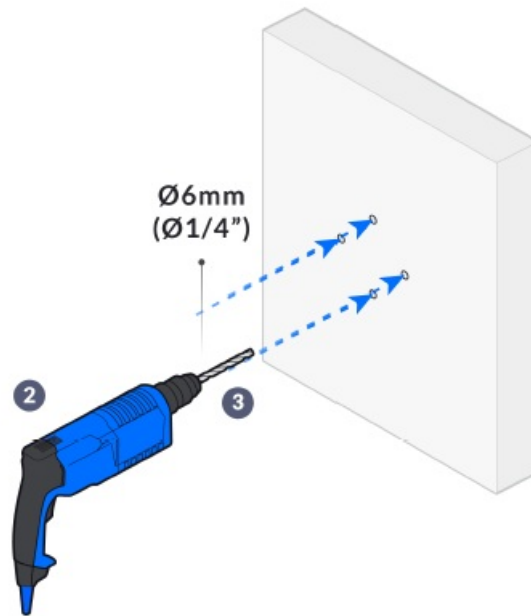
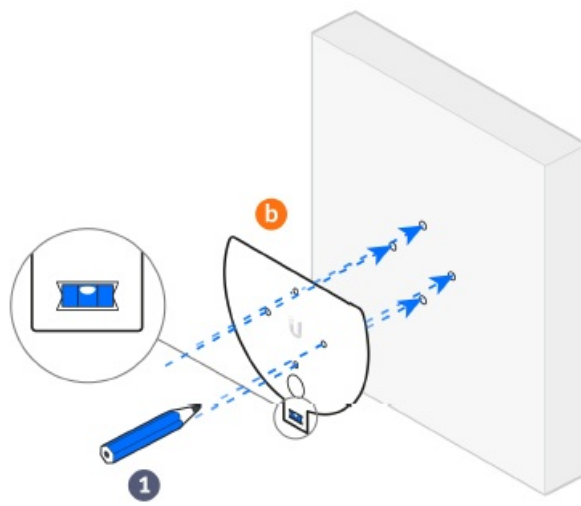


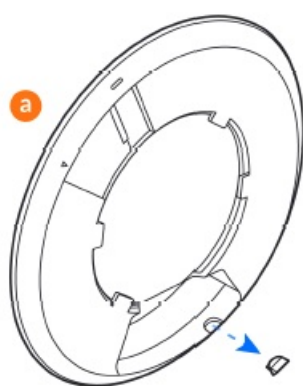
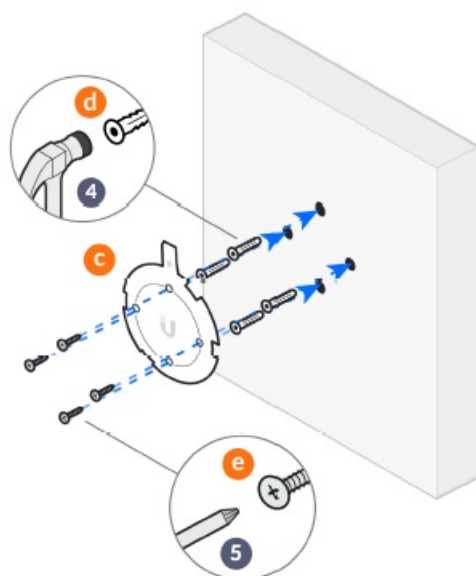


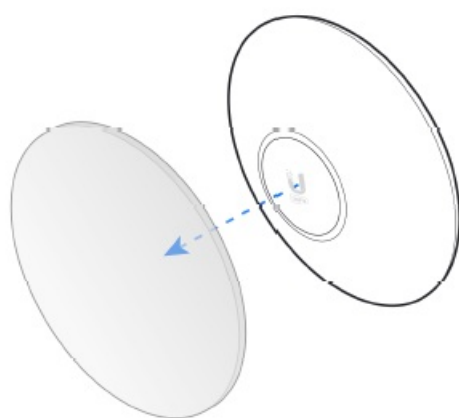
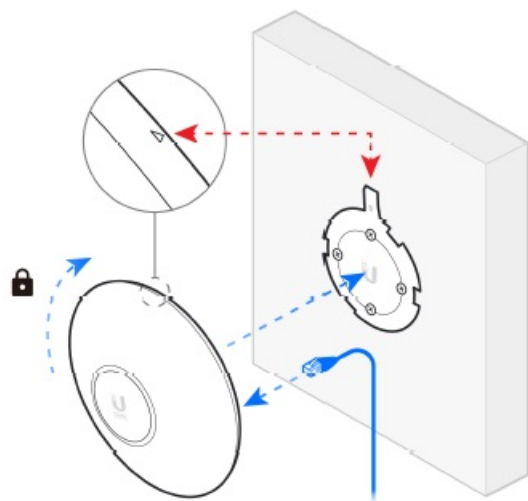


B

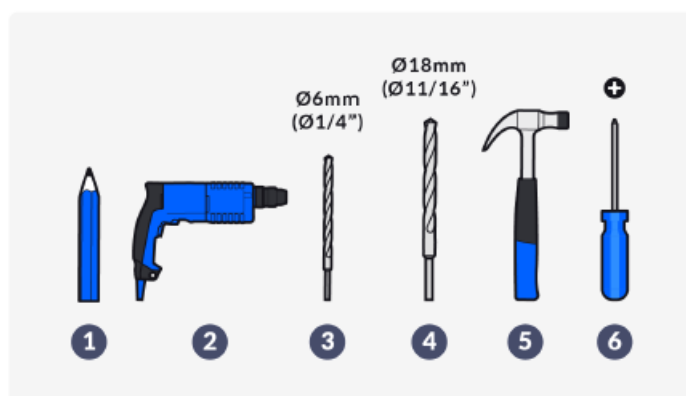


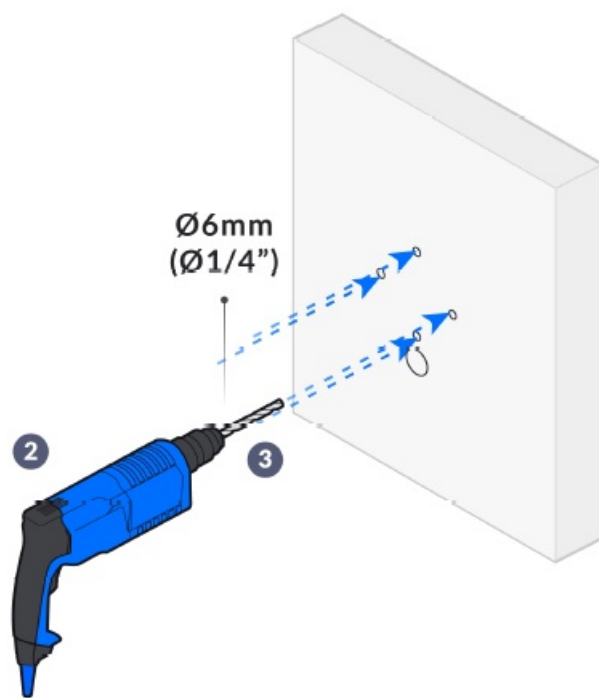
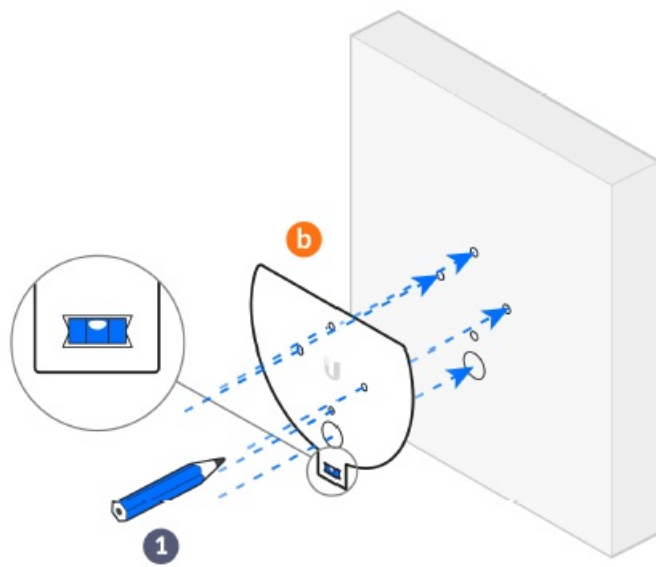


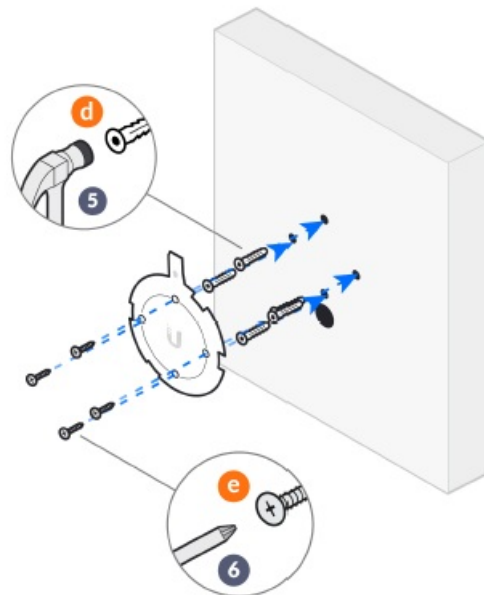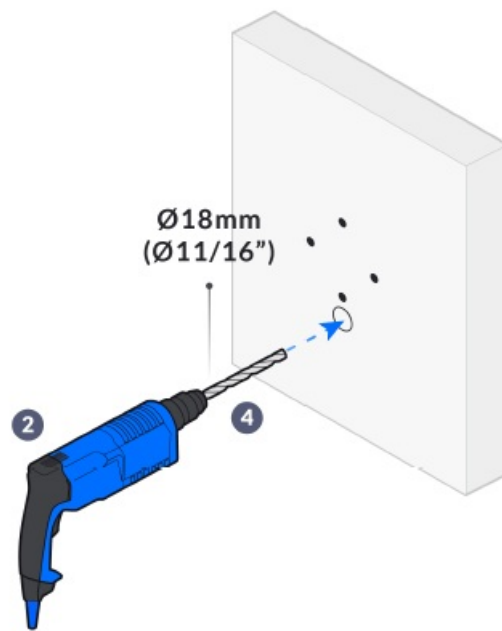


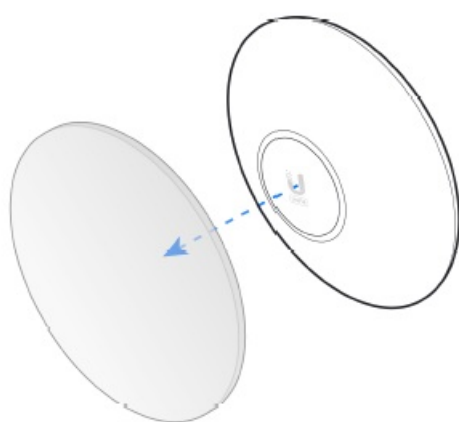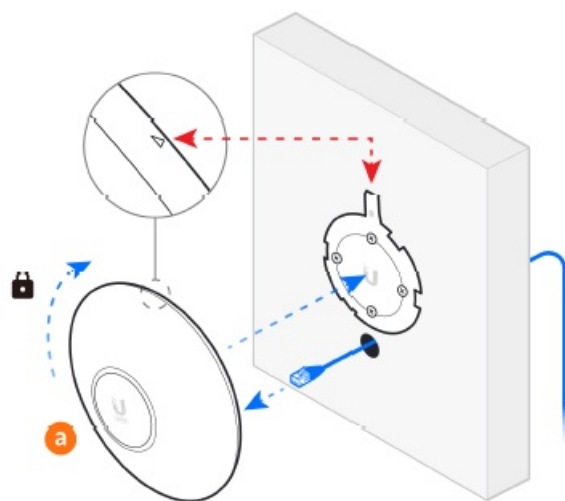


C

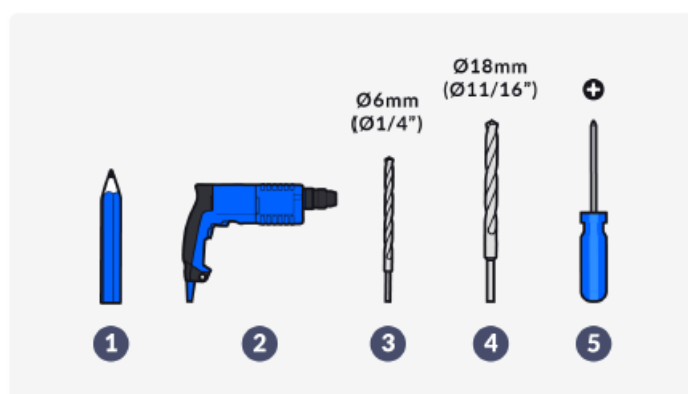


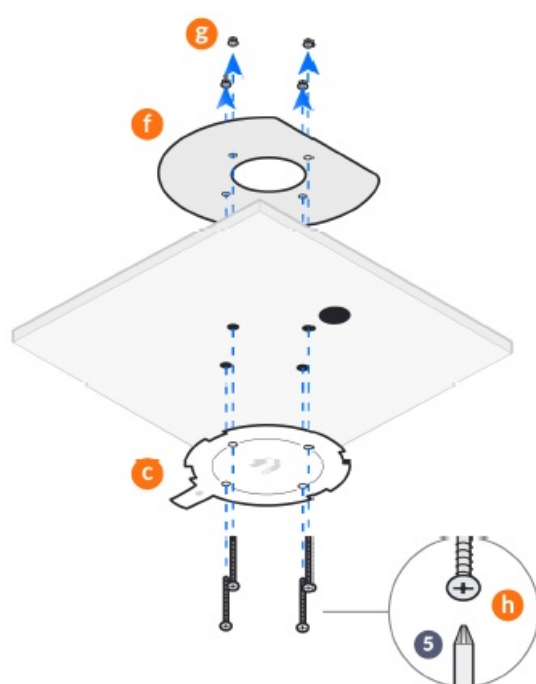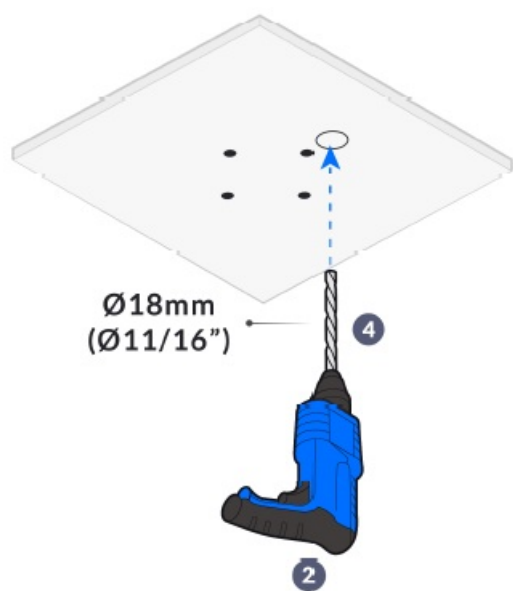

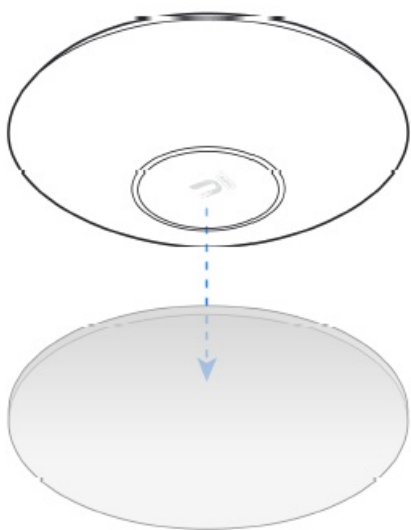

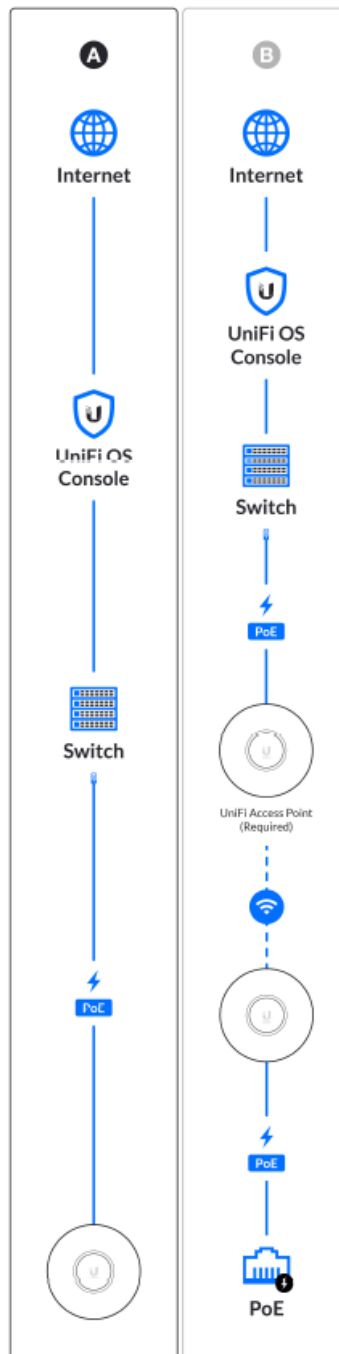

3

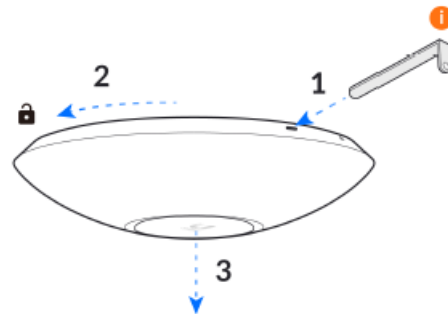





Get Answers
help.ub.com

UI Support




 Documents / Resources




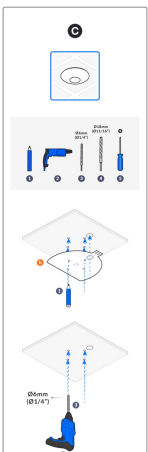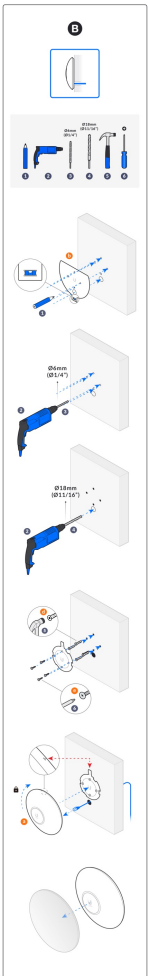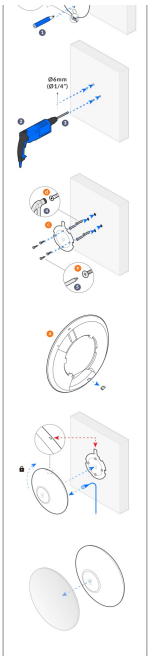1

[UniFi 6 plus Long Range](#) [pdf] Installation Guide
6 plus Long Range, 6 plus, Long Range

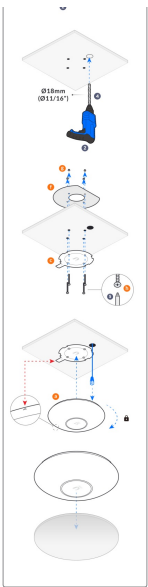

2

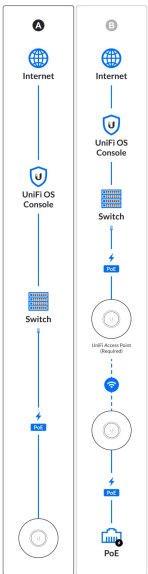

3

