

unitech 3730E UHF RFID Rugged Handheld Terminal User Guide

Contents

1 3730E UHF

1.1 RFID Rugged Handheld Terminal

1.1.1 Quick Start Guide

1.1.1.1 The Package Contents

1.1.1.2 Optional Accessories

1.1.2 Product View

1.1.3 Inserting Micro SD Card

1.1.4 Install/Remove the Protective Cover

1.1.5 Charging the Battery

1.1.6 Install the Battery

1.1.7 Checking LED Status

1.1.8 Remove the Battery

1.1.9 Attach the Wrist Lanyard

2 Documents / Resources

2.1 References

3 Related Posts

3730E UHF

RFID Rugged Handheld Terminal



Please make sure the following contents are in the 3730E UHF RFID rugged handheld terminal gift box. If something is missing or damaged, please contact your RFID representative.

The Package Contents

- 6700mAh Battery
- Wrist Lanyard
- Protective Cover
- Battery Cover

Optional Accessories

- USB 3.0 Type-C Cable
- 6700mAh Battery
- Power Supply
- Power Adaptor
- 1-Slot / 4-Slot Charging Cradle
- 1-Slot USB Cradle
- 1-Slot / 4-Slot Ethernet Cradle
- 3730E Single Slot Display Port Cradle
- 4-Slot Battery Charger
- 3-Pins Power Cord
- Glass Screen Protector
- Stylus with Coil Strap

Product View



1. Receiver
2. Power Key

3. Battery Lock
4. SD Card Slot
5. Scanner Window
6. RFID Reader Antenna
7. Scanner Trigger Key
8. LED Indicator
9. Wrist Lanyard Hole
10. USB Type-C Port
11. POGO Pin

Inserting Micro SD Card


Micro SD Card Slot:

1. Push up SD card holder to unlock.



1. Unlock

2. Flip the card holder open to insert SD card.

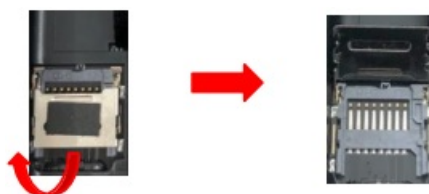

3. Close the card holder and slide down to lock position. Ensure that it is installed properly.



1. Lock

Install/Remove the Protective Cover

To install the protective cover, snap its hooks into the grooves below the gun grip (optional).



Grab and pull out the protective cover to remove.




Charging the Battery

For the regular use, you can charge the terminal for 5 hours to recharge the battery to full capacity.

Charging the terminal with USB Type-C cable: Connect the USB Type-C cable to the USB port on 3730E and connect the other end of the USB cable to AC power adapter, then plug into the electrical outlet.

Note: It is highly recommended using the RFID USB Type-C cable and AC power adapter to charge the terminal.

Install the Battery

1 . Make sure the battery lock is in the unlock  position.




2. Align and insert the battery from the top side. Press down and make sure to leave half of the battery strap outside.



3. Align the hooks on the battery cover with the battery compartment, then press down the battery cover.



4. Push the battery lock to the right  to secure the battery.



Checking LED Status

LED	Description
Red Light	<ul style="list-style-type: none"> • Battery Charging • Twinkling together to indicate battery low status(less than 15%) when power is on. • Twinkling alternatively to indicate that battery is not installed or not installed well when battery charger was plug-in.
Green Light	<ul style="list-style-type: none"> • Battery Fully charged. • Barcode scan good read
Blue Light	Message
No LED (Red and Green) display when battery is out.	

Remove the Battery

Pull the plastic sheet and lift upward to remove the battery.



WARNING!

There is a risk of fire and burns if the battery is handled improperly. DO NOT disassemble, crush, puncture, short external contacts, or dispose the battery pack in fire or water.

DO NOT attempt to open or service the battery.

Dispose of used batteries according to local recycling guidelines in your area.

CAUTION!


To ensure the unit works properly, please keep all connectors away from the contaminants staying inside of them such as dust, grease, mud, and water.

The negligence may cause the unit with no communication, short circuited, Overheated and so on. If the connector

is damaged, please ensure the connector is being fully repaired before using the unit to avoid causing short circuits.


Attach the Wrist Lanyard

1. Thread the end of the wrist lanyard through the wrist lanyard holes on the bottom of the gun grip.
2. Pull the other end of the wrist lanyard through the loop on the threaded end.

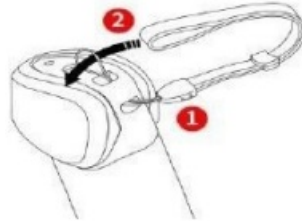

Learn more about other 3730E UHF accessories: If you would like to charge the terminal with other 3730E UHF accessories, such as 1-Slot / 4-Slot Charging Cradle, 1-Slot USB Cradle, 1-Slot / 4-Slot Ethernet Cradle, or charging the battery with the 3730E four slot battery charger, please scan the barcode below to download related files:

Documents / Resources

	<p>unitech 3730E UHF RFID Rugged Handheld Terminal [pdf] User Guide</p> <p>3730E UHF RFID Rugged Handheld Terminal, 3730E UHF, RFID Rugged Handheld Terminal, Rugged Handheld Terminal, Handheld Terminal, Terminal</p>
---	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.