



# unitech HT330 Series Rugged Handheld Terminal Mobile Phone User Guide

[Home](#) » [unitech](#) » unitech HT330 Series Rugged Handheld Terminal Mobile Phone User Guide 

## Contents

- [1 unitech HT330 Series Rugged Handheld Terminal Mobile Phone](#)
- [2 Product View](#)
- [3 Package](#)
- [4 How to Pull Up the Soft Keypad](#)
- [5 Keypad View](#)
- [6 Inserting Micro SD/Nano SIM Card \(Phone Ver. Only\)](#)
- [7 Install the Battery Cover](#)
- [8 Remove the battery](#)
- [9 Remove Battery Cover to Install Battery](#)
- [10 Checking LED Status](#)
- [11 Charging the battery](#)
- [12 Documents / Resources](#)
  - [12.1 References](#)
- [13 Related Posts](#)



**unitech HT330 Series Rugged Handheld Terminal Mobile Phone**



## Product View



1. Scanner Window
2. LED Indicator
3. 5MP Front Camera

4. 4"LCD Display
5. Volume Key
6. Scanner Trigger Key
7. Power Key
8. Function Key
9. Mic
10. 13MP Rear Camera
11. Mic
12. Battery Lock
13. Speaker
14. POGO Pin for Gun Grip
15. Holes for Hand Strap
16. Battery Cover
17. POGO Pin
18. USB Type-C Port

## **Package**

Please make sure the following contents are in the HT330 gift box. If something is missing or damaged, please contact your Unitech representative.

## **The Package Contents**

- HT330 Terminal
- Battery
- Hand Strap
- USB Type-C Cable
- Quick Start Guide

## **Optional Accessories**

- Boot Case
- Gun Grip
- Terminal Power Adaptor
- HT330 1-Slot Charging Cradle with spare Battery Slot
- HT330 1-Slot USB Cradle with spare Battery Slot
- Power Cord for Cradle
- Glass Screen Protector
- Stylus with coil strap

## **How to Pull Up the Soft Keypad**

- When there is a number or text to be entered, pressing the P1 key will pop up the SIP (Soft Input Panel) keyboard on the screen, and when you press the P1 key again, the SIP keyboard will disappear.

- Once you do not want this P1 function you can open the APP named KeyRemap and tap PROG\_1(289) → Action → UNKNOWN.

## Keypad View



## WARNING!

- There is a risk of fire and burns if the battery is handled improperly.
- DO NOT disassemble, crush, puncture, short external contacts, or dispose the battery pack in fire or water.
- DO NOT attempt to open or service the battery.
- Dispose used batteries according to local recycling guidelines in your area.


## CAUTION!

To ensure the unit working properly, please keep all connectors away from the contaminants such as dust, grease, mud, and water. Negligence may cause the unit to lose communication, short circuit, or overheated. If the connector is damaged, please ensure the connector is fully repaired before using the unit to avoid short circuiting.

## Inserting Micro SD/Nano SIM Card (Phone Ver. Only)


### Inserting the Nano SIM Card

Push up the SIM card holder to unlock and flip the card holder to insert SIM card. Close the card holder and slide down to lock. Ensure that it is installed properly.

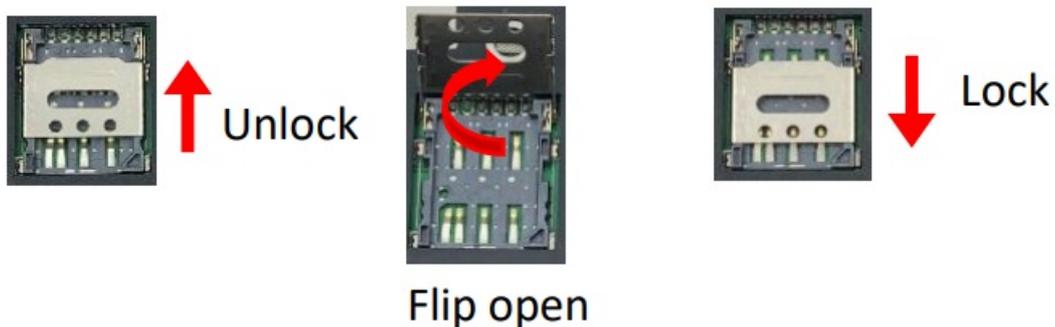

### Inserting the Micro SD Card

Push the SD card holder to the right to unlock and flip the card holder to insert the SIM card. Close the card holder and push to the left to lock. Ensure that it is installed properly.

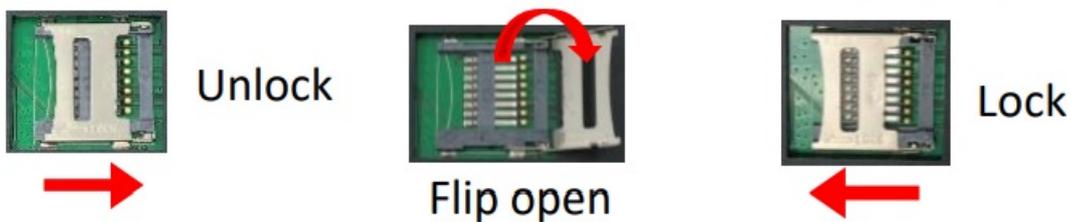

## Install the Battery Cover

Insert the battery cover in the direction as shown in the picture below:

1. There are three hooks on the bottom of battery cover, align the hooks with the recesses on the battery compartment.



2. Insert the battery cover up to 45 degrees (45°) angle, from bottom to top.



3. Press down the battery cover to secure in place. Make sure there is no gap between the device and the battery cover.
4. Push the battery lock to the left  to lock. Make sure the battery cover is securely closed, or you may not be able to turn on the terminal.



## Remove the battery

Pick the battery from the bottom, and lift to remove.



## Remove Battery Cover to Install Battery

Remove the battery cover in the direction as shown in the picture below:

1. Push the battery lock to the right  to unlock.



2. Grab the battery cover from the two recesses on the side, and lift to remove the battery cover.



3. Align the battery with the battery compartment, then push forward until you hear a click sound.



4. Press down the battery to secure in place.

## Checking LED Status

LED	Description
<b>Red Light</b>	<ul style="list-style-type: none"> <li>• Battery Charging</li> <li>• Twinkling to indicate battery low status(less than 15%)</li> </ul>
<b>Green Light</b>	<ul style="list-style-type: none"> <li>• Battery Fully charged</li> <li>• Barcode scan good read</li> </ul>
<b>Blue Light</b>	<ul style="list-style-type: none"> <li>• Message</li> </ul>

If scanner app is running, LED is controlled by scanner app. No LED (Red and Green) display when battery is out. (even AC IN)

## Charging the battery

- Before using the terminal for the first time, you need to charge it for about 24 hours. For the regular use, you can charge the terminal for 4.5 hours to recharge the battery to full capacity. To charge the terminal, please use the USB charging cable or the cradle.
- Connect the type-C USB cable to the USB port on HT330 and the other end of the USB cable connect to AC power adapter into the electrical outlet on the USB plug.
- The charging LED indicator on HT330 is turning red when it is in charging state.

WEB: <http://www.ute.com/>

## Documents / Resources

	<p><a href="#">unitech HT330 Series Rugged Handheld Terminal Mobile Phone</a> [pdf] User Guide HT330 Series Rugged Handheld Terminal Mobile Phone, HT330 Series, Rugged Handheld Terminal Mobile Phone, Handheld Terminal Mobile Phone, Terminal Mobile Phone, Mobile Phone, Phone</p>
---	--

## References

- [unitech Unitech Global | Your Brilliant AIDC Solution Provider](#)
- [User Manual](#)