



## unitech MS852P Wireless 2D Imager Scanner User Guide

[Home](#) » [unitech](#) » unitech MS852P Wireless 2D Imager Scanner User Guide 



### MS852P Wireless 2D Imager Scanner User Guide




## Contents

- [1 Charging](#)
- [2 Documents / Resources](#)
- [3 Related Posts](#)

## Charging

Please charge your scanner with the cradle by connecting the cradle with host PC, or the USB cable connect to AC power adapter into the electrical outlet.

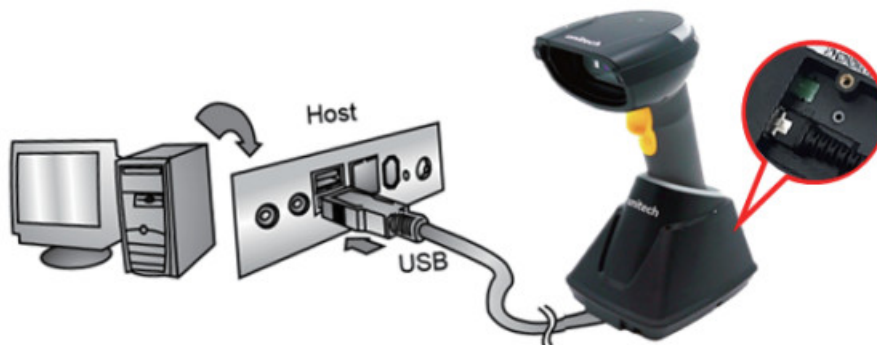

## Connect Dongle to Host

1. Scan the MAC address on the dongle using MS852P.



2. Plug the USB Dongle to a free USB port of a host computer. The MS852P is now ready to use.



## Test & Finish

Open a word processing program such as Microsoft Word or Notepad and scan the following barcode:



**unitech**

If the word “Unitech” appears on the screen, you have successfully installed your scanner.

#### **Buzzer Description**

- Power off: one short beep.
- Auto Power Off Alarm: 3 short beeps 15s before power off.
- USB Dongle Connection: :Beep with low Meighen sound.
- Good Read(USB Dongle connected): Medium beep.
- Good Read (USB Dongle disconnect): one Beep with short medium high sound.

#### **LED Description**

##### **Red Light**

- Charging: Light on
- System Warning/Error:
- Toggling every second for 5 seconds or until trigger key pressed.

##### **Blue Light**

- USB Dongle Connected: Light on
- USB Dongle Pairing: Toggling every second

**Green Light:** Good Read: Flashing once

**White Light:** Scanner in firmware update mode

#### – System Reset



Factory Default



Firmware Version

#### – Wireless Communication Mode



HID \*



SPP



Unpair with dongle

#### – Operation Mode



Auto \*



Batch



Wedge

#### – Reset Setting



Reset Setting

Note: Reset Setting will restore default settings except BT HID/SPP, Operation Mode and dongle pairing.

#### – Setting Barcodes



Enable \*



Disable

#### – Encoding



ASCII\*



UTF-8



Big 5

#### – Data Sending Inter Block Delay



10 ms \*



50 ms



100 ms



500 ms



1 Sec.



3 Sec.

#### – HID Keyboard Inter Character Delay



1 ms \*



5 ms



10 ms



20 ms



50 ms



100 ms

#### — Beeper Control



High



Medium \*



Low



Mute

#### — Good Read Indicator



None



Beeper \*



Vibrator



Beeper & Vibrator

#### — Auto Power Off After Idle



5 mins



15 mins \*



30 mins



1 hour



2 hours



4 hours



8 hours



Disable

#### — Language Settings



US English \*



UK English



Swiss



Swedish



Spanish



Norwegian



Italian



German



French



Partial ALT



Danish



ALT Mode



Japanese(OADG109)

#### — Data Terminator



CR \*



None



LF



CR/LF



TAB

#### — HID Keyboard Case



To Upper



Auto Trace \*




To Lower



<http://www.ute.com/>

## Documents / Resources

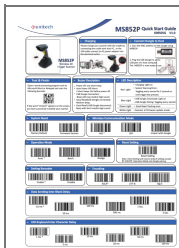

[unitech MS852P Wireless 2D Imager Scanner](#) [pdf] User Guide

609505G, MS852P Wireless 2D Imager Scanner, MS852P 2D Imager Scanner, Wireless 2D Imager Scanner, 2D Imager Scanner, Wireless Imager Scanner, Imager Scanner, 2D Scanner, Wireless Scanner, Scanner