



unitech MS912+ Decoder User Manual

[Home](#) » [unitech](#) » unitech MS912+ Decoder User Manual

Contents [[hide](#)]

- [1 unitech MS912+ Decoder](#)
- [2 Decoder](#)
- [3 FW](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)



unitech MS912+ Decoder



Decoder

How to set the Field separator

1. **Scan** [.M005\$] in UM Pg 72
2. **Scan** [.M007\$] DEFINE EAN128 in UM Pg 72
3. **Scan** [+] + from the full ASCII table. in UM Pg 77
4. **Scan** [.M007\$] DEFINE EAN128 in UM Pg 72

FW

How to set the MS912plus pin code?

By default, the Pincode under SPP profile for the scanner is “1234”, please refer to the MS912plus user manual in chapter 4.2.2.4 to customize this Pincode, if you need.

unitech electronics co., ltd.

5F No. 136, Lane 235, Pao-Chiao Rd., Hsin-Tien City, Taipei Hsien, Taiwan 231, R.O.C.

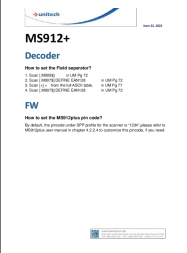
Fax: 886-2-8912-1391

w www.ute.com

Tel:+886-2-8912-1122



Documents / Resources

	unitech MS912+ Decoder [pdf] User Manual MS912 Decoder, MS912, Decoder
---	---