

unitech PA768 Rugged Touch Computer User Guide

Home » unitech » unitech PA768 Rugged Touch Computer User Guide

Contents [hide

- 1 unitech PA768 Rugged Touch
- Computer
- 2 Package
- **3 Product View**
- 4 Inserting Micro SD/Nano SIM Card
- **5 Install the Battery**
- 6 Remove the battery
- 7 Documents / Resources
 - 7.1 References
- **8 Related Posts**



unitech PA768 Rugged Touch Computer



Package

Please make sure the following contents are in the PA768 gift box. If something is missing or damaged, please contact your Unitech representative.

The Package Contents

- PA768 Terminal
- Battery
- Hand Strap
- USB 3.0 Type-C Cable
- Quick Start Guide

Optional Accessories

- · Quick charge adaptor
- 9H glass screen protector

- Standard/UHF gun grip
- Stylus with coil strap
- 1-Slot USB cradle
- 1-Slot Charging cradle
- 1-Slot Ethernet cradle

Product View



- 1. Barcode Scanner Window
- 2. Front Camera
- 3. Volume Key
- 4. Scanner Trigger Key
- 5. Power Key
- 6. Programmable Key
- 7. Scanner Trigger Key

- 8. Rear Camera
- 9. Speaker
- 10. Hand Strap Holes
- 11. Microphone
- 12. NFC
- 13. Pogo Pin for gun grip
- 14. Pogo Pin for cradle
- 15. Microphone
- 16. USB Type-C Hole
- 17. Hand Strap Holes



1. Pick out the Micro SD/Nano SIM card holder.



2. You may put in 2 SIM cards or put in one SIM card and one SD card at a time.



3. Align the card holder with the slot, and push it in till it reaches the end. (Make sure the cards stay flat while pushing in the card holder)

Install the Battery

1. Align the battery with the battery compartment following the picture below.



- 2. Press and hold both of the plastic buckles at the bottom, then push against the front.
- 3. Press down the battery to 3. secure in place.



Remove the battery

1. Press and hold both of the plastic buckles at the bottom.



2. Push the battery against the front and lift to remove.

WARNING! There is a risk of fire and burns if the battery is handled improperly.

DO NOT disassemble, crush, puncture, short external contacts, or dispose the battery pack in fire or water.

DO NOT attempt to open or service the battery. Dispose of used batteries according to local recycling guidelines in your area.

CAUTION! To ensure the unit working properly, please keep all connectors away from the contaminants staying inside of them such as dust, grease, mud, and water. The negligence may cause the unit with no communication, short circuited, overheated and so on. If the connector is damaged, please ensure the connector is being fully repaired before using the unit to avoid causing short circuited.

Checking LED Status

LED	Description
Red Light	· Battery Charging
Green Light	Battery Fully charged Barcode scan good read
Blue Light	· Message

If scanner app is running, LED is controlled by scanner app. No LED (Red and Green) display when battery is o ut. (even AC IN)

Charging the battery

Before using the terminal for the first time, you need to charge it for about 24 hours. For the regular use, you can charge the terminal for 4 hours to recharge the battery to full capacity.


To charge the terminal, please use the USB charging cable or the cradle. Connect the Type-C USB cable to the USB port on PA768 and the other end of the USB cable connect to AC power Adapter into the electrical outlet on the USB plug. The charging LED indicator on PA768 is turning red in the charging state.



http://www.ute.com/

Copyright 2022 Unitech Electronics Co., Ltd. All rights reserved. Unitech is a registered trademark of Unitech Electronics Co., Ltd.

Documents / Resources

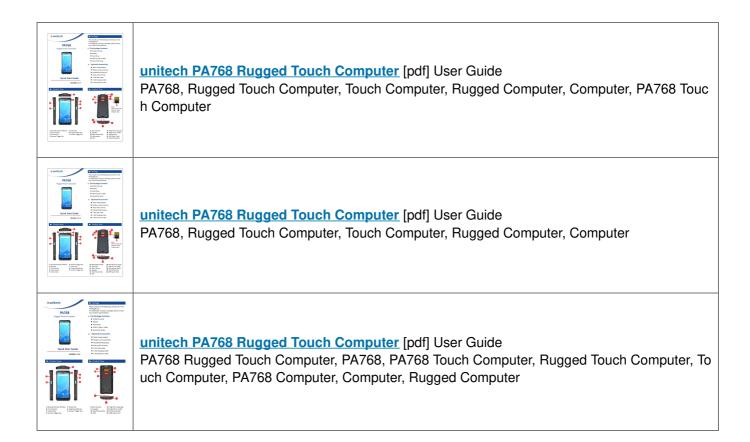

References

• " Unitech Global | Your Brilliant AIDC Solution Provider

Manuals+, home privacy