



unitech vMS852B Bluetooth 2D Barcode Scanner User Guide

[Home](#) » [unitech](#) » unitech vMS852B Bluetooth 2D Barcode Scanner User Guide 

Contents

1 unitech MS852B+ Bluetooth 2D Barcode Scanner User Guide

- 1.1 How to turn on / turn off the scanner
- 1.2 Charging the Scanner
- 1.3 How to pair the scanner with the cradle
- 1.4 Scanner type
- 1.5 Operation Mode
- 1.6 Scan Mode
- 1.7 Aimer Mode
- 1.8 Mobile Phone Read Mode
- 1.9 Bluetooth
- 1.10 System Reset & Info
- 1.11 Data & Memory
- 1.12 Auto Power Off After Idle
- 1.13 Scanner Auto Presentation Mode
- 1.14 Beeper Control
- 1.15 Data Sending Inter Block Delay
- 1.16 HID Keyboard Case
- 1.17 DataTerminator
- 1.18 HID Keyboard Language

2 Documents / Resources

3 Related Posts

How to turn on / turn off the scanner

Turn on : Long press the trigger key for 2 seconds until you hear a long beep sound.

Turn off : Long press the trigger key for about 7 seconds until you hear a short beep sound.

Charging the Scanner

Before using the scanner for the first time, please charge the scanner with the cradle.

Red LED light : Being charged


LED light goes off : Fully charged

Battery Charging Status LED



How to pair the scanner with the cradle

1. Firstly, select the interface you want to communicate with your PC, for USB/RS232 cable connection, please switch the interface switch to the left/right side as below figure and then connect the cradle and the PC via the interface cable.
2. Long press trigger key for 2 seconds to turn on the scanner. And then put the scanner on the cradle to start the BT pairing automatically.
3. When the pairing is completed, both the scanner LED and the cradle LED will show solid blue light.

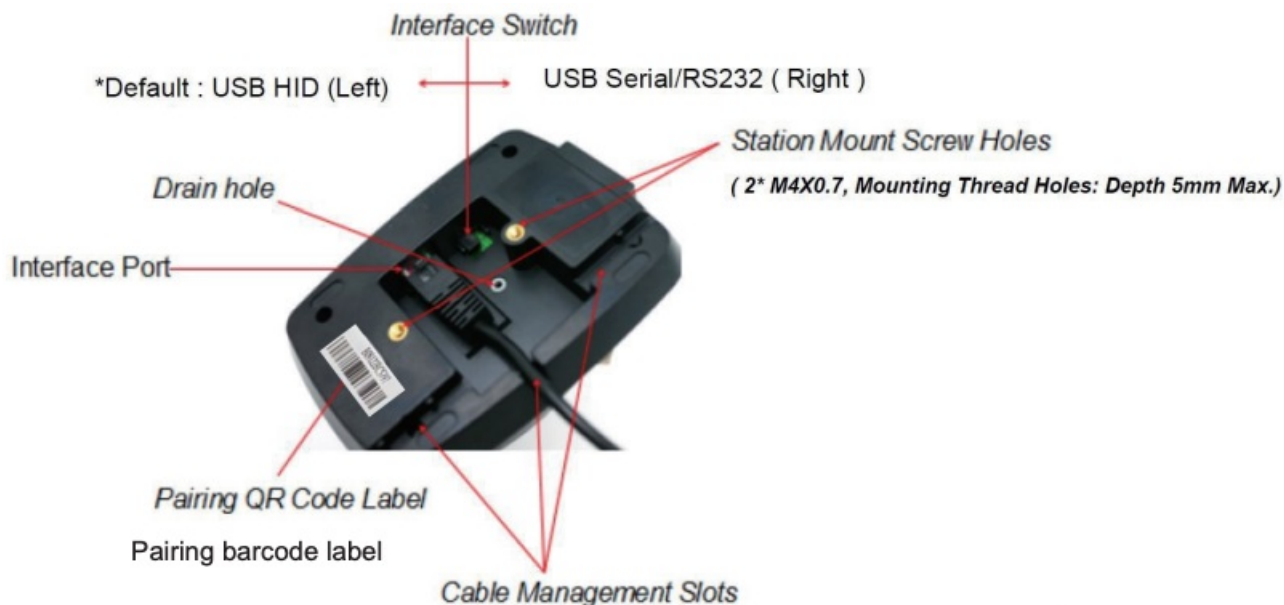

Scanner type

- These settings are for cradleless mode only when the scanner connects to the host directly not through cradle.
- To switch the different scanner type, please do un-pair first and then select the scanner type and redo Bluetooth connection.

BT Keyboard *



BLE Keyboard



BT SPP



Operation Mode

Auto*



Wedge



Batch



Scan Mode

Manual Trigger-Normal*



Presentation Mode



Aimer Mode

Aimer Mode*



Off



Mobile Phone Read Mode

Hand Held Scanning - Mobile Phone



Streaming Presentation - Mobile Phone



Bluetooth

Remark:

If 'Higher Level RF Signal Checking' is selected, BLE communication will become more reliable but the distance will be shorter.

BT/BLE Un-Pair / Pair



Enable Cradle Auto Pair *



Normal Level RF Signal Checking *



Disable Cradle Auto Pair



Higher Level RF Signal Checking



System Reset & Info

Factory Default



(Reset setting and **Clean**
Bluetooth Link-key information)

Send Info



Reset Setting



(Reset setting but **Keep**
Bluetooth Link-key information)

Data & Memory

Note: To erase buffer, scan 'Enter Auto Buffer Erase' and then scan 'Erase'. To erase batch file, scan 'Enter Batch File Erase' and then scan 'Erase'.

Send Batch



Free Buffer / Drive Space



Erase



Enter Auto Buffer Erase



Enter Batch File Erase



Erase Last Data Entry



Auto Power Off After Idle

15 Minutes*



5 Minutes



30 Minutes



2 Hours



4 Hours



6 Hours



1 Hour



Disable



Scanner Auto Presentation Mode

Disable *



Enable



Beeper Control

Medium Volume*



Low Volume



High Volume



Mute



Data Sending Inter Block Delay

10 ms*



50 ms



100 ms



1 Sec.



500 ms



3 Sec.



HID Keyboard Case

Auto Trace*



To Upper



To Lower



1 ms*



10 ms



5 ms



20 ms



100 ms



50 ms



Data Terminator

CR *



CRLF



LF



None/ Null



TAB



HID Keyboard Language

US English*



UK English



Swiss



Swedish



French



ALT Mode



Danish



Spanish



Norwegian



Italian



Belgian



German



Japanese




* Default Option

Thank you for purchasing the unitech product.
For other product documentation, please scan the QR code for more information.



Version 1.0
608286G

Documents / Resources

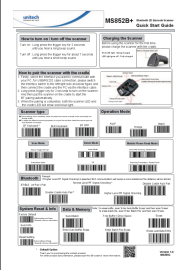	unitech vMS852B Bluetooth 2D Barcode Scanner [pdf] User Guide MS852B, Bluetooth 2D Barcode Scanner
-----------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------

[Manuals+](#).