

UNITEK D1100A Multi Port Switch Game Card Reader User Manual

Home » UNITEK » UNITEK D1100A Multi Port Switch Game Card Reader User Manual





Multi-port Switch Game Card Reader User Manual


Contents

- 1 D1100A Multi Port Switch Game Card Reader
- 2 Product Diagram
- 3 Package Contents
- 4 How to Use
- **5 Warranty**
- 6 Documents / Resources
 - **6.1 References**

D1100A Multi Port Switch Game Card Reader

Thank you for choosing Unitek Multi-port Switch Game Card Reader. Please read the user manual carefully before use and save them. If you need any help, please contact our professional customer service team at: support_us@unitek-products.com

Product Diagram

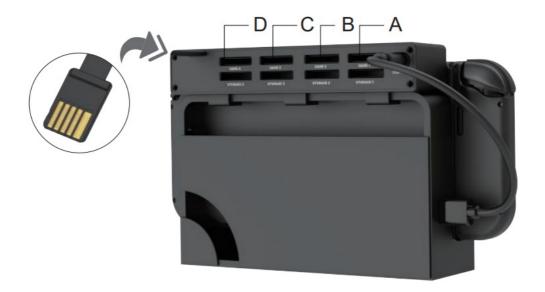

LED Light Indicator

A: 1 Game Card Slot: Red B: 2 Game Card Slot: Orange C: 3 Game Card Slot: Pink D: 4 Game Card Slot: Yellow

Package Contents

1 x Switch Game Card Reader 1 x USB A to C Power Cable

How to Use

- Step 1: Snap the Switch Game Card Switcher into the Switch Dock.
- Step 2: Connect the USB C cable to the Switch Dock.
- Step 3: Insert the connecting plug into the game card slot on Switch Console.
- Step 4: Insert the game cards you need into the card slots accordingly.

Note

- 1. When multiple game cards are inserted into the switch game card reader, all games will show on the display or TV screen but it can read ONLY one game at one time. And you will always need to switch between different games using the "switch" button.
- 2. When playing the game, please do NOT insert a new game card. Or else it will exit the current game and switch to the new game card automatically.

Warranty

The Unitek Multi-port Switch Game Card Reader is covered by Unitek warranty for 24 months. If the product fails due to manufacturer defects, please contact us by email at: support_us@unitek-products.com



















Documents / Resources



UNITEK D1100A Multi Port Switch Game Card Reader [pdf] User Manual D1100A Multi Port Switch Game Card Reader, D1100A, Multi Port Switch Game Card Reader, Switch Game Card Reader, Card Reader, Reader

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.