



UNITRONICS UAC-01EC2 EtherCAT Master Module User Manual

[Home](#) » [UNITRONICS](#) » UNITRONICS UAC-01EC2 EtherCAT Master Module User Manual 

Contents

- [1 UNITRONICS UAC-01EC2 EtherCAT Master Module](#)
- [2 UAC-01EC2](#)
- [3 Firmware Update Procedure](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)



UNITRONICS UAC-01EC2 EtherCAT Master Module



UAC-01EC2

Unitronics offer EtherCAT™ Master module for UniStream PLC series that need to be updated on new firmware release.

Firmware Update Procedure

1. Download the latest UAC-01EC2 firmware version from Unironic website (www.unitronicsplc.com)
2. Make sure the system is idle.
3. Extract the ZIP compressed file content to root folder of your flash drive (DOK), the flash drive must be FAT32 formatted.
4. Plug the USB flash drive into the UAC-01EC2 USB port.
5. Using the PLC UniApps menu, System tab, Upgrade, access the Ether CAT section.
6. If previous version displayed, ex. 1.0.36500.0, press the Upgrade button. Otherwise, press Force Upgrade.
7. When finish, reboot the system completely and validate the Ether CAT master menu again using the Uni Apps menu.

Documents / Resources

 UAC-01EC2 EtherCAT™ Master Firmware Update Procedure Ver. 1.0 September 2021	UNITRONICS UAC-01EC2 EtherCAT Master Module [pdf] User Manual UAC-01EC2 EtherCAT Master Module, UAC-01EC2, EtherCAT Master Module, Master Module, Module
 UAC-01EC2 EtherCAT™ Master Firmware Update Procedure Ver. 1.0 September 2021	UNITRONICS UAC-01EC2 EtherCAT Master Module [pdf] User Guide UAC-01EC2 EtherCAT Master Module, UAC-01EC2, EtherCAT Master Module, Master Module, Module

References

-  [**Unitronics- Programmable Logic Controller + Built-in HMI**](#)
-  [**Unitronics- Programmable Logic Controller + Built-in HMI**](#)