

Unity Lab Services Heraguard ECO Clean Bench User Guide

Home » Unity Lab Services » Unity Lab Services Heraguard ECO Clean Bench User Guide 🖺





A Thermo Fisher Scientific Brand

Heraquard ECO Clean Bench User Guide

Contents

- 1 Heraguard ECO Clean **Bench**
- 2 Documents / Resources
 - 2.1 References
- **3 Related Posts**

Heraguard ECO Clean Bench

Troubleshooting guide

How do I activate the UV light on my Heraguard ECO?

Heraguard ECO

Revision Date: November 10, 2014


How do I activate the UV light on my Heraguard ECO?

The Heraguard Eco must be turned off for the UV light to function.


- 1. Turn the cabinet blowers off (hold the "ON" key for 10 seconds)
- 2. Install the UV light resistant cover.



3. Press and hold the UV light button for 10 seconds

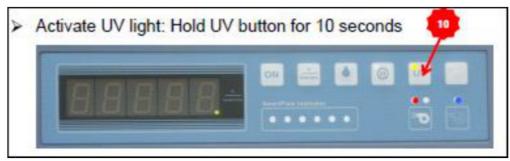

4. If the UV light still isn't functioning verify the UV bulb cover has been removed.

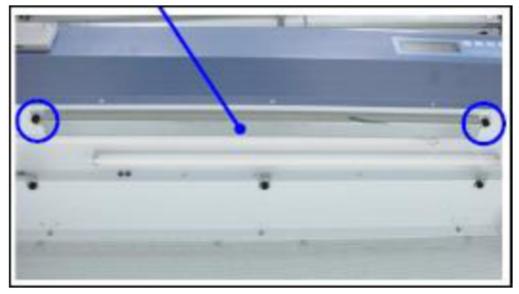

5. Please note the UV light resistant covers along with the UV lamp are recommended to be replaced every 1500 hours. See page 21, 37 in the operator's manual.

UV bulb replacement

- ► Align the pins of bulb with the sockets
- ▶ Insert the bulb into sockets
- ► Twist' turn until the bulb locks

► Test Install light cover



UV light resistant cover


- ▶ No interlock as with BSC
- ► Held in place with elastic cords



Unity Lab Services

A Thermo Fisher Scientific Brand www.unitylabservices.com/contactus

Documents / Resources

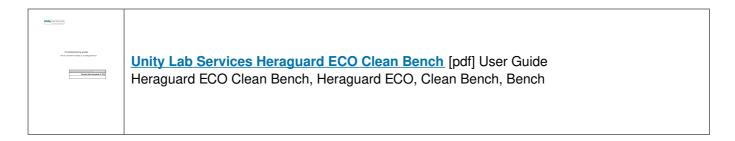

References

• U Contact Us

