





Unity U-BB1 Countertop Merchandising Bar Cooler User Manual

Home » UNITY » Unity U-BB1 Countertop Merchandising Bar Cooler User Manual



Contents

- 1 Unity U-BB1 Countertop Merchandising Bar Cooler
- 2 Specifications
- 3 FAQs
- **4 SAFETY PRECAUTIONS**
- **5 PRECAUTIONS FOR INSTALLATION**
- **6 HOW TO USE**
- **7 CLEANING**
- 8 IN THE CASE OF THE FOLLOWING
- 9 BEFORE REQUESTING SERVICE
- **10 CONTACT INFORMATION**
- 11 Documents / Resources
 - 11.1 References



Unity U-BB1 Countertop Merchandising Bar Cooler



Specifications

Model: U-BB1, U-BB2, U-BB3
Manufacturer: USR Brands, Inc.

• Phone: <u>800-764-1172</u>

Website: <u>www.usrestaurant.com</u>.
 Email: sales@usrestaurant.com.

FAQs

- Q: How do I adjust the temperature?
 - A: Use the temperature control dial on the control panel to adjust the temperature settings.
- Q: Can I place the cooler directly under sunlight?
 - A: It is not recommended to place the cooler under direct sunlight as it may affect its cooling efficiency.
- Q: What should I do if the cooler is not cooling properly?
 - **A:** Check if the power supply is adequate and the temperature settings are correct. If issues persist, contact customer support.

SAFETY PRECAUTIONS

- To ensure proper use, please thoroughly study these SAFETY PRECAUTIONS before operating the Unit.
- The purpose of the safety precautions in this manual is to ensure safe and correct use of the unit to minimize risks that could cause serious damage and injury to you or other persons. The safety precautions are divided into WARNINGS and CAUTIONS.
- Cases where improper handling of the unit could lead to death or serious injury are listed under the
 "AWARNING" heading. However, the cases listed under the "CAUTION" heading could also lead to serious
 results. To ensure the safety, adhere strictly to both types of safety precautions. capabilities, or lack of
 experience and knowledge, unless they have been given supervision or instruction concerning the use of the
 appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Warning: Do not use mechanical devices or other means to accelerate the defrosting process, other than

those recommended by the manufacturer.


- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children without supervision.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
 - When disposing of the appliance, do so only at an authorized waste disposal center. Do not expose to flame.
- Warning: The lamp must not be replaced by the user! If the lamp is damaged, contact the customer helpline for assistance.
- The A-weighted emission sound pressure level is below 70 dB(A)
- The appliance shall be disconnected from its power source during cleaning or maintenance and when replacing parts.
- Warning: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- Warning: To avoid a hazard due to the instability of the appliance, it must be fixed in accordance with the instructions.
- The symbol is a warning and indicates the refrigerant and insulation-blowing gas are flammable.
- Warning: Risk of fire / flammable materials.
- Warning Do not store explosive substances such as aerosol cans with a flammable propellant in this
 appliance.
- Warning The refrigerant and insulation blowing gas are flammable. When disposing of the appliance, do so only at an authorized waste disposal center. Do not expose to flame.
- WARNING Improper handling of the unit could lead to death or serious injury.
- CAUTION Improper handling of the unit could lead to serious results depending on the circumstances.

PRECAUTIONS FOR INSTALLATION


WARNING: Installation should be performed only by the dealer or a qualified expert. Attempting to install the unit yourself could result in water leakage, refrigerant leakage, electrical shock, or fire.

WARNING


• All repairs, disassembly, and modifications should be performed only by qualified technicians. Attempting to perform these yourself could result in a fire, malfunction, and injury.

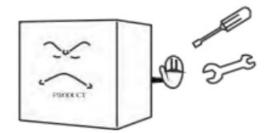


Never put flammable or volatile substances into the unit as an explosion and fire could result.

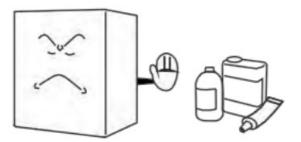

• Use a dedicated wall outlet. Do not use extension cords or convenience receptacles as this could result in electrical shock, overheating, and a fire.

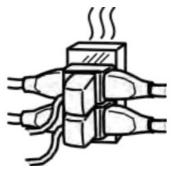


• The cooler is intended for storage and display of beverages for sale. Do not use for other purpose than intended as this could adversely affect items placed in the unit.

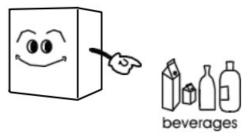


• For indoor use only. Using the unit in a location exposed to rain could result in electrical leakage and electrical shock.




• Install the unit in a location where the floor is sturdy enough to support the load of the unit. If the floor is not sturdy enough or installation is incorrectly performed, the unit could tip over and falling shelves and products could cause personal injury.

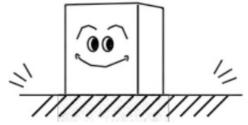


 Never splash water directly onto the product or wash with water as short-circuit and electrical leakage could result.

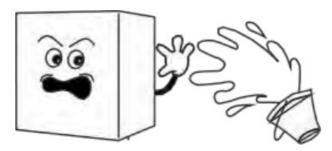


Do not damage, modify, excessively bend, strain, twist, or bundle up the power cord. Also, placing heavy
objects on the power cord or squeezing it in a tight place could damage it, possibly resulting in electrical shock
or fire.

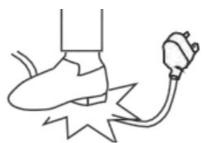

Never use flammable spray cans or leave flammable substances near the unit. Sparks from electrical switches
could result in explosion and fire.

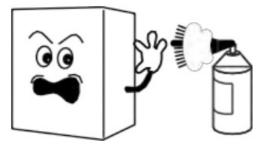


• Never attempt to insert fingers, sticks, etc. Into the cold air suction outlet as a circulation, the fan is rotating at high speed inside the outlet. Injury, electrical shock, and improper operation could result.

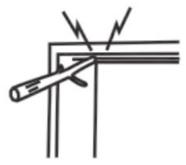

 Never place heavy objects or items containing water on top of the unit. Objects could fall and cause injury and spilled water could deteriorate the insulation of electrical components and result in electrical leakage.



 If you find gas leakage, please don't touch the appliance. Turn it off and open the doors and windows for ventilation. Gas leakage could cause explosion, fire, and fire injury.

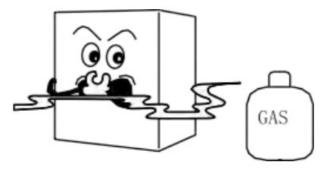

• Store the unit in a location where it is not exposed to rain. Using a unit that has been exposed to rain could result in electrical leakage and electrical shock.




• Leave disassembly and disposal of the unit to qualified experts.




WELL VENTILATED PLACE

• Please make sure there is more than 10 cm space between UPRIGHT COOLER and the wall. If there is no space, the cooling capacity can drop down.

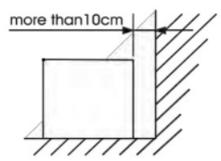


 Never hang from the door or climb onto the unit. The unit could tip over or fall and cause material damage or injury.

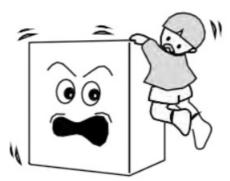


• Grasp the handle when closing the door. Holding at other positions could result in pinched fingers and injury.




• When disconnecting the power cord plug from the wall outlet, hold the plug main body close to the outlet. Pulling the cord could cause wire breakage, possibly resulting in overheating and fire.

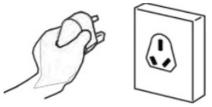


• Keep away from hot air sources Cooling performance is reduced if the unit is placed near heat sources such as hot plates and stoves and if it is exposed to direct sunlight.

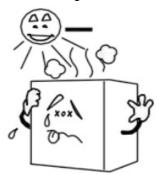

- Should the unit need temporary storage, make sure not to store the unit in a location where children play and take precautions so that the door cannot be completely closed. This will minimize the risk that a child becomes trapped inside the compartment.
- If installation in a damp location is unavoidable, also install an electrical leakage circuit breaker. If no electrical leakage circuit breaker is installed, electrical shock could result.

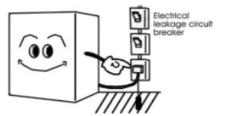


• Disconnect the power cord plug from the wall outlet before moving the unit and make sure that the power cord is not damaged during transport. A damaged power cord could result in electrical shock and/or fire.

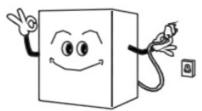

• Do not push your hand against or apply excessive force to glass surfaces as the glass could break and cause injury.




• Make sure that the unit does not tip over or fall when it is moved. A falling unit could cause serious injury.

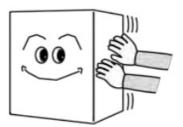

• Do not throw items onto the shelves and do not place items totaling more than 25 kg on each shelf. The shelf could fall down, possibly causing injury.



• Be sure to attach and secure shelves correctly. An improperly attached shelf could fall and cause injury.

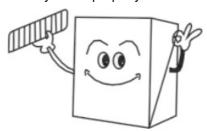

HOW TO USE

BEFORE USE

- Remove shipping packages, tape, etc, and leave doors open. Ventilate for a while.
- The unit is cleaned before shipment. However, clean the compartment interior after delivery.
- Please insert the power supply plug into the wall outlet, single-phase to correct the voltage.
- Allow the unit to operate for about 1 hour to cool the compartment before placing items in the cooler.

WAIT 5 MINUTES OR MORE BEFORE RE-STARTING

• Restarting the unit immediately after it has been turned off may cause fuses to blow and activate the circuit breaker, the compressor may be overloaded, and/or other damage may occur.

TEMPERATURE ADJUSTMENT



The electronic controller has been factory set to cool the beverages to the lowest temperature approximately 1-5 Centigrade. Should you wish to alter the temperature set point, please adopt the following procedure.


Setting the set point (desired temperature)

1. Press SET for 1s, the set value will start flashing after a few moments;



3. Press SET to contirm the new value.

Switching the device ON/OFF

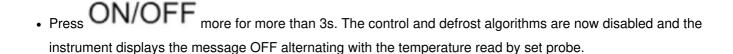

Manual defrost



for DOWN more than 3s. (the defrost starts only when the temperature conditions are valid).

Access and setting

- 1. Press SET for 3s (the display will show "PS");
- 2. To access the parameter menu, press SET;



3. Scroll inside the parameter menu using



To display/set the values of the parameter displayed, press SET, then / and finally SET to confirm the changes (returning to the parameter menu). To save all the new values and exit the parameter menu, press SET for 3s; To exit the menu without saving the changed values (exit by timeout) do not press any button for at least 60s.

DRAIN TRAY

- Defrosting is performed automatically and drain water is collected in the drain tray.
- Water in the drain tray is evaporated automatically. In humid environments, there will be a large amount of water in the drain tray, so please throw away drain water once a day.

EFFICIENT USE

- To prevent cold air from escaping, open and close the door quickly and keep the door open for as short a time as possible.
- Please install the unit in a well-ventilated place.

SHELF HEIGHT ADJUSTMENT

- The shelf height can be adjusted.
- Arrange the shelves under the dimensions of the items to be placed in the cooler.

PLACING ITEMS IN THE SHOWCASE

- This showcase employs a forced circulation of the cold air system. If the circulation of cold air is obstructed, the items will not be adequately refrigerated. Pay attention to the following points:
- Do not let items obstruct the cold air inlet and suction outlet.
- Place items so that they do not protrude from the shelves. The gap between the shelves and the
- · Place sens frenzy on tin shelved air.
- · Commercial refrigeration display cooler.
- This equipment is intended for the storage and display of non-potentially hazardous bottled or canned products only.

CLIMATE CLASS


- 32°C±2°C on appliances of climatic class 0, 1,2,3,4,6 or 8
- 43°C±2°C on appliances of climatic class 5 or 7

CLEANING

WARNING To prevent any electrical shock hazards or injury by rotating the circulation fan, always disconnect the power cord plug from the wall outlet before cleaning.

1. EXTERIOR AND COOLER COMPARTMENT

- Wipe with a soft, dry cloth. If very soiled, wipe with a cloth that has been moistened with a detergent
- Then wipe with a cloth that has been dipped in water.
- WARNING: Do not splash water directly onto the cooler and do not wash with water. Short-circuit and electrical shock could result.
- Clean the cooler regularly to keep it clean at all times.
- Never use polishing powder, soap powder, benzine, oil, or hot water as these will damage the painting and plastic components.

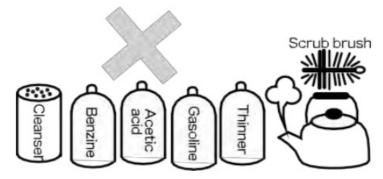

2. CHECKS

- To ensure the safety, perform the following checks after cleaning.
- Is the power cord plug firmly inserted into a dedicated wall outlet? Confirm that the plug is not abnormally hot.
- Check the power cord for cracks and damage. Should the slightest irregularity be observed, contact the dealer from whom you purchased this unit or our customer's service.

IN THE CASE OF THE FOLLOWING

1. POWER FAILURE

- Keep opening and closing the door to a minimum.
- Avoid placing new items in the cooler as this will raise the temperature inside the compartment.

2. WHEN NOT USED FOR A LONG PERIOD

- Remove all items from the compartment and disconnect the power cord plug from the wall outlet.
- Clean the compartment interior and wipe away all water.
- To prevent mold formation and bad smell, leave the door open to dry the compartment completely.

3. TRANSPORTATION

- Disconnect the power cord plug from the wall outlet.
- When moving the cooler, make sure that the feet do not damage the power cord.
- Do not let the feet hit against floor steps, thresholds, etc.

4. TEMPORARY STORAGE

Affix a piece of wood, etc. Between the door and main unit to prevent complete closing of the door. Make
sure not to store the unused cooler at a location where children play. Should a child enter the
compartment and the door is closed, the child may not be able to open the door from the inside.

BEFORE REQUESTING SERVICE

Please check the following items if you encounter problems with the unit. If the problem continues after taking the proper remedial actions, disconnect the power cord plug from the wall outlet. you per these are unit in the ear to

our intent as The REQUIRED INFORMATION home below.

CAUTION To prevent any electrical shock hazards, do not disconnect the power cord plug from the wall outlet with wet hands.

No refrigeration at all	 Is the power supply interrupted? Is the power cord plug disconnected from the wall outlet? Are the shop's power fuses blown and/or the circuit breaker activated?
Inadequate refrigeration	 Is the temperature setting appropriate? Are items obstructing the cold air inlet and suction outlet? Are stored items packed too tight? Is the door open or is it opened and closed frequently? Is the condenser clogged?
Excessive noise	 Are all feet in firm contact with the floor? Is the rear panel of the cooler contacting the wall or other objects? Are other objects in contact with the cooler?
Condensation on cooler exterior	Condensation may condense on the exterior and door during hot and humid days or depending on the place of installation. This occurs when the humidity is high and water particles in the air contact cold surfaces. This is normal.wipe away condensation with a dry cloth.

Showcase sometimes stops running when the thermostat turns off.

INSTRUCTION MANUAL REQUIRED INFORMATION

- 1. Nature of malfunction (as accurately as possible)
- 2. Product number
- 3. Serial number



- 4. Customer's name, address, phone number
- 5. Year and date of purchase

USRESTAURANT® RESERVES THE RIGHT TO CHANGE SPECIFICATIONS WITHOUT NOTICE

CONTACT INFORMATION

• USR Brands, Inc.

- Phone: 800-764-1172
- www.usrestaurant.com
- sales@usrestaurant.com.

Documents / Resources



Unity U-BB1 Countertop Merchandising Bar Cooler [pdf] User Manual

U-BB1 Countertop Merchandising Bar Cooler, U-BB1, Countertop Merchandising Bar Cooler, Merchandising Bar Cooler, Bar Cooler, Cooler

References

- **USR Brands Commercial Restaurant Equipment Manufacturer**
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.