



UNIVERSAL ELECTRONICS R32068BD00 Remote Control User Guide

[Home](#) » [Universal Electronics](#) » UNIVERSAL ELECTRONICS R32068BD00 Remote Control User Guide

Contents [[hide](#)]

 
- [1 UNIVERSAL ELECTRONICS R32068BD00 Remote Control](#)
- [2 Getting Started](#)
- [3 Functional Key Chart](#)
- [4 TROUBLESHOOTING](#)
- [5 Setup Method B:](#)
- [6 Setup Method C:](#)
- [7 Codes: TV](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)



UNIVERSAL ELECTRONICS R32068BD00 Remote Control



Getting Started

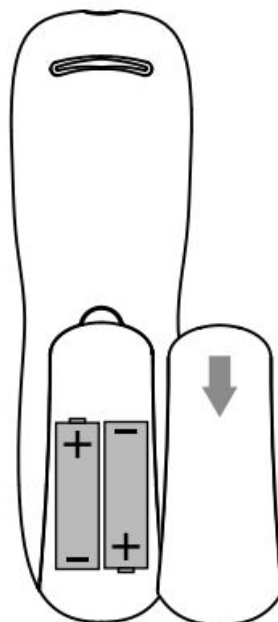


Insert 2 AA batteries. Match the + and – marks.

Note: Make sure TV is ON before starting remote control setup.

Tip: The LED will blink 5 times with each key-press when batteries need replacement

Setup Method A:

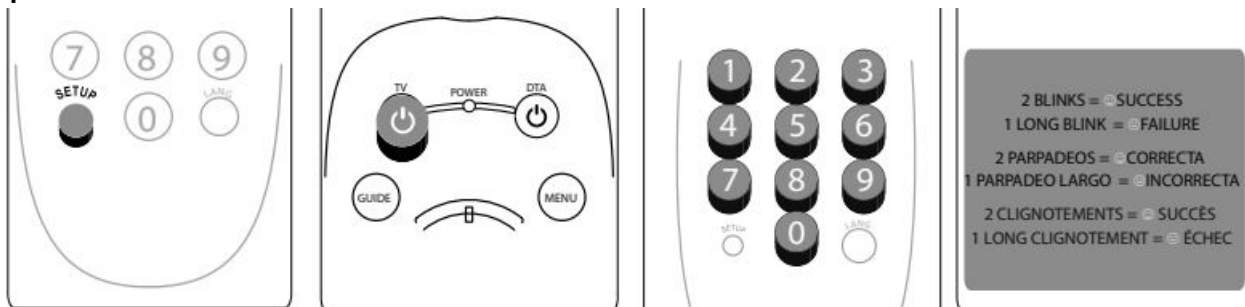


1. Press and hold SETUP until LED blinks twice.
2. Press the TV POWER key, LED remains ON.
3. Press and hold down the DIGIT key for your TV brand.
4. Let go of the key when your TV turns Setup is complete

Tip: If your brand does not appear on popular TV brand chart, try either Method B or Method C to setup the remote to control your TV.

DIGIT DÍGITO Chiffre	TV TV Télé
1	Insignia / Dynex
2	LG / Zenith
3	Mitsubishi
4	Panasonic
5	Philips / Magnavox
6	Samsung
7	Sharp
8	Sony
9	Toshiba
0	Vizio

Functional Key Chart

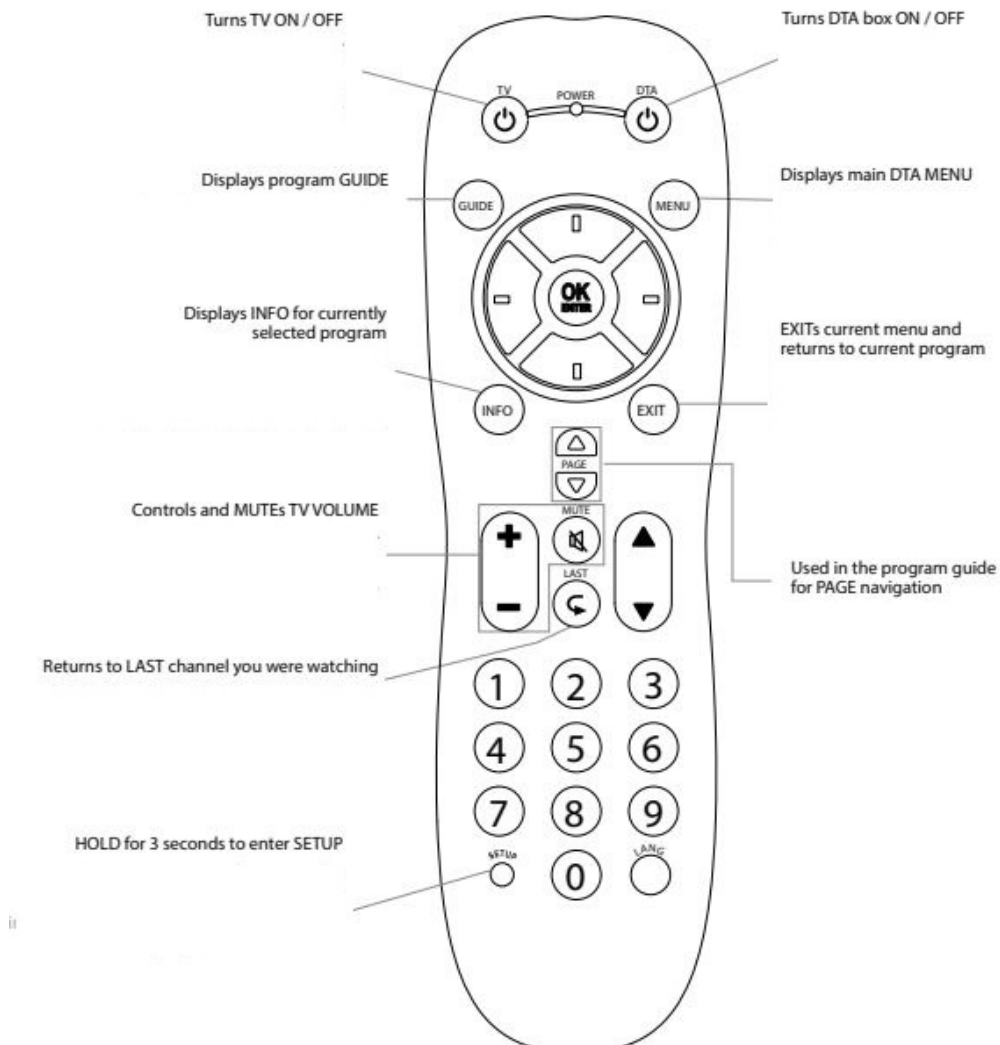

INDUSTRY CANADA USER'S STATEMENT FOR NON- DETACHABLE ANTENNAS FOR BOTH ENGLISH AND FRENCH

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

FCC NOTICE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase or decrease the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced remote control/ TV technician for help.

- It is strongly recommended that the TV be plugged into a separate wall outlet.


This equipment has been verified to comply with the limits for a Class B computing device, pursuant to FCC Rules. The user is cautioned that changes and modifications made to the equipment without the approval of manufacturer could void the user's authority to operate this equipment.

TROUBLESHOOTING

- Problem: LED does not blink when a key is pressed.
- Solution: Replace batteries.
- Problem: TV does not respond when TV POWER or VOLUME keys are pressed.
- Solution: Program remote control for your TV brand using instructions in Setup Method A, B, or C.
- Problem: Tried all codes for my TV brand and none work.
- Solution: Try CODE SEARCH (Setup Method B) method or go to www.urcsupport.com for additional support

Setup Method B:


NOTE: Make sure TV is ON before starting remote control setup.

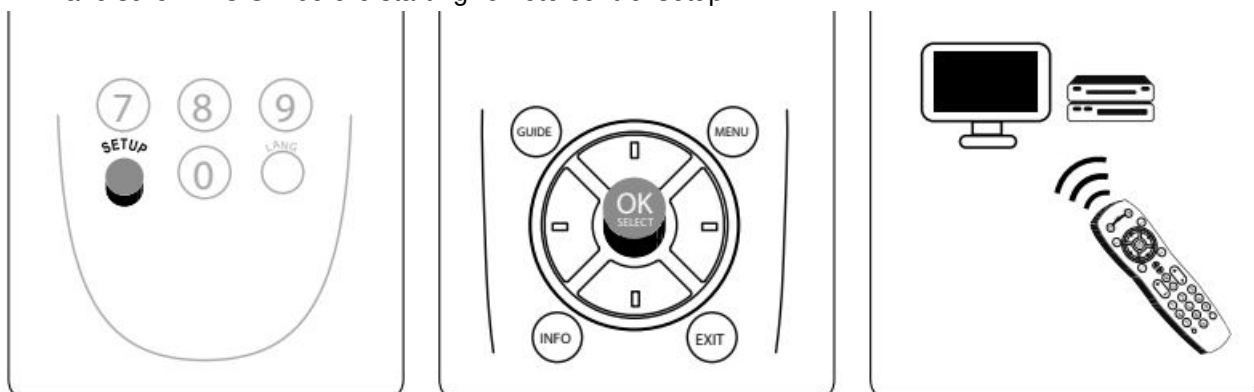

1. Press and hold SETUP until LED blinks twice.
2. Press and hold down the OK/SELECT key.
3. Let go of the OK/SELECT key when the TV turns.

Setup Method C:


Note: Make sure TV is ON before starting remote control setup

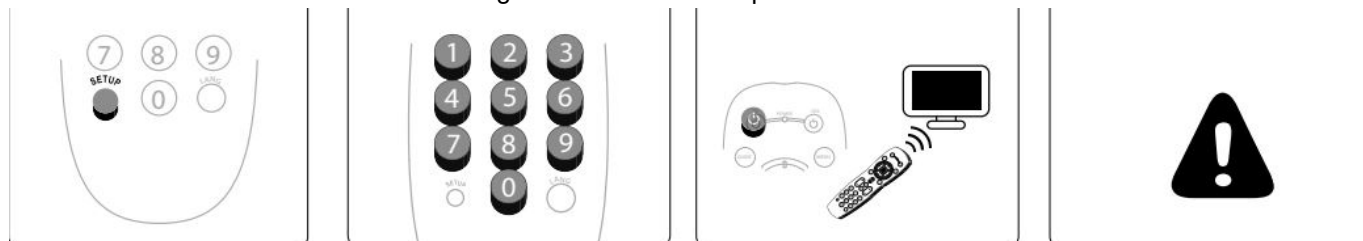

1. Press and hold SETUP until LED blinks twice.
2. Enter the 1st TV code for your brand from the code list to the right. LED blinks twice.
3. Press the TV POWER key to test TV control. If the TV turns , setup is complete.
4. If TV does not turn , repeat this process using the next code for your Tbrand.

Set volume control for the TV:

1. Press and hold SETUP for 3 seconds. The LED will blink twice.
2. Press VOL +. The LED will blink twice as conrmation

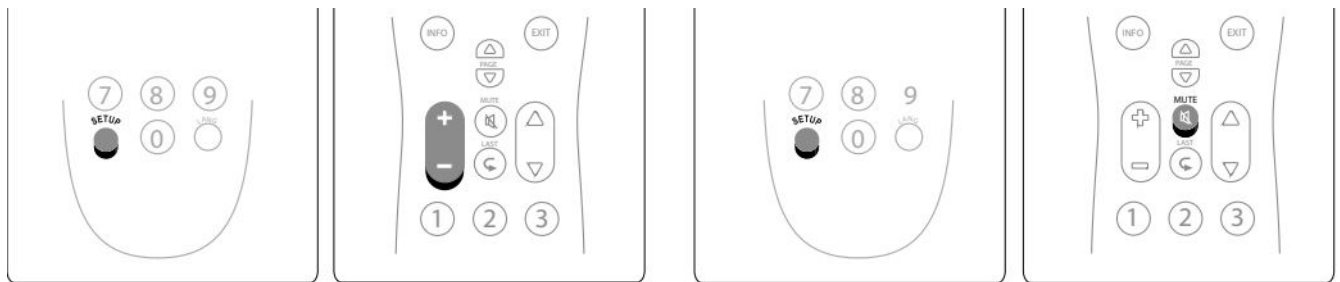

Set volume control for the DTA:

1. Press and hold SETUP for 3 seconds. The LED will blink twice.
2. Press MUTE. The LED will blink 4 times.

Codes: TV


Accurian	1803	Hisense	1314, 1660, 2098	RadioShack	0180, 0178
Action	0873	Hitachi	1643, 0145, 0797, 2215, 2433, 2679, 2879	RCA	1447, 1661, 0899, 1781, 2434, 2746, 2932
Akai	1675, 1207, 1676, 1688, 1689, 1692, 1935, 2232	Hitech	1814	Realistic	0180, 0178
America Action	0180	HP	1494, 1088	Recco	0706
Anam	0180	Hyundai	0849, 1219, 1294, 1814	RevolutionHD	1623
AOC	1365, 1590, 2014, 2087, 2402, 2621	I-Inc	1746	Runco	1398
Aomni	1623	iLo	1463, 1286, 1394, 1603, 1665, 1684, 1990	Sampo	1755
Apex Digital	0890, 1217, 2397	Initial	1603, 1990	Samsung	0178, 0766, 0814, 1060, 2051
Astar	1531, 1738	Insignia	1423, 1564, 0171, 1204, 1517, 1660, 1710, 1785, 1892, 1963, 2049, 2417	Sansui	0171, 1463, 1409, 1670, 1892, 1935
Audinac	0180	iRIS	2189	Sanyo	1142
Audiovox	1564, 0180, 0802, 0846, 0875, 1766, 1803, 1937, 1951, 2121, 2513, 3065	IRT	1661, 0628	Sceptre	0878, 1217, 1360, 1599, 2337
Aventura	0171	IX	0877	Scotch	0178
Axion	1937	JCM	2189, 2256	Scott	0180, 0178, 1711
Baysonic	0180	Jensen	1299	Sears	0156, 0178, 0171
BenQ	1032, 1315	JVC	1601	Semivox	0180
BGH	0876	KDS	1498, 1687	Semp	0156, 1743
Blue Sky	2153	KEC	0180	Sharp	0818, 2402
Bradford	0180	Kioto	0706, 0628	Sherwood	1399
Broksonic	1935	Konka	0628, 1831	Simpson	0186
Byd:sign	1309	Kost	1483	Skyworth	1799
Candle	0186	Kreisen	0876, 1474	Solarism	1220
Carver	0170	KTV	0180	Sole	1377, 1483, 1530, 1623
Casio	1205	Lasonic	3198	Sony	0810, 1685
Citizen	0186, 1935	LG	1423, 1447, 0178, 0856, 1530	Soundesign	0180, 0178, 0186
Clarion	0180	LiteOn	1088	Sova	1320
Coby	1538, 1634, 2017, 2306, 2314, 2315, 2326, 2338, 2340, 2344, 2345, 2348, 3202	LodgingStar	3147	Soyo	1520, 1746, 1826, 1828, 1830, 1831
Commercial Solutions	1447	LXI	0156, 0178	Spectroniq	1498, 1687
Contec	0180	MAG	1498, 1687	Squareview	0171
Continental	2357	Magnavox	1454, 1866, 1755, 0171, 0706, 0186, 0802, 1198, 1365, 1525, 1867, 1963, 1990, 2655	SSS	0180
Coradir	2844	Marantz	1454, 0704, 1398	Starlite	0180
Craig	0180	Maxent	1755, 1211, 1757	SunBriteTV	1610, 1420, 1435, 2337
Crown	0180	Megatron	0178, 0145	Superscan	0864
Curtis	1200, 2352, 2397, 2855, 2859	Memorex	0150, 0178, 0877, 1665, 1670, 1785, 1892, 2739	Supersonic	1753, 2104, 2784, 3154, 3204
Curtis Mathes	0145, 1661	MGA	0150, 0178	SVA	0865, 0871, 1963
CXC	0180	Mintek	1603, 1990	Sylvania	1864, 0171, 1314, 1394, 1665, 1886, 1963
Daewoo	1661, 0661	Miray	3309	Symphonic	0180, 0171, 1394
Dell	1264, 1080	Mitsubishi	1250, 0150, 0178, 1797	Syntax	1610, 1144, 1240
Delta	1369	Multitech	0180	Tatung	1286, 1756, 2496
Denon	0145	NAD	0156, 0178	TCL	2434
Denstar	0628	Naxa	2104, 2735	Teknika	0180, 0150, 0186
Digital Lifestyles	1765, 1822	NEC	0170, 0704, 0876, 1398, 1797, 2026	TMK	0178
Disney	1665, 1892	NetTV	1755, 2753	Tophouse	0180
Durabrand	0180, 0178, 0171, 1665	NEX	1814	Toshiba	1524, 0156, 1343, 1369, 1743, 1935
Dynex	1463, 1785, 2049			TruTech	1665, 1723
Electrograph	1755, 1623			US Logic	1286, 1303

Electrohome	1670	Nexus Electronics	2183	Vidikron	1398
Elektra	1661	Nikko	0178	Vidtech	0178
Element	1687, 1886, 2183	Niko	1581	Viewsonic	1755, 1564, 0797, 0864, 0885, 1330, 1365, 1578, 1627, 1742, 2014, 2049, 2087, 2277
Emerson	1864, 0180, 0178, 0171, 1661, 1394, 1665, 1886, 1963	Nimbro	2104		
		Norcent	0824, 1365, 1590, 1591, 1745	Viore	1207, 1684, 2104, 2352, 3094, 3118
Emprex	1422, 1765	Norwood Micro	1286, 1303	Visart	1336
Encross	0876, 1474	NuVision	1657, 2158	Vito	1320
Envision	0813, 1365, 2014, 2087	Olevia	1610, 1144, 1240	Vizio	1758, 0864, 0885, 1756, 2707
ESA	0171, 1963	Onwa	0180	Wards	0156, 0180, 0178, 0186
Fujitsu	0809, 0186, 0683	Optoma	1348	Waycon	0156
Funai	0180, 0171, 1963	Orion	1463	Westinghouse	0885, 0890, 1217, 1282, 2195, 2293, 2499
Futuretech	0180	Panasonic	1480	White Westinghouse	1661
Gateway	1755, 1756	PARK	2104	Wyse	1365
GE	1447, 0178	PDI	1474	Yamaha	0797
GFM	1864, 0171, 1665, 1886, 1963	Penney	0156, 0178	Zenith	1423, 0178, 0145, 1661, 1365
Go Video	0886, 1823, 1831	Philco	0145, 0171, 1661, 1394, 1665, 1963		
GoldStar	0178	Philips	1454, 1866, 0171, 0899, 1394, 1483, 1867		
GPX	2693	Pioneer	1457, 1398		
Gradiente	0170	Planar	1496		
Grundig	0683	Polaroid	0865, 1286, 1314, 1328, 1341, 1498, 1538, 1687, 1766, 1767, 2063, 2121		
Grunpy	0180				
Haier	1753, 2293, 2494, 2690, 3204	Portland	1661		
Hallmark	0178	Prima	1753, 1785		
Hanns.G	1783	Proscan	1447, 2147, 2183, 2256		
Hannspree	1348, 1745, 1783	Proton	0178		
Harvard	0180	Prottron	1320		
Helios	0865	Proview	1498, 1687		
Hewlett Packard	1494, 1088	Punktal	2687		
Hikato	0628	Pyle	1200, 2196		
Himitsu	0180, 0628				

To find the exact code for your TV, use our
CODE FINDER feature at WWW.URCSUPPORT.COM

Tip: Write the working TV code here for future use.

 Documents / Resources

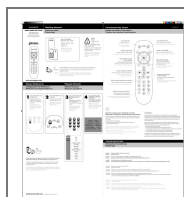

[UNIVERSAL ELECTRONICS R32068BD00 Remote Control](#) [pdf] User Guide
R32068BD00, MG3-R32068BD00, MG3R32068BD00, R32068BD00 Remote Control,
R32068BD00, Remote Control

References

- [🌐 BRAND - Make your life stylish](#)
- [🇺🇪 URC Support](#)