

Universal TV Remote RC-G008+ Universal Remote Control



# Universal TV Remote RC-G008+ Universal Remote Control Instructions

[Home](#) » [Universal TV Remote](#) » Universal TV Remote RC-G008+ Universal Remote Control Instructions 

## Contents

- 1 Universal TV Remote RC-G008+ Universal Remote Control
- 2 Product Information
- 3 Product Usage Instructions
- 4 HOW TO SET UP YOUR REMOTE
  - 4.1 Automatic Search
  - 4.2 SET UP BY CODE
  - 4.3 Brand Search
- 5 Default Modes
- 6 Documents / Resources
  - 6.1 References
- 7 Related Posts

## Universal TV Remote

Universal TV Remote RC-G008+ Universal Remote Control



## Product Information

### Product Specifications:

- **Product Name:** RC-G008+ LCD/LED TV Remote Controller
- **Brand Compatibility:** Various TV brands including LG, Samsung, Sony, Philips, Panasonic, Sharp, etc.
- **Features:** Automatic search mode, brand code list, brand search function, default mode for common TV brands

## Product Usage Instructions

### Automatic Search:

1. Press the [MUTE] + [POWER] buttons together, and the LED light will turn on, then release the buttons.
2. Press the mute button again to enter automatic search mode.
3. If volume appears on the TV, press the mute key again to stop the automatic search.
4. Test the function by pressing other keys. If correct, press the power key to exit search mode and save the function.

### Brand Code List TV:

A list of brand codes for various TV brands is provided for manual setup.

### Brand Search:

1. Turn on the TV and press the corresponding brand button for 5 seconds until the LED flashes three times to complete the setting.
2. Input your 3-digit TV code from the code list. The LED light will go off if the correct code is entered.
3. If the code is wrong, the LED light will stay on. Re-enter the code if needed.
4. Check the remote function. If it doesn't work well, try another code and repeat the process.

### Default Mode:

The default setting allows control of many brands like LG, Samsung, Sony, Philips, etc. To restore to initial settings, press and hold the [OK] + [0] buttons for about 3 seconds until the LED blinks four times.

### Frequently Asked Questions (FAQ):

- **Q: How do I reset the remote control to its default settings?**



A: To restore the remote to its initial settings, press and hold the [OK] + [0] buttons for approximately 3 seconds until the LED blinks four times.

- **Q: What should I do if the remote control doesn't work properly after setup?**


A: If the remote doesn't function correctly, try entering another code from the list and repeat the setup process starting from step 1.

## HOW TO SET UP YOUR REMOTE

### Automatic Search

- **Step. 1** Press the [ MUTE  ] + [ POWER  ] buttons together, and then the LED light is lighting and released.
- **Step. 2** Press the mute button again, and the remote control enters the automatic search mode. if the volume appears on the TV, press the mute key again, and the automatic search stops, you can press other keys to test the function.
- **Step. 3** If the function is correct, you can press the power key to exit the search mode, and the current function is saved.

### SET UP BY CODE

- **Step. 1** Press the [ MUTE  ] + [ POWER  ] buttons together, then the LED light is lighting and release it.




- **Step. 2** Input your 3-digit TV CODE from the code list. If the code is right, the LED light will go off. If the code is wrong, the LED light will still be on. If this happens, try to enter the code again as there may have been an error the first time.
- **Step. 3** Please check the function of the Remote. If it doesn't work well, please you can t one of the other codes and repeat the process from step 1.

**NOTE:** During the setting process, if no key is pressed in 10 seconds it will exit automatically.

<b>BRAN D</b>	<b>CODE LIST TV</b>	<b>BRAND</b>	<b>CODE LIST TV</b>	<b>BRAND</b>	<b>CODE LIST TV</b>
<b>AIWA</b>	082.083.084.085	<b>HITACHI</b>	009.067	<b>ROKU.TV</b>	190
<b>AOC</b>	086.087	<b>IMPERIA L</b>	205	<b>ROKU.TV2</b>	191
<b>APPLE</b>	088	<b>INSIGNI A</b>	018	<b>SAMSUNG</b>	028.002.030.029.031.032
<b>AVOL</b>	204	<b>JVC</b>	012.077.079.080.081	<b>SANYO</b>	017
<b>COBY</b>	089.090.091.092.093.094.095.096	<b>LG</b>	023.001.024.025.026.027	<b>SCEPTRE</b>	193.194.195
<b>CURTI S</b>	097.098.099.100.101.102.103	<b>MAGNA VDI</b>	025.055.056	<b>SEIKI</b>	016
<b>DAEW OO</b>	104.105.106.107.108.109.110	<b>OLEVIA</b>	60.161.162.163	<b>SHARP</b>	045.007.047.048.049.050 057.056
<b>DYNE X</b>	111.112.113	<b>ONN</b>	164		055.054.053.052.051
<b>ELEM ENT</b>	114.115.116.117.118.119.120.121	<b>OPTIMU S</b>	165.166.167	<b>SKYWORT H</b>	196.197
	122	<b>Panason ic</b>	006.042.043.044	<b>SONY</b>	033.003.034
<b>EMER SON</b>	123.124.125.126.127.128.129.130	<b>PHILIPS</b>	005.064.038.039.040.041 035.036	<b>SYLVANIA</b>	198.199.200.201.202.203
	131.132.133.134.135.136.137		037	<b>TCL</b>	011.073.075.074.076
<b>FIRE-T V</b>	206	<b>POLARO ID</b>	168.169.170.171.172.173.174.175	<b>TOSHIBA</b>	059.060.061.062.063.064.065.066
<b>FUNAI</b>	138.139.140.141.142.143.144.145		176.177.178	<b>VESTEL</b>	015
<b>GE</b>	146.147.148.149.150.151.152.153	<b>PROSCA N</b>	179.180.181.182.183.184.185.186	<b>VIZIO</b>	068.010.069.070.071.072
	154.155.156.157.158.159		187.188	<b>WESTINGH OUSE</b>	022
<b>HAIER</b>	020	<b>PYLE</b>	189		
<b>HISEN SE</b>	013.014.049.050.058.057 056.055	<b>RCA</b>	019		
	054.053.052.051	<b>ROKU.B OX</b>	192		

## Brand key Table

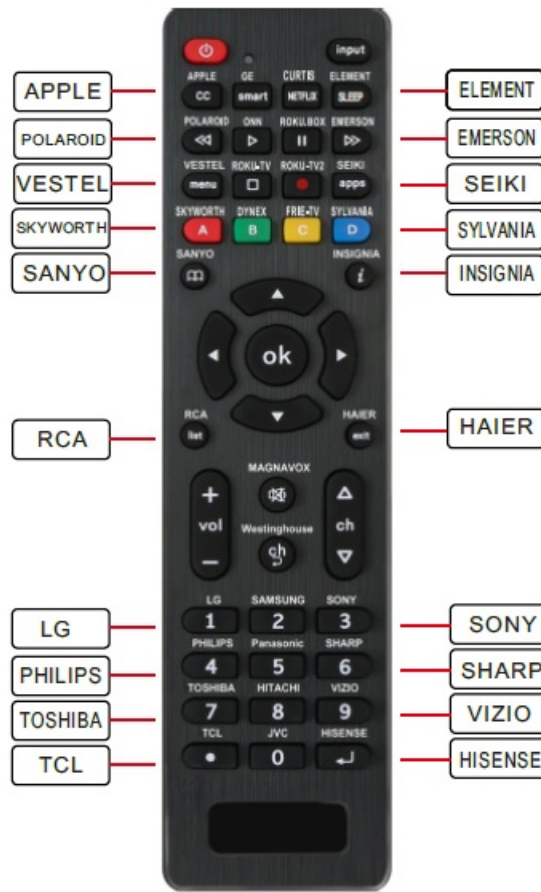

Turn on the TV. Press the button of the corresponding brand for 5 sec, the LED flashes three times, and then the setting is completed.




## Default Modes

- Under the default setting, RC-G008 can directly control many brands, including LG/SAMSUNG/SONY/PHILIPS/PANASONIC/SHARP TV.
- Restore to the initial setting, please, and hold the [OK] + [0] buttons for about 3sec, the LED light will blink four times, and how it is in the initial setting.

---

## Documents / Resources

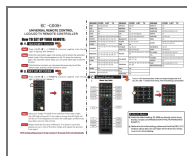

[Universal TV Remote RC-G008+ Universal Remote Control](#) [pdf] Instructions  
RC-G008 Universal Remote Control, RC-G008, Universal Remote Control, Remote Control

## References

- [🌐 ROKU.TV](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.