

UP-TECH UPT-1012 Bluetooth Arrow Wireless Speaker User Guide

Home » UP-TECH » UP-TECH UPT-1012 Bluetooth Arrow Wireless Speaker User Guide



ARROW WIRELESS SPEAKER

QUICKSTART GUIDE (ON BACK)

Contents [hide

- 1 PRODUCT SPECIFICATIONS
- **2 PACKAGE CONTENTS**
- **3 CHARGING DEVICE**
- **4 PAIRING THE DEVICE**
- **5 BASIC INSTRUCTIONS**
- **6 LED INDICATOR**
- **7 SPEAKER BUTTON**
- **FUNCTIONS**
- **8 SAFETY INFORMATION**
- 9 Documents / Resources
- **10 Related Posts**

PRODUCT SPECIFICATIONS

• Operating Distance: 10 Meters

• Input: DC5V

• Battery:500mAh

• Charging: Approx 4 hours

• Playback: Approx 6 hours (Estimate based on continuous playback at 60(Yo volume)

PACKAGE CONTENTS

- Uptech Arrow Bluetooth Speaker
- · Micro USB Charging Cable
- User Manual

CHARGING DEVICE

Before using this speaker for the first time, charge for 24 hrs.

- 1. Plug the Micro end of the charging cable into the port on the speaker. Plug the USB end into a computer's USB port or a compatible AC wall adapter.
- 2. The red LED will turn on to indicate the device is charging.
- 3. Once fully charged, the red LED will turn off. When Battery is low, approximately 4 hours of charging time is needed to fully recharge the battery.

PAIRING THE DEVICE

- 1. Place speaker within 30ft of Bluetooth enabled device.
- 2. Slide power switch, located on the back of the speaker, to "ON" position, a tone will play indicating device is on. The blue indicator LED will light up then flash to indicate pairing mode.
- 3. On your device's Bluetooth menu, find and select "UP-TECH ARROW SPKR". (you may be required to enter a password "0000").
- 4. A tone may sound and the blue LED will flash when pairing is complete.

BASIC INSTRUCTIONS

To turn the speaker on, slide the power switch from OFF to ON.

The speaker will beep and a blue LED will flash.

The blue LED will flash when paired and when playing music.

The speaker will beep every 20 seconds when the battery is low.

To turn the speaker off, slide the power switch from ON to OFF.

LED INDICATOR

Charging: Red LED on Fully Charged: Red LED of Pairing Mode: Blue LED will flash Connected: Blue LED will flash Playing: Blue LED will flash

SPEAKER BUTTON FUNCTIONS

- Increase Volume press and hold "UP" Arrow.
- Decrease Volume press and hold "DOWN" Arrow.

- Nott's song press "UP" Arrow.
- Previous song press "DOWN" Arrow.
- Play audio from your connected device, please note device must be within 33ft (10 meters) for uninterrupted audio play.
- DC 5V: Use the included Micro USB cable to connect the device to a computer USB port/AC power adapter with USB to charge.

SAFETY INFORMATION

Do not attempt to disassemble the device.

Doing so may result in an electric shock.

Do not use this device on an aircraft or in a hospital.

Do not expose this device to direct sunlight, heat, or open flame.

The device may become warm while charging.

FCC WARNING:

Any Changes expressly or modifications not approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Documents / Resources



<u>UP-TECH UPT-1012 Bluetooth Arrow Wireless Speaker</u> [pdf] User Guide CQL1817-B, CQL1817B, 2APU8CQL1817-B, 2APU8CQL1817B, UPT-1012, Bluetooth Arrow Wireless Speaker

Manuals+, home privacy