



# UPERFECT 140G02 Bluetooth WiFi Touchscreen Laptop Computers User Manual

 
[Home](#) » [UPERFECT](#) » UPERFECT 140G02 Bluetooth WiFi Touchscreen Laptop Computers User Manual 

## Contents

- [1 UPERFECT 140G02 Bluetooth WiFi Touchscreen Laptop Computers](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Frequently Asked Questions \(FAQ\)](#)
- [5 Safety Information](#)
- [6 Cleanin & Maintenance](#)
- [7 Product Introduction](#)
- [8 Connection Mode](#)
  - [8.1 Connect to Phone Via Wireless](#)
  - [8.2 Connect to Phone Via Cable](#)
  - [8.3 Connect to PC](#)
  - [8.4 Connect to Game Device](#)
- [9 Specification](#)
- [10 FAQ](#)
- [11 Warranty](#)
- [12 Warranty](#)
- [13 Documents / Resources](#)
  - [13.1 References](#)
- [14 Related Posts](#)



**UPERFECT 140G02 Bluetooth WiFi Touchscreen Laptop Computers**

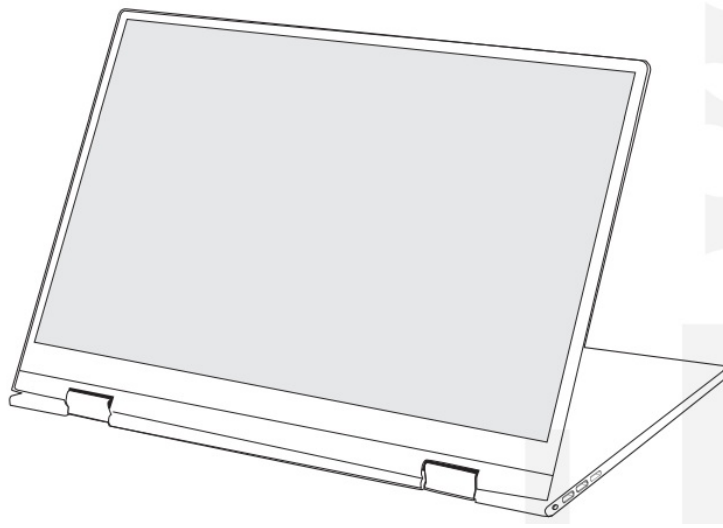

## Product Information

### Specifications

- **Model:** Phonepad-02041c
- **Touch Screen Bluetooth:** Touches-a02041c
- **Keyboard Bluetooth:** Fb\_Keyboard
- **Android Mode:** 1.7313.507.84

## Product Usage Instructions

### Wireless Connection for Android Devices

1. Bluetooth connect Touchs-XXXXXX and Fb\_Keyboard.
2. Click the wireless screen and select Flipbook-XXXXXX.

### Wireless Connection for iPhone Devices

1. Bluetooth connect Fb\_Keyboard.
2. Open the WIFI connection to the screen device Flipbook-XXXXXX.
3. Password: 12345678.
4. Click on the phone image to connect to Flipbook-XXXXXX.

### Wired Connection

Audio and video output devices such as mobile phones and computers are connected to the Phonepad's TYPE-C (DP) / Mini-HDMI via Type-C (DP) / HDMI.

### Settings Adjustment

To access settings, swipe down with two fingers on the screen.

## Frequently Asked Questions (FAQ)

- **How do I pair my Android device with the projection screen?**

Follow the instructions to Bluetooth connect Touchs-XXXXXX and Fb\_Keyboard, then select Flipbook-XXXXXX on

the wireless screen.

- **Can I connect my iPhone wirelessly to the projection screen?**

Yes, you can connect your iPhone by Bluetooth pairing with Fb\_Keyboard and connecting to the WIFI of Flipbook-XXXXXX using password 12345678.

## **Safety Information**

- Please read this user manual carefully before using the monitor, to ensure proper operation.
- Do not disassemble or repair the monitor by yourself, contact our customer service team (support@eviciv.com) if the monitor is damaged.
- To prevent fire or shock hazard, never expose the monitor to rain or moisture.
- If possible, place monitor in a well-ventilated, dust-free and dry area without direct exposure to sunshine.
- Please put monitor and its accessories in the place that children cannot reach.
- Do not place heavy objects or spill liquid on monitor.
- Do not touch the power cord or signal cable when lightning strikes, otherwise it may cause electric shock.
- Unplug the monitor during a lightning storm or if it will not be used for a long period of time. This will protect the monitor from damage due to power surges.

## **Cleanin & Maintenance**

- Before cleaning, turn off monitor and unplug the cable. Clean the monitor surface with a lint-free, non-abrasive cloth. Stubborn stains may be removed with a cloth dampened with mild cleaner.
- Avoid using a cleaner containing alcohol or acetone. Use a cleaner intended for use with the LCD. Never spray cleaner directly on the screen, as it may drip inside the monitor and cause an electric shock.

## **Product Introduction**

- Thanks for purchasing Eviciv Monitor.
- Eviciv Monitor has Keyboard, TouchPad, Touchscreen, Dual Speaker and Built-in Battery, supporting 360°rotation. Connecting a mobile phone with DP function, Eviciv Monitor could be used as a Notebook. The CPU of mobile phone acts as the CPU of the Monitor, and the WiFi and Bluetooth of mobile phone act as the WiFi and Bluetooth of the Monitor. It provides the great portability and simplicity in your daily life, enhancing your viewing experience and style.

## **Package List**

Please contact Eviciv Customer Service Team via support@eviciv.com, if there is any item missing or damaged.



1\*Monitor



1\* mini HDMI to HDMI Cable



2\*Type-C to Type-C Cable



1\*USB to Type-C Cable

 


1\*User Manual



1\*PD Adapter



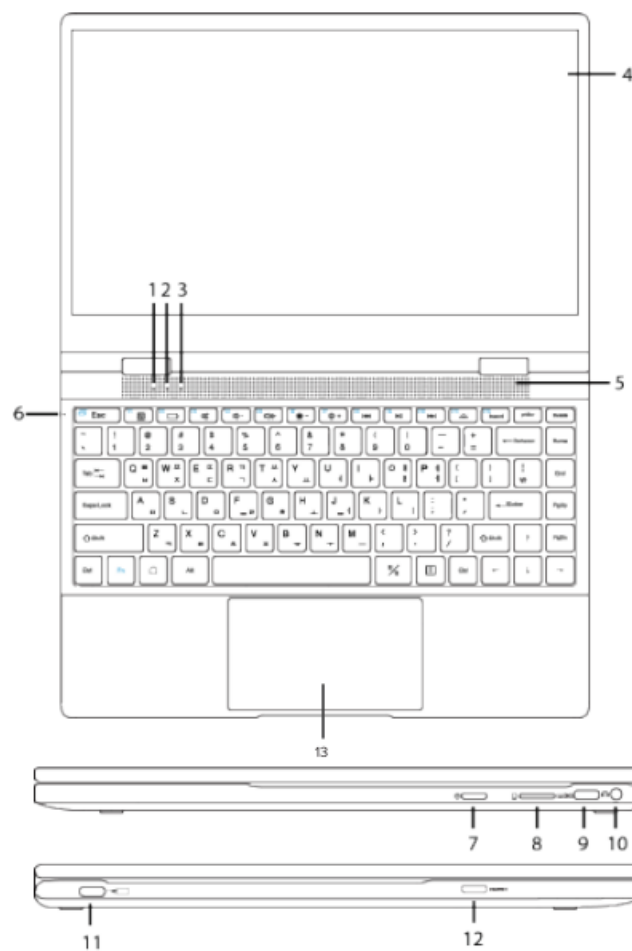










## Monitor Introduction

  

1. Power Indicator
2. Uppercase Indicator
3. TouchPad Lock Indicator
4. Touchscreen (10 Point Touch)
5. Speaker
6. Charging Indicator
7. Power Button
8. Micro SD Card Slot
9. Type-C Charging Port
10. Headphone Port
11. Type-C {DP) Input Port
12. Mini HDMI Input Port
13. TouchPad

### Use the Keyboard

The keyboard includes keys that activate special functions. The function of each key is clearly marked with an icon.

	Escape
	TouchPad Switch
	Battery Capacity Indicate
	Mute
	Volume Decrease
	Volume Increase
	Brightness Decrease
	Brightness Increase
	Previous Page
	Pause/Play
	Next Page
	Backlight Switch
	Screenshot (Available while connecting mobile phone)

### OSD (On-Screen Display) Menu

- The boot screen is as below. “Swipe down here with two fingers to open OSD (On-Screen Display) Menu”



- Then OSD (On-Screen Display) Menu is as below.



1. Volume Adjustment
2. Brightness Adjustment
3. Sharpness Adjustment
4. Screen Brightness Adjustment
5. Type-C Input
6. HDMI Input
7. Mute
8. Charging Other Devices
9. No Charging Other Devices
10. Horizontal Rotation Switch (180° Gravity sensing) ® Previous Page
11. Next Page
12. OSD Exit
13. HOR Switch
14. OSD Reset
15. Monitor Information
16. Color Temperature Adjustment

### Monitor Standing Mode

Eviciv Monitor can be rotated to any angle up to 360°.



Notebook Mode



Stand Mode



Tablet Mode



Tent Mode

#### Note:

Do not rotate the monitor with too much force.

## Connection Mode

### Connect to Phone Via Wireless

- Connect to iPhone**

Connection method: Turn on the monitor, follow the instructions on the monitor screen, turn on Bluetooth, connect the keyboard (BT: Fb\_KeyBoard), and finally open the navigation bar of the iPhone, open Airplay, and search for the device (ID: Flipbook-XXXXX) and connect.



- **Connect to Huawei Phone**

Connection method: Turn on the monitor, follow the instructions on the monitor screen, turn on Bluetooth, connect the keyboard (BT: Fb\_Keyboard), connect the touch (BT: Touches-a02041C), and finally open the navigation bar of the Huawei phone, open Easy Projection, and search for the device (ID: Phonepad-02041C) and connect.



- **Connect to Samsung Phone**

Connection method: Turn on the monitor, follow the instructions on the monitor screen, turn on Bluetooth, connect the keyboard (BT: Fb\_Keyboard), connect the touch (BT: Touches-a02041C), and finally open the navigation bar of the Samsung phone, open SmartView, and search for the device (ID: Phonepad-02041C) and connect.



**Note:** Except for Samsung, Huawei, iPhone, etc., other smartphones such as Motorola Ready for, LG Screen+, etc. all support wireless screen projection. The connection principles are similar. Just follow the operation instructions on the screen to connect.

 
### Connect to Phone Via Cable

Connect to phone with Type-C interface which supports USB3.1 interface

- **Phone Mode:**

Phone and monitor display the same mobile phone content simultaneously.




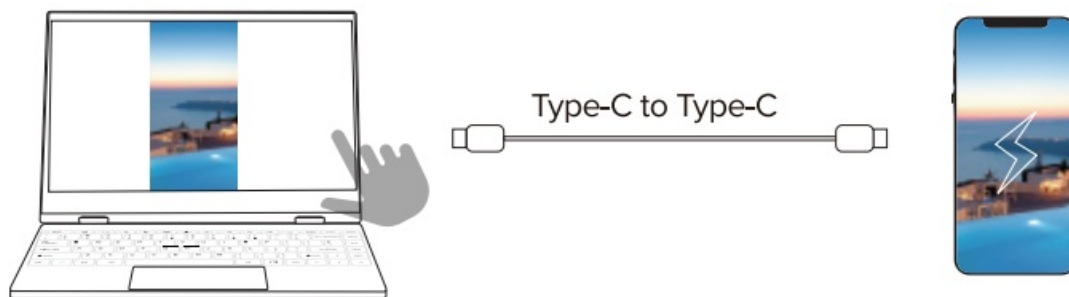

- **Desktop Mode:**

Phone and monitor enter different using modes,

 
1. Phone and monitor do not affect each other. Work and play at the same time.
2. Phone make monitor become a computer, the mobile phone can be used as a touchpad to control the monitor.

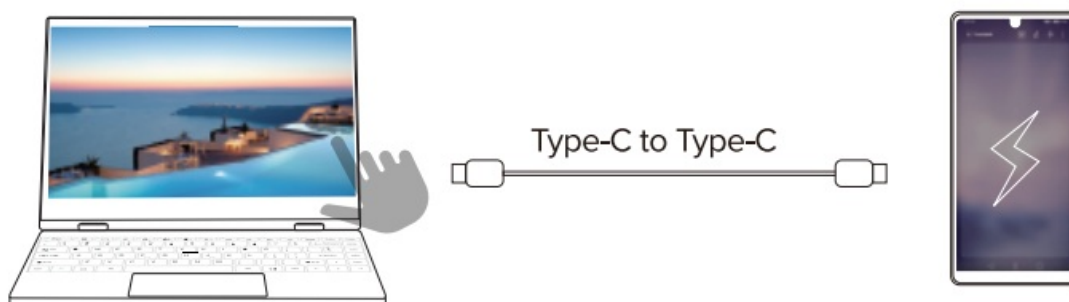


- **Mobile Phone which supports USB 3.1:**

<b>SAMSUNG</b>	S8、S8+、S9、S9+、S10、S10+、S10e、S20、S20+、Note 8、Note 9、Note 10、Note 20
<b>HUAWEI</b>	Mate 10、Mate 10 Pro、Mate 20、Mate 20 Pro、Mate 20 X、Mate 20 RS、P20、P20 Pro、P30、P30 Pro、P40、P40 Pro、P40 Pro+、Honor 10、Honor 20、Honor 30、Nova7 Pro 5G
<b>Continuous update...</b>	

 - **Android Phone**

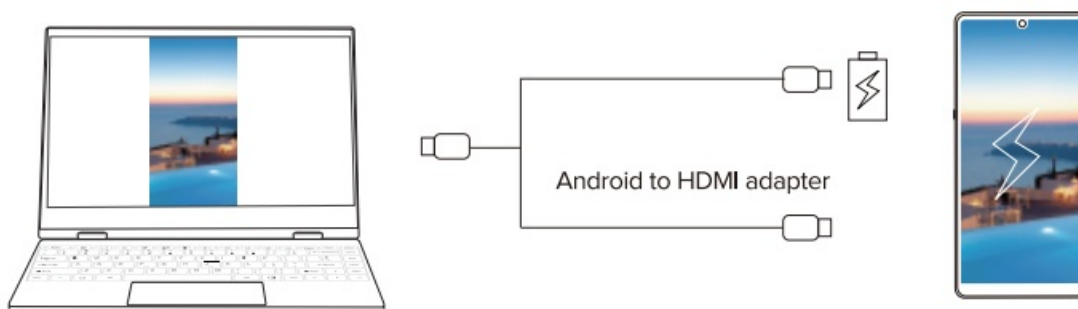

- **iPhone**

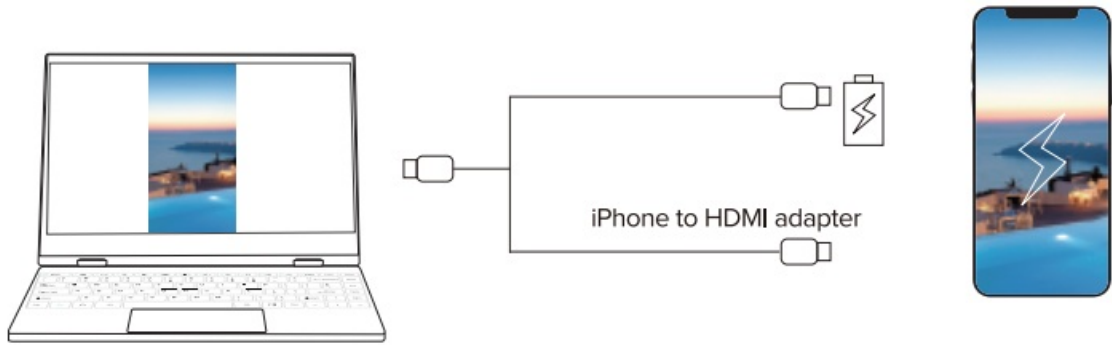 


**Note:**

- Connected to mobile phone with Type-C (DP) input port, the Keyboard/TouchPad/Touchscreen of monitor are available to use.
- Connected to iPhone with HDMI input port, the Keyboard/TouchPad/Touchscreen of monitor are NOT available to use.


**Connect to PC**

Connect to computer with Type-C interface which supports Thunderbolt 3 interface

 • **Duplicate Mode**

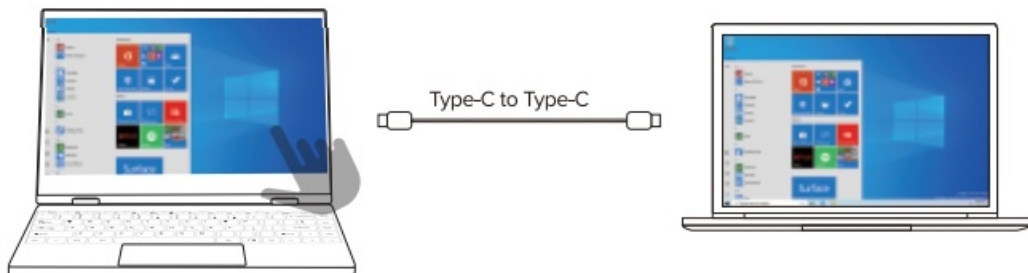

• **Extend Mode**

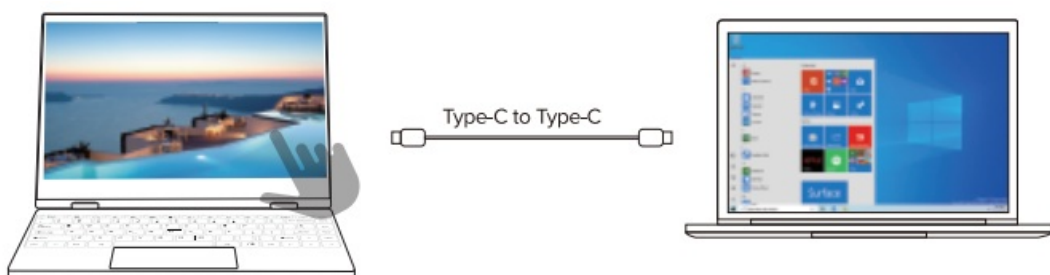 

- **Show only on 2**

 


- **Show only on 1**




- **PC which supports Thunderbolts 3:**

Connect to other computers which don't support Thunderbolt3

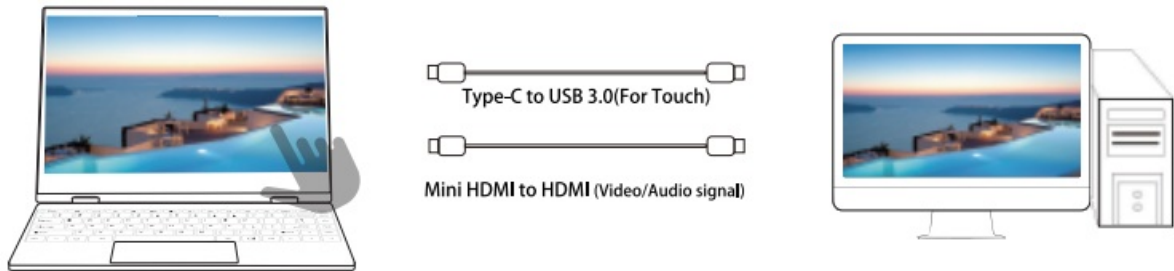


**Note:** (Under the premise of connecting to a computer)

 - In order to use keyboard and TouchPad of the monitor, please connect the monitor to the host of computer with a USB-Type C cable, even though the monitor is connected to computer with Mini HDMI cable as signal input.
- The Extend Mode will be set automatically. Mode setting procedure: Settings on PC→ System+Display- Multiple display-Select mode+Setting completed.

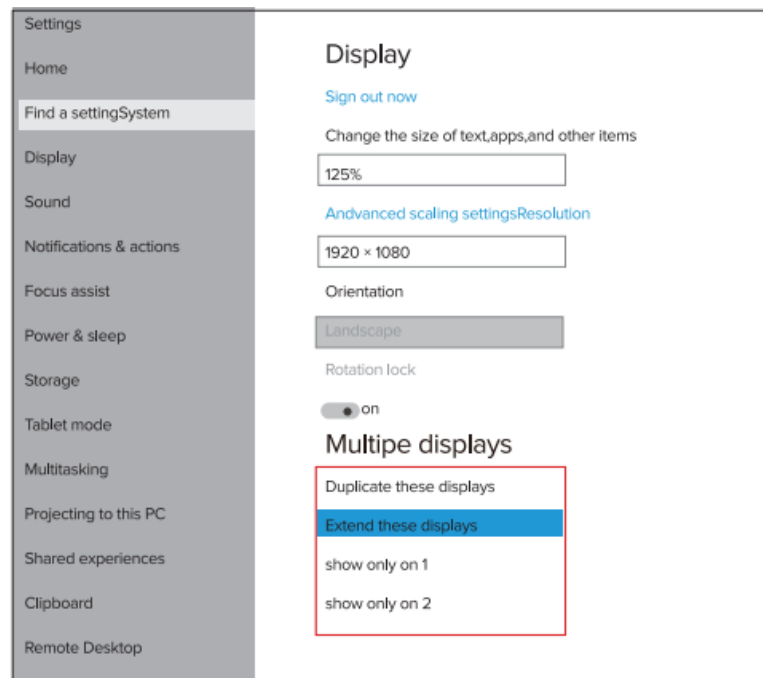


- Or Press “Windows + P”

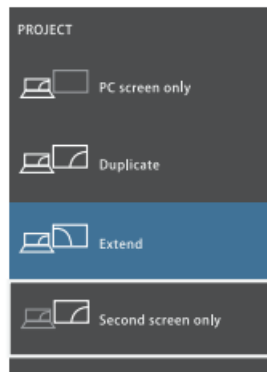 

- PC is the first display and the monitor is the second display. To use the touch function, the monitor needs to be the first display and connected to the host of computer with a USB-Type C cable. The procedure of changing the monitor to be the 1st display: Settings on PC+System→ Display#Select 2-Make this the main display-Keep the changes+Setting completed.





 - Procedure of monitor vertical display: Settings on PCSystem+Display→Select 2→ Select the vertical direction of the screen-Keep the changes→Setting completed

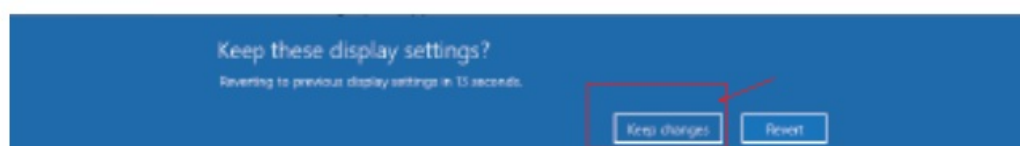


## Connect to Game Device

 
 
- PS4

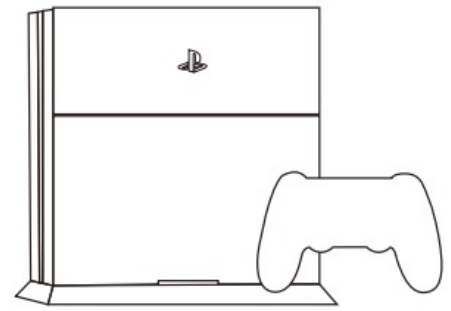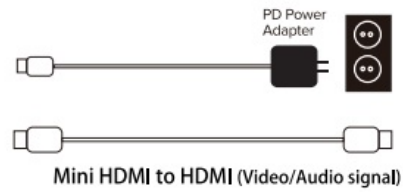

## • XBOX

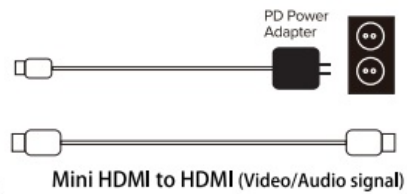 

## • Nintendo

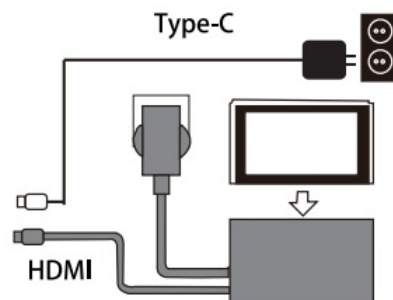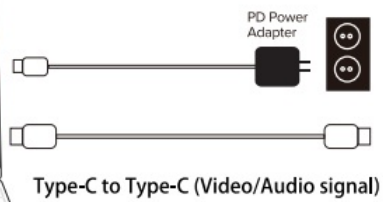  


## Specification



- **Model** M140G02
- **Size** 14 inch
- **Weight** 2.76lb
- **Aspect Ratio** 16:9
- **Panel** IPS

- **Viewing Angle** 178°
- **Resolution** 1920\*1080 Pixels
- **Contrast** 800:1
- **Touch Screen** 10 point touch
- **Brightness** 250 cd/ m
- **Color Gamut** 100% sRGB
- **Built-in Speaker** 82/1W
- **Ports**
  - Micro SD Card Slot \*1
  - Type-C Charging \*1
  - Headphone \*1
  - Type-C (DP) Input \*1
  - mini HDMI Input \*1
- **Refresh Rate** 60 Hz
- **Battery** 7.6V 5400mAh\*2
- **Battery Consumption Time** 5-6 hours after fully charged
- **Battery Charging Time** 2-3 hours
- **OS support** EMIU iOS Android Window

## FAQ

- **No display / no picture?**
  - Please confirm whether the battery capacity of monitor is 0% or not. Charging the monitor for 10 minutes, and try again.
  - Please make sure the Type-C output of your device has DP function.
  - Restart your device and monitor.
- **No sound?**
  - Confirm whether the monitor is muted or not.
  - Confirm whether your device is muted or not.
- **The TouchPad doesn't work?**

Please confirm whether the TouchPad switch  is turned on.
- **180° Gravity Sensing doesn't work?**

 
Please confirm whether the Horizontal Rotation Switch  of the OSD menu is turned on. of the OSD menu is turned on.
- **Monitor does not charge input device?**
  - Please make sure your input device supports 5V charging. Monitor only supports 5V output.
  - Please confirm whether the charging switch  of OSD is turned on.

## Warranty

Dear Customer,

- Thank you for purchasing the UPERFECT monitor!

- We offer 100% money back guarantee in 30 days and 90 days replacement, lifetime warranty for any issue, professional tech support to ensure no-worry service.
- Any query or problem, please contact us via [help@uperfectmonitor.com](mailto:help@uperfectmonitor.com)

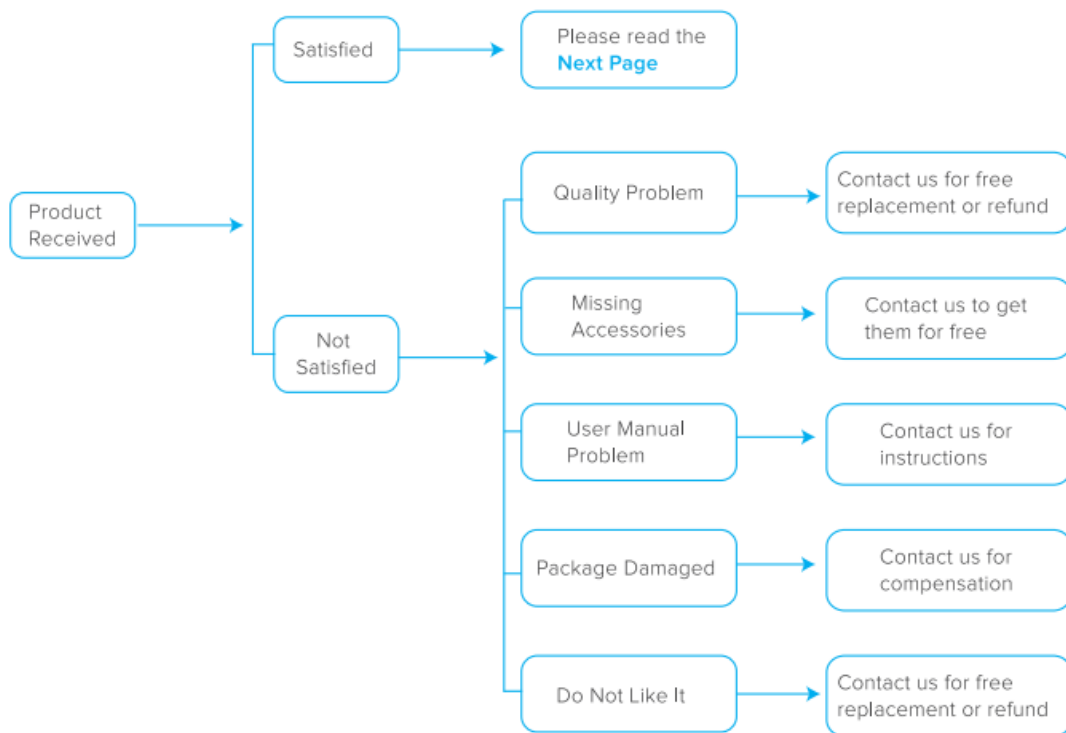

## Warranty

For troubles that occur under normal circumstances, we promise 24-Month warranty.  
There is no warranty in the following cases:

- Damage caused by user's disassembly and repair;
- Damage caused by use of accessories not manufactured or sold by Eviciv;
- Damage caused by not using the projector in accordance with user's manual;
- Unable to provide a valid order number;
- Damage caused by force majeure, such as earthquake, flood, and fire.

Customer's name:

Contact phone number:

Customer's address:

Order number:


Date of purchase:

Product model:

Seller's name:

---

## Documents / Resources

	<a href="#">UPERFECT 140G02 Bluetooth WiFi Touchscreen Laptop Computers</a> [pdf] User Manual 140G02, 140G02 Bluetooth WiFi Touchscreen Laptop Computers, Bluetooth WiFi Touchscreen Laptop Computers, WiFi Touchscreen Laptop Computers, Touchscreen Laptop Computers, Laptop Computers
---	--

## References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.