



# UPLIFT DESK FRM001 Advanced Flush Keypad Instruction Manual

[Home](#) » [UPLIFT DESK](#) » UPLIFT DESK FRM001 Advanced Flush Keypad Instruction Manual 

## Contents

- [1 UPLIFT DESK FRM001 Advanced Flush Keypad](#)
- [2 Product Information](#)
- [3 Package Contents](#)
- [4 Desk shown upside down](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)

UPLIFT DESK

 
## UPLIFT DESK FRM001 Advanced Flush Keypad



## Product Information


The Advanced Flush Keypad FRM001 is an accessory for UPLIFT desks. It is designed to be attached to the desktop to provide an easy-to-access control panel for adjusting the height of the desk. The keypad comes with two #10×5/8" Wood Screws, which are used to attach the keypad to the desktop.

## Package Contents

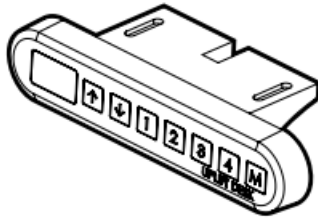

- Keypad Desk shown upside down
- (2) #10×5/8" Wood Screws (provided with desk and labeled H14)

### Desk shown upside down

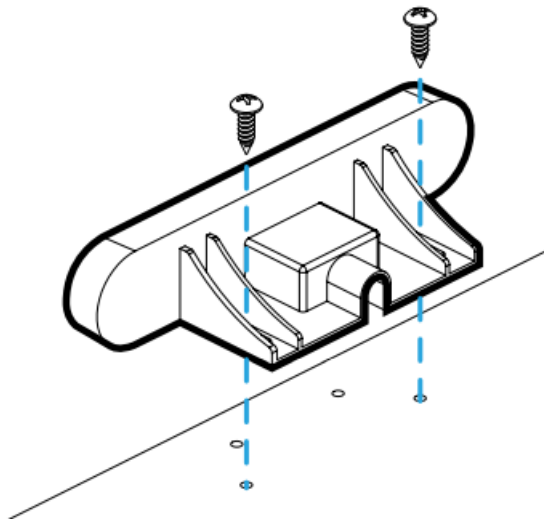 

#### Step 1 – Attach Keypad to Desktop

 
There are keypad attachment holes pre-drilled into UPLIFT desktops. The predrilled holes are located on both the left and right sides so you can choose which side of the desktop you'd like to attach the keypad. Note: Typically the desk is upside down when assembling and attaching the keypad, so if this is the case the keypad will be on the opposite side once the desk is flipped upright. If your desktop doesn't have pre-drilled keypad holes, refer to the Optional

#### Desktop Drilling Instructions on the back page.


- **A.** Align the keypad mounting holes with the pre-drilled holes in the desktop.
- **B.** Being careful not to overtighten the screws to avoid stripping (especially if using a drill to insert the screws), attach the keypad to the desktop with two #10×5/8" wood screws provided with your desk and labeled H14.

**Note:** If your desktop doesn't have pre-drilled keypad holes, refer to the Optional Desktop Drilling Instructions on the back page.

#### Step 2 – Perform Desk Reset Procedure

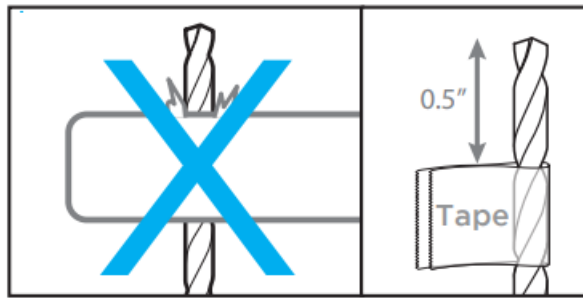

**IMPORTANT:** Before using your desk, perform the following Desk Reset to ensure the desk legs are calibrated properly after assembly.

- **A.** Hold the DOWN button until the desk reaches its lowest height and then release the button.
- **B.** Press and hold the DOWN button again for up to 15 seconds until the keypad display shows , , then release the button.
- **C.** Press and hold the DOWN button again until the desk lowers slightly then rises slightly. Release the button. If the desk didn't move, try the reset procedure again.
- **D.** Your desk is now ready for use!

### Step 3 – Keypad Settings & Programming

Scan the QR code or visit




<https://www.upliftdesk.com/desk-assembly-and-programming/> to see Settings and Programming instructions.

### Safety and Warnings

See the Safety and Warnings listed on the assembly instructions included with your desk frame.

Email [support@upliftdesk.com](mailto:support@upliftdesk.com) with questions | ©2022 UPLIFT Desk®. All Rights Reserved

### Documents / Resources

	<p><b><a href="#">UPLIFT DESK FRM001 Advanced Flush Keypad</a></b> [pdf] Instruction Manual FRM001 Advanced Flush Keypad, FRM001, Advanced Flush Keypad, Flush Keypad, Keypad</p>
---	---