

URC TRC-1120 Wi-Fi Remote Control Owner's Manual

Home » URC » URC TRC-1120 Wi-Fi Remote Control Owner's Manual



Total Control TRC-1120 Owner's Manual





Contents

1 TRC-1120 Wi-Fi Remote

Control

- 2 Congratulations!
- 3 Requirements & Compatibility
- 4 Using the TRC-1120
- **5 Using Voice Control**
- 6 Displaying the Setup Menu
- 7 Specifications
- **8 Limited Warranty Statement**
- 9 Documents / Resources
 - 9.1 References

TRC-1120 Wi-Fi Remote Control

Introducing the TRC-1120

Thank you for purchasing URC's TRC-1120 Wi-Fi remote control. Its easy and intuitive use helps to simplify your life while adding control of more things than you thought possible.

Online Support

Total Control is sold direct only and must installed/program by a certified custom integrator.

End-User Support

Visit the **URC Home Page** for product information, owner's manuals, and support contact information.

Contact Support

Total Control is a URC product sold direct only. For questions or assistance contact your Custom Installer/Programmer.

My Installer/Programmer

Technical Support
Toll Free: 800-904-0800

Main: 914-835-4484 techsupport@urc-automation.com Hours: 9:00 am - 5:00 pm EST M -F

Congratulations!

Thank you for purchasing the TRC-1120 Wi-Fi remote control for your Total Control system. The TRC-1120 communicates with your Total Control system via the local wireless network to control devices throughout your home/business.

Use the TRC-1120 to navigate menus, and control your system's audio/video devices, climate, lighting, and more.

Features & Benefits

- Quick Connect Wi-Fi: When woken up, the remote connects to the wireless network (2.4GHz or 5GHz) almost instantly for control of your system and devices.
- Two-way Metadata Feedback: Experience feedback directly on the TRC-1120's 2.0" display when used with an

- ever expanding line of 3rd Party modules such as HEOS, Ecobee, Sonos, Roku and many more. Consult with your certified URC integrator to learn more about compatible 3rd party integration.
- Voice Assistant Ready: Enable the built-in Amazon Alexa service to send commands verbally directly from the remote by pushing the press-to-talk microphone button.
- H264 IP Camera Support: View almost any security camera directly on the TRC-1120's display. The TRC-1120 supports high quality camera streams. Ask your certified URC integrator for further details.

Requirements & Compatibility

- Total Control: The TRC-1120 requires an MRX Advanced System Controller on the network and must be programmed by a certified Total Control integrator.
 - When programmed, the TRC-1120 is capable of controlling devices around the home/business without being within "line-of-sight" of the equipment by sending commands over the wireless (Wi-Fi) network.

Parts



- TRC-1120 Wi-Fi Remote Control
- Li-ion Rechargeable Battery
- · Charging Dock
- Power Adapter
- · USB Type C Cable

Connecting the Battery Pack

A battery is included in the box when shipped from the factory. Press the spring lock down to unlock and remove the cover. Place the battery into the battery compartment, making sure to align the contacts on the battery with the

contacts

within the TRC-1120's battery compartment. The battery snaps into place when aligned properly. Replace the battery cover.

Using the Charging Cradle

Plug the 5V DC adapter into a power outlet and into the rear of the charging cradle. Gently place the TRC-1120 into the cradle, so that the remote automatically aligns itself to the contacts on the charging cradle. The status light immediately illuminates.





It is possible to connect the USB Type C cable directly into the bottom of the TRC-1120. There are three (3) Status light conditions:

- Red: Indicates the the remote's battery is charging
- Blue: Indicates that the remote's battery is off the charging dock
- · White: Indicates that the remote's battery is fully charged

Two-way via Wi-Fi (2.4 GHz or 5GHz)

The TRC-1120 has the capability of providing two-way control of supported devices directly on the 2.0" LCD touch-screen display. These devices must be configured in the Total Control program file. Consult your custom integrator for additional details.

Using the TRC-1120

The Main Menu pages display activities and/or devices. Press the Main button to access the Main Menu. Larger systems may have more than one (1) page. Press either of the Page buttons to view additional Main Menu pages. Although the TRC-1120 is programmed with custom layouts and devices, there are persistent buttons that maintain a steady function:



- A. Power Button: With a single press of this button, the Total Control system turns off all the devices of the current room. Press-n-hold this button for greater than two (2) seconds to display the system's Power Menu. This menu allows the user to turn off the room, the entire system, or any custom activity programmed by the custom integrator.
- B. Microphone: The Microphone can used for Door Station Calls / Ring, Comcast Voice, Apple TV Siri, Voice Assistant (Alexa), and other future voice interactions.
- C. Microphone Status LED: The LED Status indicator will light up whenever the microphone is in use for Ring, Apple TV Siri, Comcast Voice, and Amazon Alexa.
- D. Capacitive Touch Screen: The specific function of each button is linked to the screen icon associated to the LCD screen. These buttons are used to select activities, devices, functions, navigate, and more. Speak with your custom integrator for more details.
- E. Page Left/Right: These buttons are used to navigate through the various Main Menu and Device/Activity Menu pages.
- F. Main: By default, this button will perform the functions that are programmed to go to the Main Menu or Scenes.
- G. Vol+, Vol-, & Mute: Used to increase, decrease, or toggle the mute status of the active audio device...
- H. CH+, CH-, & Prev: Used to change a Cable/Sat channel up or down or to navigate through a device's on-screen menus. The Prev button returns to the device's previous channel or can be used to return the user to a previous menu.



- I. Prev: Returns to the device's previous channel or can be used to return the user to a previous menu.
- J. Mute: Toggles the mute status of the active audio device.
- K. Microphone: Select this button to interact with the native voice assistant service. When pressed, the microphone activates and listens to your verbal commands. The microphone is shut off when the button is no longer pressed.
- L. Navigation Keys: Comprised of up, down, left, and right. These buttons are used to navigate through the menus and/or devices.
- M. Select: Center button of navigation keys, used to confirm selections displayed on a viewing device.
- N. Menu: Displays the on-screen menu of the active device.
- O. Exit: Closes out any open menus or guides on the display or returns to the previous menu.
- P. Speaker: Utilized with Door Station Calls, Button Press Audio and Voice Assistant Replies.



Q. Transport Buttons: These are the available buttons:



Using Voice Control

The TRC-1120 has the capability of using Amazon Alexa Voice Assistant to control programmed activities, devices, and more.

For instructions on how to enable the Alexa Voice service, please refer to page 11.

The TRC-1120 preserves your privacy with a push-to-talk button on the remote control.

This means the Alexa Service is only listening when you want it too.

Custom activities and devices can be controlled via Alexa; however, configuration is required. Speak with your certified URC integrator for more details.



Issuing Voice Commands

Voice Commands can be issued easily and intuitively with the push-to-talk buttonThis button removes the need to say "Alexa...".

Press-n-hold the button and say phrases such as...

- "Turn on bedroom Blu-ray"
- "Turn on living room ESPN"
- "Turn off the kitchen lights"
- And much more...

The TRC-1120 does not support the following Amazon Alexa features:

 
- Audio Playback via Amazon Music, Audible, or other music services.
- Alexa Drop-In, calls, or video calls
- No graphical feedback

Displaying the Setup Menu

The Setup Menu allows users to configure or change certain behaviors of the TRC-1120.




Enter the Setup Menu by pressing and holding the Main and SEL (see image at the right) buttons for greater than five (5) seconds.




- Sleep Timers
- Network
- · Voice Assistant
- Brightness
- System
- User Interface
- Button Light
- Power
- · Date & Time
- Button Beep Level
- Pickup
- · Software Update
- · Factory Default

Sleep Timers

Adjust the amount of time the screen remains on when the remote is not in use. The time can be set independently based on whether the remote is using battery power or sitting on the charging cradle.

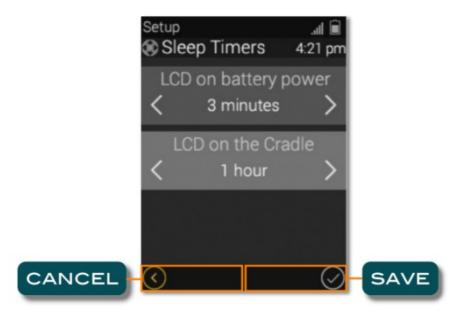


 Once the settings are adjusted, press the Save button. Pressing Cancel reverts the remote to the last saved setting.




Network

The following options are displayed:

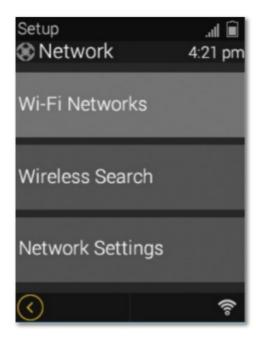


- Wi-Fi Networks: Displays all stored wireless networks. This option allows the user to connect to any network stored on the remote.
- Wireless Search: Select to connect to an available wireless network. SSID and Password may be required.
- Network Settings: Allows the user to configure the remote's network properties such as IP address, Gateway, DNS, and more.

 WARNING! Only use this option when instructed by URC's Technical Support team or your custom install professional.



Voice Assistant


This Settings Menu option allows you to integrate your Total Control system with voice assistant services such as Amazon Alexa.

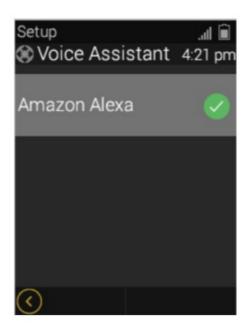



Choose the supported voice assistant service (Amazon Alexa) and follow the on-screen directions.

The Alexa setup menu provides a code that must be entered into the Amazon Alexa URL (displayed on the LCD screen of the TRC-1120).

Once enabled, use the push-to-talk button to control the Total Control system or any other Alexa enabled device.

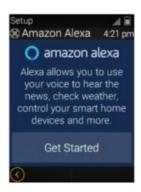

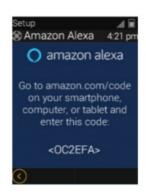

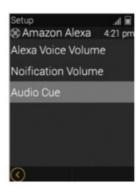


- Alexa Voice Volume: Adjust the volume of the Alexa service on the TRC-1120.
- Notification Volume: Adjust the volume for notification alerts.
- Audio Cue: Enable or disable the audio cue. It provides an audio "chime" that informs the user that the voice service is "listening".


Enabling Alexa

Follow these instructions to enable the Alexa Voice Assistant Service:


1. From the Settings Menu, select Voice Assistant.

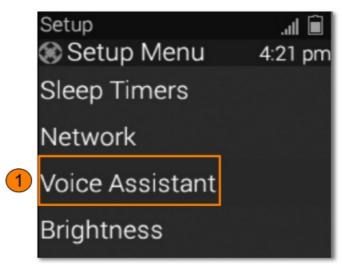

- 2. Select Amazon Alexa.
- 3. Select Get Started.

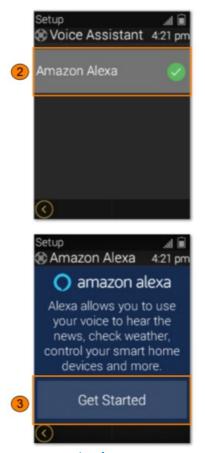

- 4. Open a web browser and navigate to amazon.com/code.
- 5. Enter the code displayed on the TRC-1120.

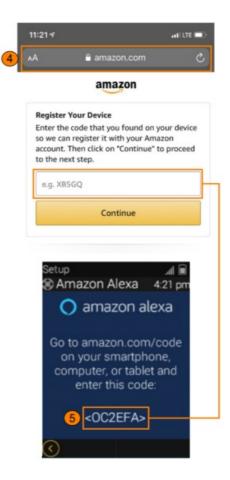


Brightness

Adjust the screen brightness by pressing the adjacent LCD buttons to increase or decrease the brightness level.



 
Once the brightness has been adjusted, press the Save button. Pressing Cancel reverts the remote to the last saved setting.



System

Displays information about the remote's operating system, memory, etc. Press the More button to view further

system information. Pressing the Cancel button exits to the remote's Setup Menu.

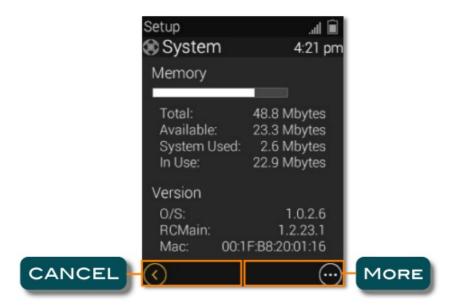


User Interface

The Main Button setting allows you to choose what happens when pressing and holding the Main Button for 2 seconds will jump to. The available options will be the Shortcuts Screen or the Now Playing Screen.


The Flick Navigation gives the option to Enable the swiping of the LCD screen or use hard buttons to navigate the interface or Disable the usage of only hand buttons for navigation of the user interface.

Press/Flick Sensitivity gives the end-user the option to select how sensitive the determination is if they want to flick the LCD or press the button. Pressing this button will open the settings to adjust the value of this feature.

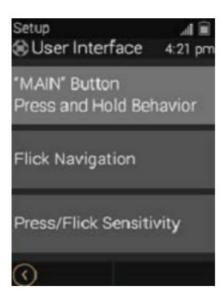

Button Light

Adjust the brightness of the remote's button backlighting. Press the adjacent LCD buttons to increase or decrease the button backlighting.

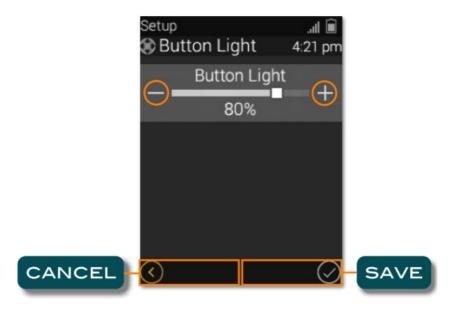


Once the button back light has been adjusted, press the Save button. Pressing Cancel reverts the remote to the last saved setting.



Power

Displays the remote's remaining battery level. Adjust when the "Low Battery" warning screen appears.

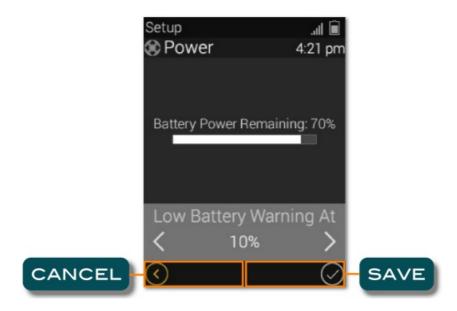


Once the Power settings have been adjusted, press the Save button. Pressing Cancel reverts the remote to the last saved setting.

Date & Time

The remote's date and time settings have been set by your certified custom integrator. If needed, the date and time settings can be manually changed here.

If the system's date and time are adjusted, the Total Control system adopts the new date and time globally.

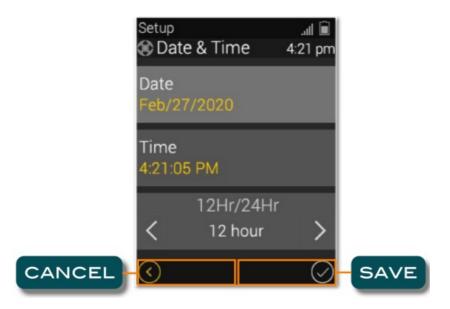

If the advanced system controller is reset, it defaults to the program's default location using the Internet. If Internet is not present, the date and time must be entered manually from a URC interface such as the TRC-1120. Once the date and time settings have been adjusted, press the Save button.

 
Pressing Cancel reverts the remote to the last saved setting.

Button Beep

Adjust the button "beep" of the remote. Press the adjacent LCD buttons to increase or decrease the volume level.





Once the sound has been adjusted, press the Save button. Pressing Cancel reverts the remote to the last saved setting.



Pickup

 
Turn on or off the remote's pickup sensor. When enabled, the TRC-1120 turns on when the remote is picked up. Select Yes (turn on) or No (turn off).

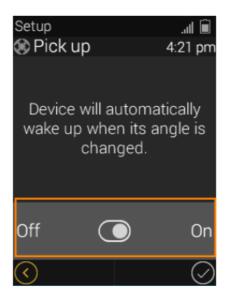




Software Update

URC's system has the ability to be programmed by a certified URC programmer remotely (after initial installation). There may be situations where the device may need to have the software update applied manually. Select this option only when instructed by your certified URC integrator or URC's Technical Support Team.

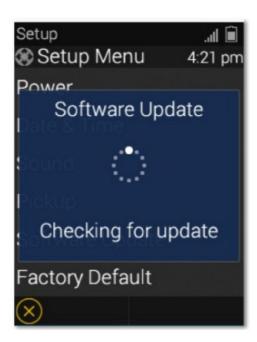

Factory Default

Resets the memory of the TRC-1120 to the factory settings. All existing programming is erased. The device requires reconfiguration by your certified URC integrator.

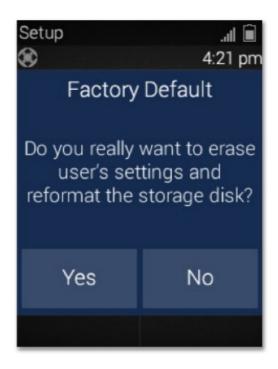

WARNING! Only use this button when instructed by URC's Technical Support team.

Specifications

These are the technical specifications for the TRC-1120: Microprocessor: ARM Cortex-A35 Core 1.5GHz x 4

RAM: 8GB eMMC, DDR3 256MB RAM

LCD: 2.0" TFT-LCD, 262K Colors, Backlight By LED

Touch Window: Capacitive Touch

Sound: Mono, 1 watt

Wi-Fi: IEEE 802.11a/b/g/n/ac

RF Output Power: 2.4 GHz, 5 GHz band: 6.9 dBm +/- 1 dB

Frequency Range: 2412 MHz ~ 2462MHz, 5150 MHz ~ 5350 MHz,5470 MHz ~ 5725 MHz

Battery: Lithium Polymer, 3.7V, 2000mAh, 7.4Wh

Battery Charging Time: 3 Hours

Power: 5.0V - 2.0A

Operating Temperature: 0~40°C (non-condensing)

Size: 7.87in x 1.63in x .82in Weight (with battery loaded): 4.6oz

Limited Warranty Statement

https://www.urc-automation.com/legal/warranty-statement/

End User Agreement

The terms and conditions of the End User Agreement available at https://www.urc-automation.com/legal/end-user-agreement/ shall apply.

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This device must not be co-located or operating in conjunction with any other antenna or transmitter.

Supplier's Declaration of Conformity 47 CFR 2.1077 Compliance Information Unique Identifier: URC Inc., TRC-1120 Responsible Party – U.S. Contact Information URC Inc.

500 Mamaroneck Ave Harrison, NY 10528 914-835-4484

> Notified Body TÜV Rheinland LGA Products GmbH 1 filystraße 2 90431 Nürnbe notified by the under No. 0197 **EU-Type Examination Certificate** ning of Annex III Module B of the 2014/53/EU Radio Equipment for compliance with the essential requirements of this directive Evaluation Report Nr.: 50286386 001 Summit Technology, Inc. 612 130, Digitai-ro, Geumcheon-gu Republic of Korea Radio Equipment (Remote Controller) presented by the manufacturer according to Annex III Module B of the Directive. As far as the es-sential requirements indicated, the Notified Body of TÜV Rheinland LGA Products GmbH confirm that the technical design of the apparatus meets the esse that the technical design of the apparatus the Directive 2014/53/EU Article 3.
>
> This certificate consists of this page and Annex I.
>
> Validity of the certificate is specified in the Annex I. 10.09.2019

Regulatory Information to the User

- CE conformity Notice Products with "CE" marking comply EMC Directive 2014/30/EU issued by the commission
 of the European Community.
 - 1. EMC Directive
- Emission
- Immunity
- Power
- Declaration of Conformity
 "Hereby, Universal Remote Control Inc. declares that this TRC-1120 is in compliance with the Essential requirements."

Importer & Manufacturer

Importer:

Universal Remote Control, Inc.

500 Mamaroneck Ave

Harrison, NY 10528

· Manufacturer:

OHSUNG ELECTRONICS CO., LTD.

#181 Gongdan-Dong, Gumi, Gyeongbuk Republic of Korea

Rechargeable Lithium Polymer Battery Precautions & Information

- If you will not be using your remote control for an extended period of time, please remove the battery.
- Do not attempt to disassemble, alter, or apply heat to the battery.
- Use care to avoid dropping the battery or subjecting it to severe impact that could damage it.
- The battery should not be immersed in water.
- Risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the instructions.
- Lithium Polymer batteries are recyclable. For information on local drop-off site, please visit <u>www.rbrc.com</u> or call toll free 1-800-822-8837.



Documents / Resources



<u>URC TRC-1120 Wi-Fi Remote Control</u> [pdf] Owner's Manual TRC-1120, TRC-1120 Wi-Fi Remote Control, Wi-Fi Remote Control, Remote Control

References

User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.