




Universal Remote Easy Clicker UR2-211 Manual and Codes

[Home](#) » [URC](#) » Universal Remote Easy Clicker UR2-211 Manual and Codes 

USER MANUAL

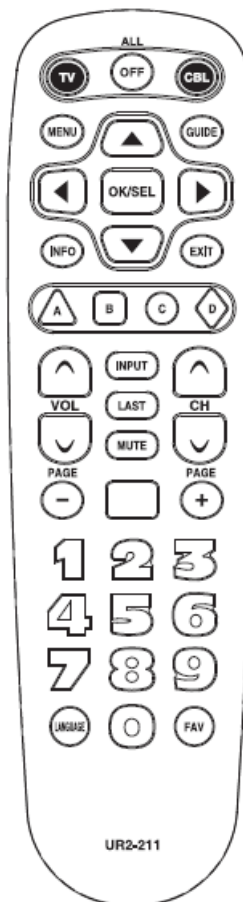

**Universal Remote
Easy Clicker UR2-211**

Contents

- 1 1. Introduction
- 2 2. Replacing Batteries
- 3 3. Button Functions
- 4 4. Programming the Remote Control
 - 4.1 A. Quick Set-Up Method
 - 4.2 B. Quick Set-up Code Tables
 - 4.3 C. Manual Programming
 - 4.4 D. Auto Search Method
 - 4.5 E. Programming the All Off Button
 - 4.6 F. Programming Volume Control
 - 4.7 G. Programming Channel Control
 - 4.8 H. Memory Lock System
- 5 5 Related Posts

1. Introduction

This remote control is designed to operate most Digital, Analog Cable boxes, IPTV set top boxes and TVs.


2. Replacing Batteries

Before you program or operate the remote control, you must install two new AA alkaline batteries.


STEP-1: Remove the battery compartment cover from the back of your remote control.

STEP-2: Check battery polarity carefully, and install the batteries as shown in the illustration below.

STEP-3: Replace the battery compartment cover.

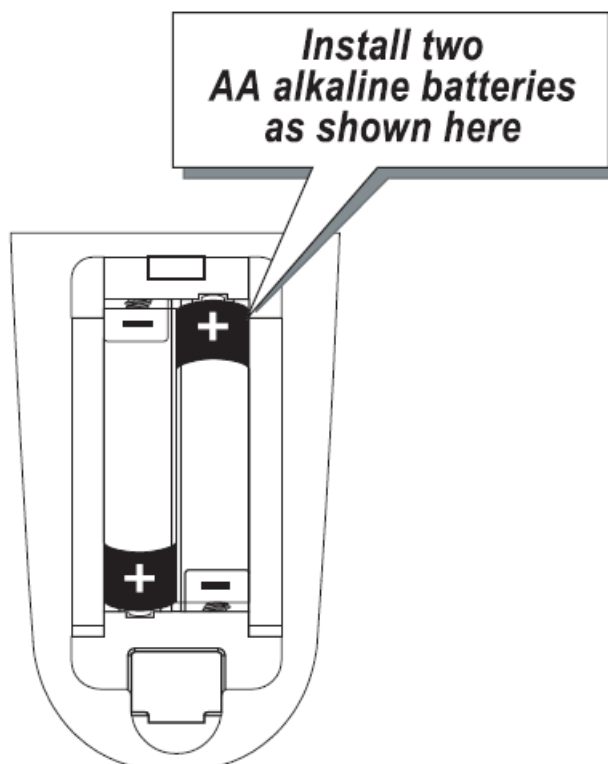

3. Button Functions

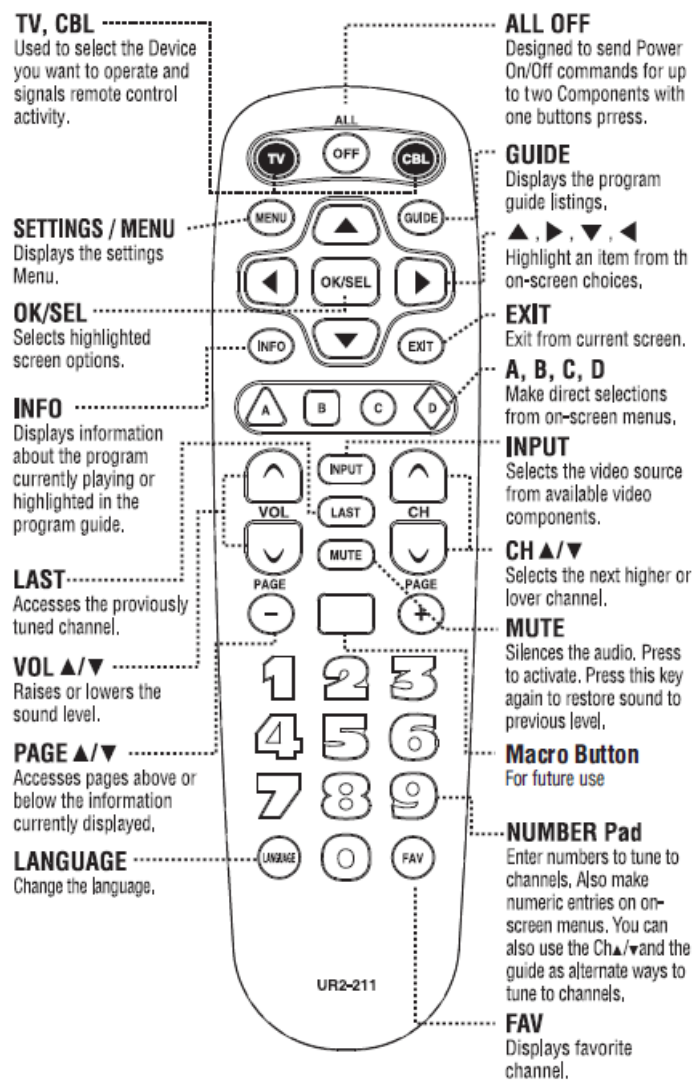

4. Programming the Remote Control

***Note :** In this section, when you are instructed to press a [DEVICE] button, that means you should press either the CBL or TV button, depending on which device you are programming the remote to operate.

A. Quick Set-Up Method

(Refer to the Section B Quick Set-up table of codes)

STEP-1: Turn on the component you want to program. To program your TV, turn on the TV.

STEP-2: Press and hold the [DEVICE] key for 5 seconds until the Device LED will blink once and stays on. Continue to hold the [DEVICE] key and press the number key assigned to your brand in the Quick Setup Code Table and release both [DEVICE] key and the number key to save the code. The Device LED will blink twice to confirm that the code is stored.

STEP-3: Point the remote control at the component.

STEP-4: Press the power button. If it turns off, it is programmed for your component. If it does not turn off, use the Pre-Programmed 3-Digit code Method or Scanning Method. Repeat the steps above for all components (CBL,

TV).

B. Quick Set-up Code Tables

CBL

Quick Number	Manufacturer/Brand
0	PACE DTA
1	SA/CISCO, SAMSUNG, PACE DIGITAL
2	MOTOROLA DIGITAL
3	MOTOROLA DTA
4	EVOLUTION DTA
5	CISCO IPTV
6	ADB IPTV
7	TECHNICOLOR
8	AMINO 140/540 IPTV
9	MOTOROLA IPTV

TV

Quick Number	Manufacturer/Brand
0	SANYO
1	SONY
2	SAMSUNG
3	LG
4	TOSHIBA
5	PANASONIC
6	PHILIPS
7	HITACHI
8	SHARP
9	VIZIO

C. Manual Programming

The remote control can be programmed by entering a three-digit code number that corresponds to particular brands and models of equipment. The three digit code numbers are listed in the code tables sections of this instruction manual.

STEP-1: Turn on the equipment that you want the remote control to operate (Cable Box or TV).

STEP-2: Press the [DEVICE] button and the [OK/SEL] button simultaneously for 3 seconds. The corresponding device LED will turn on indicating that it is ready to be programmed. The LED will remain on for 30 seconds. The next step must be entered while the LED is on.

STEP-3: Point the remote control toward the equipment and enter the three-digit code number assigned to your brand from the code tables.

If there are more than one three-digit number listed for your brand, try one code number at a time until your equipment turns off.

***Note:** You can verify that you have selected the correct code by pressing the [POWER] button. The equipment should turn back on. Then try all of the functions on the remote control (i.e. volume, mute, etc.) to ensure you have the correct code. If any of the functions do not operate as they should, repeat the instructions from STEP 3 above using the next three digit code number from the brand list.

STEP-4: Store the three-digit code by pressing the same [DEVICE] button once again. The device LED will blink twice to confirm that the code has been stored.

D. Auto Search Method

If none of the three digit code numbers assigned to your brand of equipment works, or the code table does not list your brand, you can use the Auto Search Method to find the correct three-digit code number for your equipment by following steps:

STEP-1: Turn on the equipment that you want the remote control to operate (Cable Box or TV).

STEP-2: Press the [DEVICE] button and the [OK/SEL] button simultaneously for 3 seconds. The device LED will turn on indicating that it is ready to be programmed. The LED will remain on for 30 seconds. The next step must be entered while the LED is on.

STEP-3: Press the [CH5] or [CH6] button one at a time or keep it pressed. The remote will emit a series of Power ON/OFF code signals. Release the [CH5] or [CH6] button as soon as the equipment turns off.

***Note:** You can verify that you have selected the correct code by pressing the [POWER] button. The equipment should turn back on. Then try all of the functions on the remote control (i.e. volume, mute, etc.) to ensure you have the correct code. If any of the functions do not operate as they should, repeat the instructions from STEP 3 above to continue the Auto Search Method.

STEP-4: Press the same [DEVICE] button to store the code. The Device LED will blink twice to confirm that the code has been stored.

E. Programming the All Off Button

This allows you to program the All Off button so it can send up to two power On/Off commands with one button press.

STEP-1: Press the [CBL] button.

STEP-2: Press the [All OFF] button and the [OK/SEL] button simultaneously for 3 seconds. The [CBL] button will turn on for 30 seconds.

STEP-3: Press the first [Device] button you want to store in the [ALL OFF] button and then the [POWER] button. Repeat this for other Device until you have stored all the desired power commands into the [ALL OFF] button.

STEP-4: Press the [CH5] button to save the power commands you stored. The [CBL] button will blink twice to confirm the Device have been saved.

F. Programming Volume Control

By default, the VOL+, VOL- and MUTE keys operate through your TV. If you would like those keys to operate those functions on a different device, follow these steps.

STEP-1: Press the [OK/SEL] button and [CBL] button simultaneously for 3 seconds. The device LED will turn on for 30 seconds. The next step must be performed while the LED is on.

STEP-2: Press the [VOL+] button. The device LED will blink.

STEP-3: Press the [DEVICE] button corresponding to the device that you would like the volume and mute buttons to control. The device LED will blink twice to confirm the programming.

***Note:** If you wish to have the volume and mute keys operate your Cable Box, press the [CBL] button in Step 3.

G. Programming Channel Control

By default, the CH5, CH6 keys operate through your Cable Box. If you would like those keys to operate those functions on a different device, follow these steps.

STEP-1: Press the [OK/SEL] button and [CBL] button simultaneously for 3 seconds. The device LED will turn on for 30 seconds. The next step must be performed while the LED is on.

STEP-2: Press the [VOL-] button. The device LED will blink.

STEP-3: Press [TV] button. The device LED will blink twice to confirm the programming.

***Note:** If you wish to have the channel keys operate your Cable Box, press the [CBL] button instead of the [TV] button in Step 3.

H. Memory Lock System

This remote control is designed to retain programmed memory for 10 years — even after batteries are removed from the remote control. For additional information about your remote control, go to www.universalremote.com

Click Here to Read ... [Setup Code](#)

[Universal-Remote-Easy-Clicker-UR2-211-Manual-Optimized PDF](#)

[Universal-Remote-Easy-Clicker-UR2-211-Manual-Original PDF](#)

Questions about your Manual? Post in the comments!