




Universal Remote Easy Clicker UR3L-SR4 Manual and Codes

[Home](#) » [URC](#) » Universal Remote Easy Clicker UR3L-SR4 Manual and Codes 

USER MANUAL

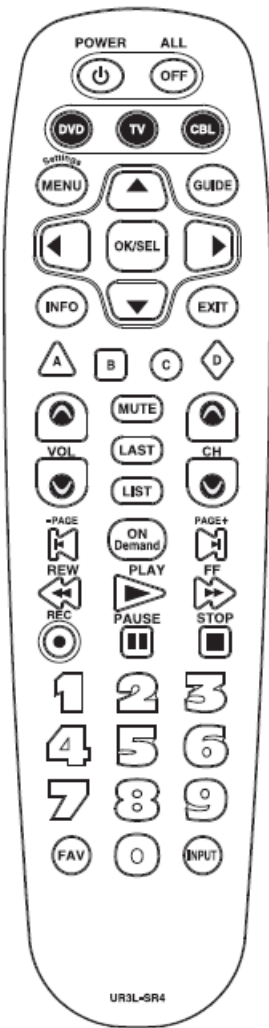

Universal Remote
Easy Clicker UR3L-SR4

Contents

- 1 1. Introduction
- 2 2. Replacing Batteries
- 3 3. Button Functions
- 4 4. Programming the Remote Control
- 5 A. Quick Set-Up Method
- 6 B. Quick Set-up Code Tables
- 7 C. Manual Programming
- 8 D. Auto Search Method
- 9 E. To find the Three-Digit Code that Was Programmed using the Auto Search Method
- 10 F. Programming a Second TV to the DVD Button
- 11 G. The Learning Method
- 12 H. Erasing a Single Learned Command
- 13 I. Erasing All Learned Commands from One Device
- 14 J. Programming the All Off Button
- 15 K. Programming for Advanced Functions.
- 16 L. Programming Volume Control
- 17 M. Programming Channel Control
- 18 N. Low Battery Warning
- 19 O. Memory Lock System.
- 20 Related Posts

1. Introduction

This remote control is designed to operate most IPTV and DTA STBs as well as Digital and Analog Cable Boxes.

2. Replacing Batteries


Before you program or operate the remote control, you must install two new AAA alkaline batteries.

STEP-1: Remove the battery compartment cover from the back of your remote control.

STEP-2: Check battery polarity carefully, and install the batteries as shown in the illustration below.

STEP-3: Replace the battery compartment cover.

**Install two
AAA alkaline batteries
as shown here**

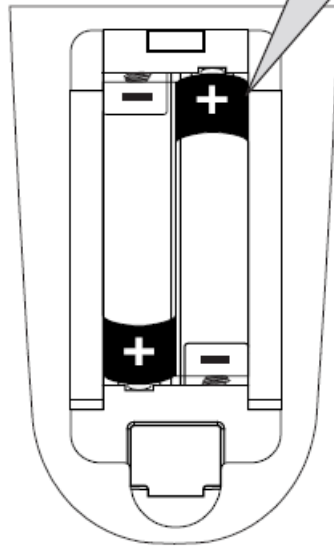

3. Button Functions

<p>POWER Allows you to turn TV, DVD and Set top box On and Off.</p> <p>CBL, TV, DVD Used to select the Device you want to operate and signals remote control activity.</p> <p>SETTINGS / MENU Displays the settings Menu.</p> <p>OK/SEL Selects highlighted screen options.</p> <p>INFO Displays information about the program currently playing or highlighted in the program guide.</p> <p>LAST Accesses the previously tuned channel.</p> <p>VOL ▲/▼ Raises or lowers the sound level.</p> <p>LIST Displays a list of programs you have recorded, allowing you to select one for viewing.</p> <p>VCR/DVD-VOD KEYS Perform standard VCR and DVD functions when in DVD mode, and Video On Demand functions when in VOD mode.</p> <p>FAV Displays favorite channels.</p>	<p>ALL OFF Designed to send Power On/Off commands for up to three Components with one buttons prress.</p> <p>GUIDE Displays the program guide listings. ▲, ▢, ▼, ◀ Highlight an item from the on-screen choices.</p> <p>EXIT Exit from current screen.</p> <p>A, B, C, D Make direct selections from on-screen menus.</p> <p>MUTE Silences the audio. Press to activate. Press this key again to restore sound to previous level.</p> <p>CH ▲/▼ Selects the next higher or lower channel.</p> <p>ON Demand Provides direct access to On Demand channel.</p> <p>PAGE ▲/▼ Accesses pages above or below the information currently displayed.</p> <p>NUMBER Pad Enter numbers to tune to channels. Also make numeric entries on on-screen menus. You can also use the CH▲/▼ and the guide as alternate ways to tune to channels.</p> <p>INPUT Selects the video source from available video components.</p>
----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

4. Programming the Remote Control

***Note :** In this section, when you are instructed to press a [DEVICE] button, that means you should press either the CBL, TV, or DVD button, depending on which device you are programming the remote to operate.

A. Quick Set-Up Method

STEP-1: Turn on the component you want to program. To program your TV, turn on the TV.

STEP-2: Press and hold the [DEVICE] key for 5 seconds until the Device LED will blink once and stays on. Continue to hold the [DEVICE] key and press the number key assigned to your brand in the Quick Setup Code Table and release both [DEVICE] key and the number key to save the code. The Device LED will blink twice to confirm that the code is stored.

STEP-3: Point the remote control at the component.

STEP-4: Press the power button. If it turns off, it is programmed for your component. If it does not turn off, use the Pre- Programmed 3-Digit code Method or Scanning Method. Repeat the steps above for all components. (CBL, TV, DVD).

B. Quick Set-up Code Tables

CBL

Quick Number	Manufacturer/Brand
0	PACE DTA
1	SA/CISCO, SAMSUNG, PACE DIGITAL
2	MOTOROLA DIGITAL
3	MOTOROLA DTA
4	EVOLUTION DTA
5	CISCO IPTV
6	ADB IPTV
7	TECHNICOLOR
8	AMINO 140/540 IPTV
9	MOTOROLA IPTV

TV

Quick Number	Manufacturer/Brand
0	SANYO
1	SONY
2	SAMSUNG
3	LG
4	TOSHIBA
5	PANASONIC
6	PHILIPS
7	HITACHI
8	SHARP
9	VIZIO

DVD

Quick Number	Manufacturer/Brand
0	HITACHI
1	SONY
2	PHILIPS
3	SAMSUNG
4	PHILIPS MAGNAVOX
5	PANASONIC
6	LG
7	JVC
8	DENON
9	PIONEER

C. Manual Programming

The remote control can be programmed by entering a three-digit code number that corresponds to particular brands and models of equipment. The three digit code numbers are listed in the code tables sections of this instruction manual.

STEP-1: Turn on the equipment that you want the remote control to operate (Cable Box, TV or DVD) .

STEP-2: Press the [DEVICE] button and the [OK/SEL] button simultaneously for three seconds. The corresponding device LED will turn on indicating that it is ready to be programmed. The LED will remain on for 30 seconds. The next step must be entered while the LED is on.

STEP-3: Point the remote control toward the equipment and enter the three-digit code number assigned to your brand from the code tables. If there are more than one three-digit number listed for your brand, try one code

number at a time until your equipment turns off.

***Note:** You can verify that you have selected the correct code by pressing the [POWER] button. The equipment should turn back on. Then try all of the functions on the remote control (i.e. volume, mute, etc.) to ensure you have the correct code. If any of the functions do not operate as they should, repeat the instructions from STEP 3 above using the next three digit code number from the brand list.

STEP-4: Store the three-digit code by pressing the same [DEVICE] button once again. The device LED will blink twice to confirm that the code has been stored.

D. Auto Search Method

If none of the three digit code numbers assigned to your brand of equipment works, or the code table does not list your brand, you can use the Auto Search Method to find the correct three-digit code number for your equipment by following steps:

STEP-1: Turn on the equipment that you want the remote control to operate (Cable Box, TV or DVD).

STEP-2: Press the [DEVICE] button and the [OK/SEL] button simultaneously for three seconds. The device LED will turn on indicating that it is ready to be programmed. The LED will remain on for 30 seconds. The next step must be entered while the LED is on.

STEP-3: Press the [CH5] or [CH6] button one at a time or keep it pressed. The remote will emit a series of Power ON/OFF code signals. Release the [CH5] or [CH6] button as soon as the equipment turns off.

***Note:** You can verify that you have selected the correct code by pressing the [POWER] button. The equipment should turn back on. Then try all of the functions on the remote control (i.e. volume, mute, etc.) to ensure you have the correct code. If any of the functions do not operate as they should, repeat the instructions from **STEP 3** above to continue the Auto Search Method.

STEP-4: Press the same [DEVICE] button to store the code. The Device LED will blink twice to confirm that the code has been stored.

E. To find the Three-Digit Code that Was Programmed using the Auto Search Method

STEP-1: Press the appropriate [DEVICE] button and the [OK/SEL] button simultaneously for three seconds. The device LED will turn on for 30 seconds. The next step must be performed while the LED is on.

STEP-2: Press the [INFO] button. The device LED will blink a number of times indicating the number of each digit for the code. Each digit is separated by a one second interval of the LED being off.

Example : One blink, then three blinks, then eight blinks indicates the code number 138.

***Note :** Ten blinks indicates the number 0.

F. Programming a Second TV to the DVD Button

STEP-1: Press the [DVD] button and the [OK/SEL] button simultaneously for 3 seconds. The DVD LED will turn on for 30 seconds. The next step must be performed while the LED is on.

STEP-2: Press the [TV] button.

STEP-3: Point the remote control toward the TV and enter the three-digit code for your TV from the TV codes table.

STEP-4: Store the three-digit code by pressing the [DVD] button. The device LED will blink twice to confirm that the code has been stored.

G. The Learning Method

STEP-1: Press the [Device] button (CBL, TV or DVD) to be programmed and the [INPUT] buttons simultaneously for 3 seconds until the Device LED light turns on.

STEP-2: Line up the UR3L-SR4 to the other remote, head-to-head, 1 or 2 inches apart.

STEP-3: Press any button on the UR3LSR4 that you want to teach a command to. For example, if you want to teach the [MUTE] button, press the [MUTE] button.

STEP-4: Press and hold the [MUTE] button on the other remote until the UR3L-SR4 Device LED light blinks twice.

***Note :** The LED will blink 5 times if there was an error in the learning process. In so, repeat STEPS 3 and 4. Continue learning other buttons by repeating STEPS 3 and 4.

STEP-5: Once you have completed teaching UR3L-SR4 all desired commands for that Device, save the learned commands by pressing the [Device] and [INPUT] buttons simultaneously until the Device LED blinks 3 times. Now test all the buttons to make sure they learned correctly.

H. Erasing a Single Learned Command

STEP-1: Press the [Device] and [INPUT] buttons simultaneously for 3 seconds until the Device LED light turns on.

STEP-2: Press and hold the button you want to erase for 3 seconds. The Device LED will blink twice to confirm the erasure.

STEP-3: To exit, press and hold both the [Device] and [INPUT] buttons simultaneously until the Device LED blinks 3 times.

I. Erasing All Learned Commands from One Device

STEP-1: Press the [DEVICE] and [INPUT] buttons simultaneously for 3 seconds until the Device LED light turns on.

STEP-2: Press and hold both the [DEVICE] button you want to erase and the [PAUSE] button for 5 seconds. The Device LED will blink twice to confirm the erasure.

STEP-3: To exit, press and hold both the [DEVICE] and [INPUT] buttons simultaneously until the Device LED blinks 3 times.

J. Programming the All Off Button

This allows you to program the All Off button so it can send up to three power On/Off commands with one button press.

STEP-1: Press the [CBL] button.

STEP-2: Press the [All OFF] button and the [OK/SEL] button simultaneously for 3 seconds. The [CBL] button will turn on for 30 seconds.

STEP-3: Press the first [Device] button you want to store in the [ALL OFF] button and then the [POWER] button. Repeat this for other Device until you have stored all the desired power commands into the [ALL OFF] button.

STEP-4: Press the [CH5] button to save the power commands you stored. The [CBL] button will blink twice to confirm the Device have been saved.

K. Programming for Advanced Functions.

If your remote model has custom programmable Macro buttons available, they can be programmed to act as a 'Macro' or Favorite Channel button in CABLE mode. This allows you to program up to five 2-digit channels, four 3-digit channels or three 4-digit channels that can be accessed With one button press.

***Note :** The FAV button is not programmable if you have a Digital Cable Box made by Pace, Pioneer or CISCO/SA.

STEP-1: Press the [CBL] button to select the CBL mode. STEP2 Press the [MACRO] button and [OK/SEL] button simultaneously for 3 seconds. The [CBL] button will turn on for 30 seconds.

STEP-3: Enter the the 2, 3 or 4-digit code for the channel you want programmed first (for example, 007) using the Number Pad, then press the [STOP] button. Then enter the code for the next channel (for example, 050), then press the [STOP] button. Repeat this process for the third channel. The [CBL] button will blink once for each channel entered.

STEP-4: Press the [CH5] button to store the channels that were selected. The [CBL] button will blink twice to confirm the storage of commands.

To access the programmed channels, press the [MACRO] button once. This will bring up the first channel. Press once again and it will bring up the second channel. Press again and it will bring up the third channel.

To erase the Macro programming and return to the original function:

STEP-1: Press the [CBL] button to select the CABLE mode.

STEP-2: Press a [MACRO] button and the [OK/SEL] button simultaneously for 3 seconds. The CBL device LED will turn on for 30 seconds. The next step must be performed while the LED is on.

STEP-3: Press the [CH5] button to erase the functions stored in the button. The CBL device LED will blink twice to confirm that the memory button has been erased.

L. Programming Volume Control

Volume and Mute control are factory programmed to automatically transfer to the respective Device mode you select, as follows:

CBL : TV TV : TV DVD : TV

If you wish to store the Cable volume control in CBL mode, use the following steps.

STEP-1: Press the [OK/SEL] button and [CBL] button simultaneously for three seconds. The device LED will turn on for 30 seconds. The next step must be performed while the LED is on.

STEP-2: Press the [VOL5] button. The device LED will blink. STEP3 Press [CBL] button. The device LED will blink twice to confirm the programming.

Note : To return CBL device to TV volume repeat steps above replacing [CBL] with [TV] in Step 3.

M. Programming Channel Control

Channel controls are factory-programmed to automatically transfer to the respective Device mode you select, as follows:

CBL : CBL TV : CBL DVD : DVD

If you wish to store the TV channel controls in TV mode, use the following steps.

STEP-1: Press the [OK/SEL] button and [TV] button simultaneously for three seconds. The device LED will turn on for 30 seconds. The next step must be performed while the LED is on.

STEP-2: Press the [VOL6] button. The device LED will blink.

STEP-3: Press [TV] button. The device LED will blink twice to confirm the programming.

Note : To return TV device to CBL channel repeat steps above replacing [TV] with [CBL] in Step 3.

N. Low Battery Warning

When the battery is low (2.3V-2.0V) and needs to be replaced with fresh batteries, device LED will blink 2 times in sequence whenever a [DEVICE] button is pressed to turn on equipment.

O. Memory Lock System.

This remote control is designed to retain programmed memory for 10 years — even after batteries are removed from the remote control. For additional information about your remote control, go to www.universalremote.com

Click Here To Read... [“Setup Codes” PDF](#)

[Universal-Remote-Easy-Clicker-UR3L-SR4-Manual-Optimized PDF](#)

[Universal-Remote-Easy-Clicker-UR3L-SR4-Manual-Original PDF](#)

Questions about your Manual? Post in the comments!