



URC UR2-211 Universal Remote Easy Clicker User Guide

[Home](#) » [URC](#) » URC UR2-211 Universal Remote Easy Clicker User Guide 

Contents

- 1 URC UR2-211 Universal Remote Easy Clicker**
- 2 Introduction**
- 3 Replacing Batteries**
 - 3.1 STEP1**
 - 3.2 STEP2**
 - 3.3 STEP3**
- 4 Button Functions**
- 5 Programming the Remote Control**
- 6 A Quick Set Up Method**
 - 6.1 STEP 1**
 - 6.2 STEP2**
 - 6.3 STEP 3**
 - 6.4 STEP 4**
- 7 Quick Set up Code Table**
 - 7.1 CBL**
- 8 TV**
- 9 MANUAL PROGRAMMING**
 - 9.1 STEP 1**
 - 9.2 STEP 2**
 - 9.3 STEP 3**
 - 9.4 STEP 4**
- 10 Auto Search Method**
 - 10.1 STEP1**
 - 10.2 STEP 2**
 - 10.3 STEP 3**
- 11 PROGRAMMING OF ALL BUTTONS**
 - 11.1 STEP 1**
 - 11.2 STEP 2**
 - 11.3 STEP 3**
 - 11.4 STEP 4**
- 12 PROGRAMMING VOLUME CONTROL**
 - 12.1 STEP 1**
 - 12.2 STEP 2**
 - 12.3 STEP 3**
- 13 PROGRAMMING CHANNEL CONTROL**
 - 13.1 STEP1**
 - 13.2 STEP 2**
 - 13.3 STEP 3**
- 14 MEMORY LOCK SYSTEM**
- 15 Set up Code Tables**
 - 15.1 CBL**
- 16 TV**
- 17 Documents / Resources**
 - 17.1 References**
- 18 Related Posts**



URC UR2-211 Universal Remote Easy Clicker



Introduction

This remote control is designed to operate most Digital, Analog Cable boxes, IPTV set top boxes and TVs.

Replacing Batteries

Before you program or operate the remote control, you must install two new AA alkaline batteries.

STEP1


Remove the battery compartment cover from the back of your remote control.

STEP2


Check battery polarity carefully, and install the batteries as shown in the illustration below.

STEP3

Replace the battery compartment cover.

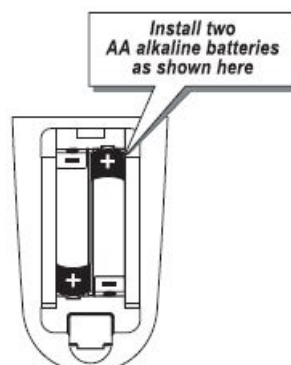

Button Functions

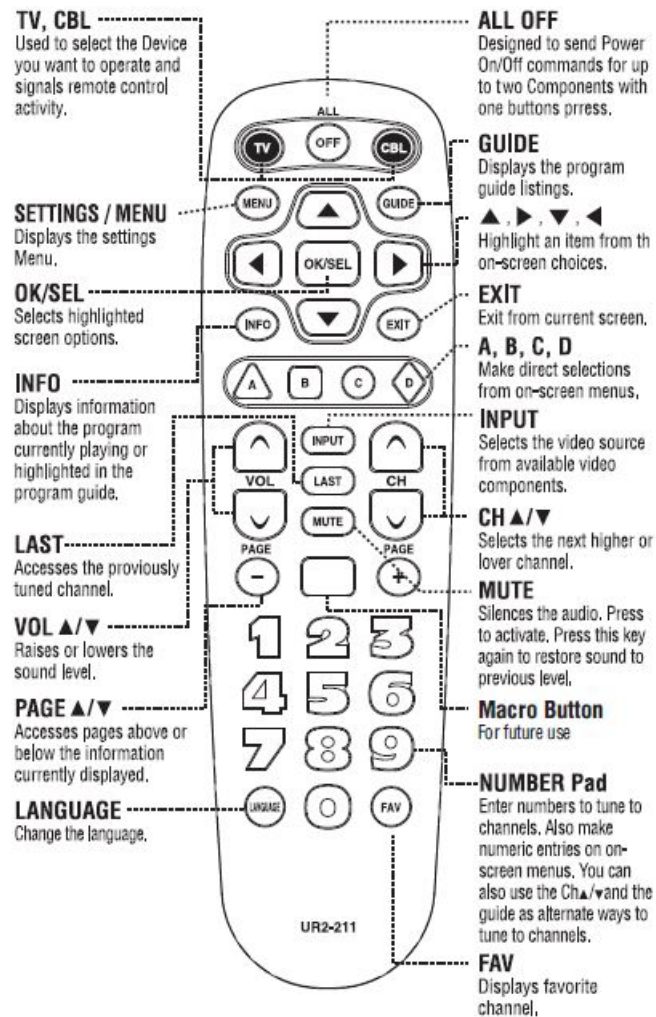

Programming the Remote Control

Note

When you are instructed to press a [DEVICE] button, that means you should press either the CBL or TV button, depending on which device you are programming the remote to operate.

A Quick Set Up Method

Set up table of codes

STEP 1

Turn on the component you want to program. To program your TV, turn on the TV.

STEP 2

Press and hold the DEVICE key for 5 seconds until the Device LED will blink once and stays on. Continue to hold the [DEVICE] key and press the number key assigned to your brand in the Quick Set up Code Table and release both [DEVICE] key and the number key to save the code. The Device LED will blink twice to confirm that the code is stored.

STEP 3

Point the remote control at the component.

STEP 4

Press the power button. If it turns off, it is programmed for your component. If it does not turn off, use the Pre-Programmed 3-Digit code Method or Scanning Method. Repeat the steps above for all components (CBL, TV).

Quick Set up Code Table

CBL

Quick Number	Manufacturer/Brand
0	PACE DTA
1	SA/CISCO, SAMSUNG, PACE DIGITAL
2	MOTOROLA DIGITAL
3	MOTOROLA DTA
4	EVOLUTION DTA
5	CISCO IPTV
6	ADB IPTV
7	TECHNICOLOR
8	AMINO 140/540 IPTV
9	MOTOROLA IPTV

TV

Quick Number	Manufacturer/Brand
0	SANYO
1	SONY
2	SAMSUNG
3	LG
4	TOSHIBA
5	PANASONIC
6	PHILIPS
7	HITACHI
8	SHARP
9	VIZIO

MANUAL PROGRAMMING

The remote control can be programmed by entering a three-digit code number that corresponds to particular brands and models of equipment. The three-digit code numbers are listed in the code tables.

STEP 1

Turn on the equipment that you want the remote control to operate Cable Box or TV.

STEP 2

Press the DEVICE button and the OK/SEL button simultaneously for 3 seconds. The corresponding device LED will turn on indicating that it is ready to be programmed. The LED will remain on for 30 seconds. The next step must be entered while the LED is on.

STEP 3

Point the remote control toward the equipment and enter the three digit code number assigned to your brand from the code tables. If there are more than one three-digit number listed for your brand, try one code number at a time until your equipment turns off.

Note

You can verify that you have selected the correct code by pressing the POWER button. The equipment should turn back on. Then try all of the functions on the remote control i.e. volume, mute, etc to ensure you have the correct code. If any of the functions do not operate as they should repeat .

STEP 4

Store the three digit code by pressing the same DEVICE button once again. The device LED will blink twice to confirm that the code has been stored.

Auto Search Method

None of the three digit code numbers assigned to your brand of equipment works, or the code table does not list your brand, you can use the Auto Search Method to find the correct three digit code number for your equipment by following steps

STEP1

Press on the equipment that you want the remote control to operate Cable Box or TV.

STEP 2

Press the DEVICE button and the OK/SEL button simultaneously for 3 seconds. The device LED will turn on indicating that it is ready to be programmed. The LED will remain on for 30 seconds. The next step must be entered while the LED is on.

STEP 3

Press the CH5 or CH6 button one at a time or keep it pressed. The remote will emit a series of Power ON/OFF code signals. Release the [CH5] or CH6 button as soon as the equipment turns off.

Note

You can verify that you have selected the correct code by pressing the POWER button. The equipment should

turn back on. Then try all of the functions on the remote control i.e. volume, mute, etc to ensure you have the correct code. If any of the functions do not operate as they should, repeat The Device LED will blink twice to confirm that the code has been stored.

PROGRAMMING OF ALL BUTTONS

This allows you to program the All Off button so it can send up to two power On/Off commands with one button press.

STEP 1

Press the CBL button.

STEP 2

Press the All OFF button.and the [OK/SEL] button simultaneously for 3 seconds. The CBL will turn on for 30 seconds.

STEP 3

Press the first Device button. you want to store in the [ALL OFF] button and then the [POWER] button. Repeat this for other Device until you have stored all the desired power commands into the ALL OFF button.

STEP 4

Press the CH5 button to save the power commands you stored. The CBL button will blink twice to confirm the Device have been saved.

PROGRAMMING VOLUME CONTROL

By default, the VOL+, VOL- and MUTE keys operate through your TV. If you would like those keys to operate those functions on a different device, follow these steps.

STEP 1

Press the OK/SEL button and CBL button simultaneously for 3 seconds. The device LED will turn on for 30 seconds. The next step must be performed while the LED is on.

STEP 2

The VOL+ button. The device LED will blink.

STEP 3

Press the DEVICE button.corresponding to the device that you would like the volume and mute buttons to control. The device LED will blink twice to confirm the programming.

Note

If you wish to have the volume and mute keys operate your Cable Box, press the CBL button.

PROGRAMMING CHANNEL CONTROL

By default, the CH5, CH6 keys operate through your Cable Box. If you would like those keys to operate those functions on a different device, follow these steps

STEP1

Press the OK/SEL button and [CBL] button simultaneously for 3 seconds. The device LED will turn on for 30 seconds. The next step must be performed while the LED is on.

STEP 2

Press the VOL button. The device LED will blink.

STEP 3

Press TV button. The device LED will blink twice to confirm the programming.

MEMORY LOCK SYSTEM

This remote control is designed to retain programmed memory for 10 years — even after batteries are removed from the remote control. For additional information about your remote control, go to www.universalremote.com

Set up Code Tables

CBL

Manufacturer/Brand	Set- Up Code Number
SCIENTIFIC ATLANTA	003 251
PACE	001 003 204 206 217 002
MOTOROLA	001 206 253
ADB	254 255 315 259
Amino	219 260 249 256 257 261 235
ARRIS	192 216 140
AT&T	251
BELL FIBE	205 229
BT Vision	232 960
CHANNEL MASTER	006
CINCINNATI BELL	194 220
CISCO	003 005 007 002 251 316
COMCAST	195 002
CONFLUENT	196
Cox Digital Cable	223
DigitalMultimediaTechnology	222
DIGITAL STREAM	580
DIRECTV	238
Dish Network	122
Duoson	218
DVB(DigitalVideoBroadcasting)	193
Entone	221 155 258 213
EVOLUTION	189 215
Foxtel	228
HOMECAST	004
Horizon	225
Humax	231
Innovative Systems	262
Layer3	226
MINERVA	178

Manufacturer/Brand	Set Up Code Number
MOTOROLA DSR	148
MOXI	111
MYRIO	254 255
NAGRAVISION	201
NBOX	181
NOW TV	314
Optimum	236 237
Pico Digital	224
SAMSUNG	003
Sky	240 241
Spectrum	231
SUDDENLINK	579
TECHNICOLOR	365 002
THOMPSON	365 002
TRANSPARENTVIDEOSYSTEMS	193
Virgin Media	959
WEGENER	250
WINDSTREAM	212
ZeeVee	227

TV

Manufacturer/Brand	Set Up Code Number
ADMIRAL	072 081 160 161 096
AD NOTAM	672
ADVENT	147 224
AFFINITY	680
AIWA	238 141 145
AKAI	031 070 146 004 148 124 226 104 108 615
AKIO	103
ALARON	028
ALBATRON	253

AMARK	112 127
AMERICA ACTION	043
AMERICAN HIGH	236
AMPRO	073 167 245
ANAM	043 054 056 080 112 236
AOC	058 070 004 112 616
APEX	572
APEX DIGITAL	015 150 036 037 424
AQUAVISION	164 686
ASTAR	164
AUDIOVOX	076 103 043 035 224 228 078
AUVIO	689
Avera	761
AVION	223
AXESS	711
AXION	043
BAYSONIC	043
BELL&HOWELL	072
BENQ	600
BRADFORD	043
BROKSONIC	231 252 096 170
BYDESIGN	254
CAIRN	162
CANDLE	070 002 003 004
CANON	236
CAPEHART	058
CARVER	164
CELEBRITY	001
CETRONIC	043
CIELO	101
Ciil	732
CINERAL	103 120

Manufacturer/Brand	Set Up Code Number
CITIZEN	070 002 003 004 101 103 127
CLASSIC	043
COBY	640 641 671 004
CONCERTO	004
CONTEC	043 051
Continu-us	161 746 747
CORONADO	127
CRAIG	043 054 028 239
CROSLEY	164
CROWN	043 127
CURTIS MATHES	070 004 101 127 236 011 072 081 120 164
CXC	043
DAEWOO	076 103 112 004 127 016 043 044 125 120 235 249
DAYTRON	004 127
DELL	004 041 164 618
DENON	011
DIGITAL LIFESTYLE	163
DIGITAL PROJECTION	570
DIGITAL RESEARCH	258
DIGITRON	101
DISNEY	096
DREAMVISION	090
DUMONT	004 073
DURABRAND	168
DWIN	131 132 161
DYNASTY	043
DYNATECH	062 238
DYNEX	096
ELECTROBAND	001

ELECTROGRAPH	220
ELECTROHOME	024 076 127
ELEMENT	004 110 622 690
EMERSON	005 028 043 048 076 096 155 004 051 127 151 153 154 231 236 238 247 252 168 121 514
ENVISION	070
EPSON	087 590
ESA	031 168
Evervue	755
FISHER	007 057
FREEMOTION	662
FUJITSU	164 197 028 157 149 066 217
FUNAI	028 043 238 052 168
FUSION	004
FUTURETECH	043
GATEWAY	165 031
GE	070 073 130 144 160 161 004 008 009 034 056 074 091 155 232 233 236 239 245 081 120
GEM	031
GIBRALTER	004 073
GO VIDEO	239
GOLDSTAR	004 106 112 127 247 250
GPX	256 674
GRUNPY	028 043
H&B	046
HAIER	004 116 623 749
HALL MARK	004
HANNSPREE	099
HARLEY DAVIDSON	028
HARSPER	220

HARMAN KARDON	164
HARVARD	043
HISENSE	198 021 619 630 004 749
HITACHI	011 004 613 007 009 072 010 012 023 075

Manufacturer/Brand	Set Up Code Number
	127 158 236 238 587 614 749
HP	027 039 098
HQ	238 046
HUMAX	122
HYPERION	609
HYUNDAI	049 067
ILO	055 096
INFINITY	164
INFOCUS	215 225 046 532 595 726 733
INKEL	129
INSIGNIA	068 069 078 096 100 164 168 229 026 454 604 617
INSTANTREPLAY	236
INTEQ	073
JBL	164
JCB	001
JCL	236
JCPENNEY	004 008 024 030 065 070 101 127 160 156 234 236 239 247
JENSEN	013
JVC	038 001 034 083 195 236 242 159 227 581 668
KENWOOD	070 001 238
KLEGG	220
KLOSS	002 059
KONKA	026

KREISEN	202
KTV	070 043 127 154
LG	004 569 106 112 127 247 250 598 698 648 741
LLOYD	238
LODGENET	072
LOEWE	196 164 738
LOGIK	072
LUXMAN	004
LXI	007 015 052 081 160 164 238
MAGIN	239
MAGNAVOX	070 003 004 022 059 060 061 063 064 127 164 094 160 056 236 238 243 205 028 138 168 035 211 077 050 218 594
MAJESTIC	072
MARANTZ	164 070 236 243 182 584
MARTA	247
MATSUI	164
MATSUSHITA	080
MAXENT	165
MEGAPOWER	253
MEGATRON	004
MEI	236
MEMOREX	004 007 072 234 236 238 245 247 028 096
METZ	088
MGA	024 070 004 042 239
MIDLAND	073
MINERVA	088
MINTEK	077
MINUTZ	008
MITSUBISHI	109 024 042 004 040 146 028 232 255 081 200 450 550
MONIVISION	253

MOTOROLA	081
MTC	070 004 062 101 238 239
MULTITECH	238 043
NAD	015 025
NEC	070 130 134 040 056 007 019 024 004 182 140 575 717 758
NEXUS	620 078
NIKEI	043
NIKKO	103
NIKO	175

Manufacturer/Brand	Set Up Code Number
NORCENT	211
NORWOOD MICRO	079
NTC	103
NUVISION	084 567 667
OLEVIA	219 004 161 144 160
ONKING	043
onn.	898
ONWA	043
OPTIMUS	080
OPTOMA	029 032
OPTONICA	019 081
ORION	096 201 203 204 205 231 252 028
PANASONIC	080 164 190 034 056 234 236 244 230 248 524 624 607 664 801
PEERLESS-AV	723 763
PENTAX	236
PHILCO	070 003 004 024 056 059 060 063 064 127 164 236 238 243

PHILIPS	164 004 005 038 093 127 070 003 059 236 238 243 247 199 218 144 161 594 773
PILOT	247
PIONEER	023 025 135 176 004 018 070 183 191 208 214 182 660
PLANAR	728 742 787 788
POLAROID	015 024 031 046 086 092 097 224 228 006 110 026 118 119
PORTLAND	004 127 103
PRISM	034
PRIMA	147 164
PROSCAN	144 160 161 167 004
PROTON	004 058 127 171 173 193 163
PROTRON	102 213 004 115
PROVIEW	110
PROX	572
PYLE	257
PYLE HOME	661 662
QUASAR	034 056 234 236 244 606
RADIO SHACK	004 019 127 043 250
RCA	160 161 144 156 065 070 004 023 024 056 074 152 232 233 236 238 239 081 588 713
REALISTIC	007 019 236 238 239 247
REVOLUTION HD	220
RICO	241
RUNCO	072 073 130 179 180 181 182 216 194 697 696
SABIO	161
SAMPO	070 004 058 165
SAMSUNG	192 184 185 004 101 127 133 160 089 105 070 237 239 461 578 655
SANSEI	120

SANSUI	238 252 096 615 454 762
SANYO	007 053 057 082 020 239 750
SCEPTRE	036 699
SCOTCH	004
SCOTT	004 005 028 043 048 127 113
Sealoc	897
SEARS	004 007 015 028 030 057 082 094 127 160 238 247 052 164
SEIKI	690
SELECO	189
SEMIVOX	043
SEMP	015
SEURA	704 797
SHARP	251 004 684 081 014 019 028 022 127 236 496 692 735
SHERWOOD	129 128
SIGNATURE	072 238
Silo	001

Manufacturer/Brand	Set Up Code Number
Skyvue	744
SKYWORTH	164 895
SOLE	177 178
SONY	001 608 651 126 139 236 240 241 602
SOUNDESIGN	003 004 028 043 238
SOVA	004 169 174
SOYO	163
SPECTRICON	112
SPECTRONIQ	004
SQUAREVIEW	052
SSS	004 043

STARLITE	043
SUNBRITE	608 001 635 605 772
SUPERSCAN	168
SUPRE MACY	002
SUPREME	001
SV2000	168
SVA	046
SYLVANIA	070 003 052 059 060 063 064 127 160 164 044 056 236 238 243 168 121 593
SYMPHONIC	052 238 168
SYNTAX OLEVIA	219 004 161 144 160
TANDY	081 238
TATUNG	056 062
TCL	705 749
TEAC	238
TECHNICS	034 080 236 244
TECHNOL ACE	028
TECHVIEW	246
TECHWOOD	004
TEKNIKA	002 003 004 024 028 043 072 101 127 103 236 238 247 164
TELEFUNKEN	615
TELERENT	072
TERA	172
THOMPSON	166
TILEVISION	663
TNCI	073
TMK	004
TOSHIBA	015 101 045 030 007 040 062 142 137 703
TOTEVISION	127 239 247
TRUTECH	212
UNITECH	239

UNIVERSAL	008 009
UPSTAR	708
VENTURER	004 721
VIDEO CONCEPTS	146 238
VIDEOSONIC	239
VIDIKRON	188 164 182
VIDTECH	004
VIEWSONIC	210 720
VIORE	055 592 578
VISCO	209 110
VITO	004
VIZIO	004 031 724 603 625 675 682
WARDS	004 064 164 008 009 019 028 060 061 063 072 074 127 070 236 238 239
W Box Technologies	731
WESTINGHOUSE	076 036 221 222 001 690 101
WINBOOK	079
YAMAHA	004 070 238 206 207
YORK	004
YUPITERU	043
ZENITH	011 072 073 095 103 238 241 245 247 096
ZONDA	112

Documents / Resources

	URC UR2-211 Universal Remote Easy Clicker [pdf] User Guide Universal, Remote, Easy, Clicker, UR2-211
---	---

References

-  [URC Automation | Think Beyond Everyday](#)